


**9" Laminator**

**Item Number: 11008162**

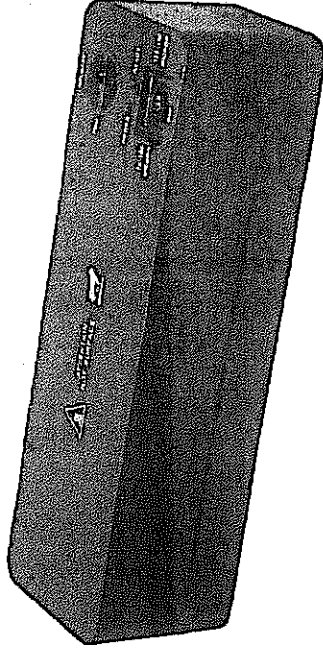

**Installation & User's Guide**

All brand names and trademarks are the property of their respective owners.

## Safety Precautions

Please notice following:

1. Read all instructions before using the laminator.
2. Use this appliance only on a flat and dry surface.
3. Do not use the laminator outside buildings and near by or in water.
4. Keep your hands away from hot parts of the appliance during operation.
5. Do not place or cover any object on top of the machine. This may cause fire.
6. This appliance is not intended for use by young children or infirm persons.
7. Always unplug the appliance when not in use.
8. Do not operate the appliance with a damaged cord or plug, or after appliance malfunctions, has been dropped or is damaged in any manner.
9. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
10. Do not use the appliance for other than intended use. This appliance is intended for household use only.
11. If the supply cord is damaged it must be replaced by the manufacturer or its service agent, or a similarly qualified person in order to avoid a hazard.
12. Laminators must not be used near or below curtains or other combustible materials. They should be attended whilst in use.
13. Keep your hands away from hot parts of the appliance during operation.
14. The socket-outlet shall be installed near the equipment and shall be easily accessible.

## How To Use

### Preparation

1. Open the laminator cover on the back of the appliance.
2. Set the knob top of housing to "FWD" position.
3. Make sure that front of unit is free of any objects.
4. Plug into nearest outlet.

### Laminating

The appliance has 2 different temperature settings.

1. When laminating with films of 75-100 micron, set the switch to 75-100 MICRON by pressing the switch to left position (level I).  
When laminating with films of 125-150 micron, set the switch to 125-150 MICRON by pressing the switch to right position (level II).
2. The red LED (Power on) will light up. Preheating starts now.
3. When laminating on level I, unit will preheat for approximately 3 minutes. Level


will preheat approximately 4 minutes. When ready to use green light ( Ready ) will glow.

4. Open laminator sleeve and insert item to be laminated between the plastic sheets. Leave a 3 mm border to ensure full coverage of item.

5. When unit is ready, gently insert laminate sleeve. Hold straight.

ATTENTION: Insert to be laminated item between the sheets, only bonded edge first, into rear of laminator until sleeve engages with automatic feed!

6. When laminating sleeve is jammed, Please turn the knob top of housing from "FWD" to "RELEASE" position, pull the jammed.

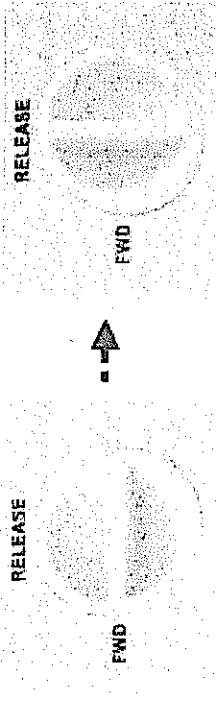

7. Laminate will process through unit and exit at front of appliance. Do not try to force laminated sleeve into unit or try to pull from front.

8. Turn the laminator off after use by pressing the switch to O position. Let the unit cool down.

Attention: Please choose the correct temperature of the unit according to pouches thickness. In case you use the high temperature for thick pouches first, let the machine cool down for 3 Minutes to get a good laminating result for the lower temperature (for using the thinner pouches 75-100 Micron).

**Other Important Information**

1. Pay attention to the reference printed on the laminator.
2. The power will automatically cut-off when the temperature is too high.
3. Maximum allowable thickness of document plus film: 0.7 mm.
4. Maximum allowable laminating width: 9-7/16inch(240mm), maximum thickness of film: 6mil (150 micron).
5. Never use empty pouches.
6. Do not use single-sided or rolled up films.
7. This model is installed with a release function. When laminating sleeve is jammed, Please turn the knob top of housing to "release" position, pull the jammed, avoid the sleeve to be jammed in the equipment.

**Care And Cleaning**

1. Always unplug the appliance before cleaning.
2. Let the laminator cool down.
3. Wipe clean with a soft cloth.

4. Never clean with scouring powders or hand implements.

**Specifications**

Power Supply	AC120V
Power Consumption	200 Watt
Maximum Laminating Width	9-7/16inch(240mm)
Thickness Of Film	Level I : 75 to 100 micron (3 to 4 MIL)
	Level II : 125 to 150 micron (5 to 6 MIL)
Preheating Time	Level I : Approx. 3 minutes
	Level II : Approx. 4 minutes

## Customer Service

For information regarding the return or exchange of this item within 14 days of purchase, please visit your Inkstop store location or go to [www.inkstop.net](http://www.inkstop.net) to read the instructions regarding customer service returns procedures. Click on the Satisfaction Guaranteed icon on the website.

For technical support in regards to operation and installation of this item please call the toll free number below to obtain assistance. A customer service representative will assist you and provide operating information on the product.

Please have the following information available when you contact technical support:

- Your Name and Address
- Date of Purchase
- Model Number
- Serial Number
- Store Name and Address
- Type of problem with the unit

To contact the technical support facility, please call 508-435-4830 or 800-639-3803.

Email Support: [techsupport@fourstari.com](mailto:techsupport@fourstari.com)

## Warranty

### 90 Days Limited Warranty

This product is warranted to be free from defects in material and workmanship for a period of 90 days. Warranty obligations are limited to replacement or repair of defective parts and components, at the option of the manufacturer. If the original model is no longer available, we will substitute with a model of equal or better value than the original item. The warranty of this product is null and void if the product is subjected to negligence, abuse, modification, misuse, accident or if the customer uses the product for a function it was not intended for. This warranty is only valid for the original purchaser of this product and will not be honored if the product is resold. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

The manufacturer will not be liable for incidental or consequential damages caused by the use of this product. The manufacturer will not be liable for any costs such as lost profits or revenues, cost of temporary replacements, loss of data, loss of equipment or use of equipment or any claims by third parties.

After 14 days from the purchase date of this product, please call the phone number listed below to obtain service. A customer service representative will give you a return authorization (RA number) allowing you to ship the product to the service center. The purchaser must have a copy of the original receipt for proof of purchase within 90 days. The purchaser of this product is responsible for any shipping charges to the repair facility. The manufacturer service center will repair or replace the unit in question and send it back to the purchaser.

In order to contact the service facility, please call 508-435-4830 or 800-639-3803.

The address for this facility is:

Fourstar Group  
26840 Fargo Ave.  
Suite C  
Bedford Heights, OH 44146

E-mail Support: [techsupport@fourstari.com](mailto:techsupport@fourstari.com)



©fourstargroup