

See Thru Wooden Clock



User's Guide

Item Number: 11019725

All brand names and trademarks are the property of their respective owners

Contents

Overview / Quick Start Guide	3
Package Contents	3
Diagram of the Clock.....	4
Operating Instructions	5
Specifications	6
Important Safety Instructions.....	6
Service Procedure.....	7
Warranty.....	8



Overview

- The time display on this See Thru Wooden Alarm Clock appears on the face of the clock mysteriously.
- The clock operates like a normal LED alarm clock and you can wake to the alarm buzzer or press the snooze setting to sleep for 9 more minutes before the alarm will wake you again.

Quick Start Steps

1. Carefully unpack the alarm clock and unwrap the cord and plug it into an AC outlet.
2. You can set the time by pressing and holding in the Time Set button while you adjust the correct Hour and Minute by pressing the buttons labeled as such on the back of the unit.

Package Contents

See Thru Wooden Alarm Clock		User Guide	
-----------------------------	---	------------	---

See Thru Wooden Clock

FRONT VIEW




2

1

1	LED Display
2	AM/PM Indicator

BACK VIEW

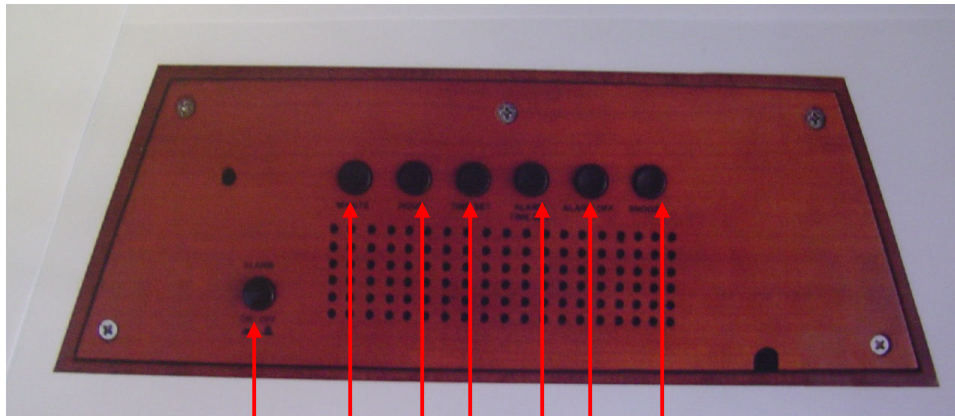

1

2

3

4

5

6

7

1	Alarm ON/OFF Button
2	Minute Set Button
3	Hour Set Button
4	Time Set Button
5	Alarm Time Set Button
6	Alarm Turn Off Button
7	Snooze Button

Operating Instructions

1. **SETTING THE TIME** --- Press and hold down the TIME SET button and then press the HOUR button at the same time to set the hour.
 2. Press and hold down the TIME SET button and then press the MINUTE button at the same time to set the minutes.
-
1. **SETTING THE ALARM**---Press the ALARM TIME SET button and the time displayed is the hour and minute that the alarm is set for.
 2. Press and hold down the ALARM TIME SET button and then press the HOUR button at the same time in order to set the desired wake up hour.
 3. Press and hold down the ALARM TIME SET button and then press the MINUTE button at the same time in order to set the desired wake up minutes.
 4. To turn on the alarm, press the ALARM ON/OFF button and leave it in the “IN” position to set the alarm to Sound at the set time. Press the ALARM ON/OFF button and leave it in the “OUT” position to turn the alarm off.
-
1. **SHUTTING OFF THE ALARM FUNCTION**---When you awake to the alarm, lightly press the SNOOZE button and the alarm will stop. The alarm will re-activate in 9 minutes. The SNOOZE Function can be repeated for up to 1 hour and 59 minutes.
 2. By pressing the ALARM OFF button, the alarm will stop and will be re-set to go off at the same time the following day.
 3. By pressing the ALARM ON/OFF button, the alarm will stop and not be re-activated until you depress this button again.

Specifications

Power Source:	AC 120V-60Hz
Power Consumption	5-Watts
Power Output	250 mW

Important Safety Instructions

- To reduce the risk of electric shock or product damage, do not attempt to remove screws (of product cover).
- Do not use this unit near the presence of water. Do not expose this unit to rain, moisture, water drip or splash. Also ensure that no container with liquids, such as vases, be placed near or on the unit.
- Do not operate or install near any heat sources such as radiators, heat registers, stoves, or similar unit.
- Do not open product cover and do not attempt to repair this product by yourself. Please refer to qualified service personnel.
- Please insert the AC plug and secure it firmly to avoid any electrostatic discharge.
- Ensure all cords are connected, safely and correctly.
- Avoid Exposure to direct sunlight, Clean with a dry, soft cloth only.
- Do not allow metallic objects to come into contact with the AC/DC plug when the machine is in operation.
- Avoid placement near hot equipment such as amplifiers, to prevent the product from overheating.
- The contents of this operation manual may be updated from time to time to incorporate updated functionalities.
- Lightning and Power Surge Protection---Unplug the unit from the wall outlet during a lightning storm. This will prevent damage to the unit.
- The item is not a toy. Keep out of the reach of children.
- The clock is intended for home use and is not for use in a commercial setting.

Customer Service

This product is backed by the exclusive firstSTREET Guarantee. Try this product for 90 days. If for any reason you are not completely satisfied with your purchase, simply return the product within 90 days for a full refund of your purchase price, less shipping and handling or a merchandise credit to firstSTREET.

To find out more information about the firstSTREET 90-day home trial, or for answers to any of your questions you may contact the firstSTREET customer service department Monday through Friday from 9AM to 8PM (Eastern Time) at **(800) 958-8324**.

For technical support and answers to questions regarding the operation and installation of this item you may contact the manufacturer's technical support team by calling the toll free number below to obtain help. A customer service representative will assist you.

Please have the following information available when you call the service center:

- Your Name and Address
- Date of Purchase
- Model Number
- Serial Number
- Store Name and Address
- Type of problem with the unit

To contact technical support, please call **508-435-4830** or 800-639-3803.

Email Support: techsupport@fourstari.com

Manufacturer's Warranty

90 Day Limited Warranty

This product is warranted to be free from defects in material and workmanship for a period of 90 days. Warranty obligations are limited to replacement or repair of defective parts and components, at the option of the manufacturer. The warranty of this product is null and void if the product is subjected to negligence, abuse, modification, misuse, accident or if the customer uses the product for a function it was not intended for. This warranty is only valid for the original purchaser of this product and will not be honored if the product is resold. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

The manufacturer will not be liable for incidental or consequential damages caused by the use of this product. The manufacturer will not be liable for any costs such as lost profits or revenues, cost of temporary replacements, loss of data, loss of equipment or use of equipment or any claims by third parties.

In order to contact the manufacturer's technical support dept, please call **508-435-4830** or 800-639-3803.

E-mail Support: techsupport@fourstari.com



