

SIZE: 105 x 148.5 MM

VIBRATING MASSAGER

Operating instructions:

1. Remove battery cover on the underside of the massager and insert 2 "AA" batteries (not included) .



WARNING:

Do not mix old and new batteries.
Do not mix alkaline,
standard (carbon-zinc) or rechargeable
(nickel cadmium) batteries.

2. Close the battery cover until the cover "clicks" close.
3. Press the thumb to turn the massager ON or OFF.

Function:

- Invigorating massage action with or without the motor turned on..
- Battery powered-use 2 X "AA" batteries (not included).
- Just push nail of the thumb to turn on/off this device.
- Great for back, neck , shoulders, legs and arms.

Specification:

Battery : 2 X "AA" batteries (not included)
Material: ABS plastic

Note: *This is not a toy, keep out of reach of children.*

CUSTOMER	ITEM NO.	ITEM DESCRIPTION	A/W NO.	MDSER	DESIGNER	DATE
						2008 08/28
fs fourstargroup	Inkstop	12217092	VOLA MASSAGER	0808178	Jacky	Miumiu

This proprietary artwork and concepts are copyright designs of Fourstar Group Inc. 2007. No part of this artwork may be reproduced or transmitted in any form without express written consent. © Fourstar Group Inc. All Rights Reserved.