

Dome Radio with Cassette



User's Guide

Item Number: 11009727

All brand names and trademarks are the property of their respective owners

Contents

Overview	3
Quick Start Steps.....	3
Package Contents	3
Diagram of the Dome Radio with Cassette	4
Operation Instructions.....	5
Specifications	5
Important Safety Instructions.....	6
Service Procedure.....	7
Warranty.....	8

Overview

- Enjoy rich deep sound from this nostalgic designed AM/FM Cassette Radio. Tune in your favorite radio stations and listen to your cassette tape collection.
- The easy loading cassette tape player has an auto stop feature built-in.
- Extend the FM antenna cable to receive those hard to locate radio stations.
- The attractive cherry color wood enclosure looks great in any room setting.

Quick Start Steps

1. Carefully unpack the radio and extend the AC power cord. Plug the power cord into an AC wall outlet.
2. Turn the radio on by using the Volume control On/Off switch.
3. Select AM or FM radio band stations with the band selection switch.
4. Tune in your favorite station by rotating the tuning dial.
5. Insert a Cassette tape all the way into the side load tape port and the tape will begin to play.
6. To fast forward the tape, press the FF button located below the tape half way in.
7. To eject the tape, press the same button all the way in and the tape will pop out.


Package Contents

AM/FM Cassette Radio

User Guide


Dome Radio with Cassette

FRONT VIEW

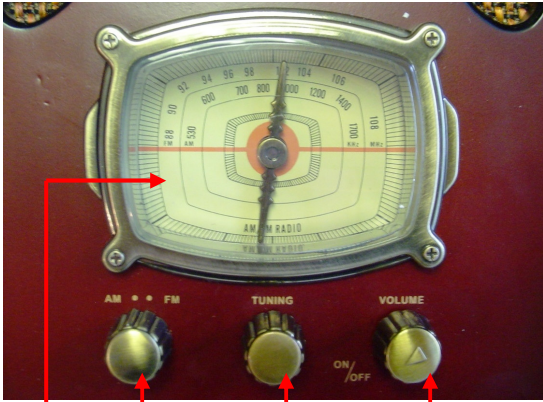

1 2 3 4


BACK VIEW

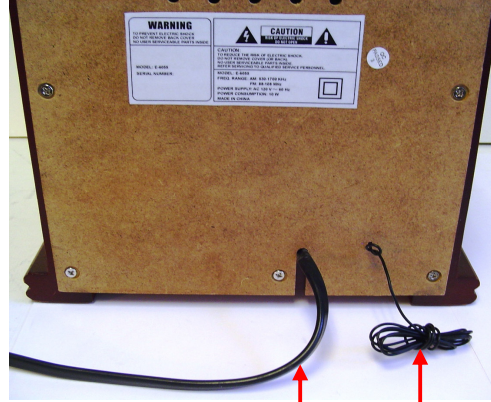

5 6

1	AM/FM Radio Band Selector
2	Radio Tuning Dial
3	Volume ON/OFF control
4	Tuning Dial
5	AC Power Cord
6	FM Antenna Cable

SIDE VIEW

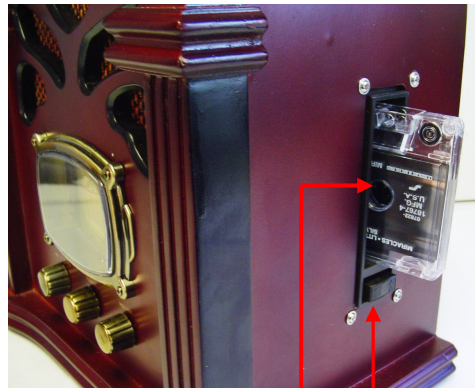

1 2

1	Cassette Tape Slot
2	Fast Forward and Eject Button

Operating Instructions

1. Connect the AC power cord into a standard AC wall outlet.
2. To turn the radio on, Turn the Volume ON/OFF switch clockwise to the right. The Radio Dial back lighting will come on.
3. Set the radio band selection switch to AM or FM radio.
4. Extend the FM antenna cable to it's full length for best FM reception.
5. Rotate the tuning dial to locate your favorite radio station.
6. You may reposition the FM antenna cable to the right or left in order to pick up hard to receive stations.
7. The AM antenna is located inside the radio. You may change the position of the radio to help receive distant AM broadcast stations.
8. Cassette Tape ---insert a cassette tape with the tape facing upwards into the slot on the side of the radio. Push the tape all the way into the slot and it will begin to play.
9. To Fast Forward the tape, press the button located below the tape half way in and the capstan will advance the tape until you press the button again to disengage the tape drive.
10. To EJECT the cassette tape from the tape slot, press the button located below the tape all the way in and the tape will then eject from the player,
11. Once the tape is ejected, the radio function will resume.

Specifications

Power Source:	AC 120V-60Hz
Frequency Range	FM-88-108Mhz AM-530-1710Khz
Power Output	1.5 Watts

Important Safety Instructions

- To reduce the risk of electric shock or product damage, do not attempt to remove screws (of product cover).
- Do not use this unit near the presence of water. Do not expose this unit to rain, moisture, water drip or splash. Also ensure that no container with liquids, such as vases, be placed near or on the unit.
- Do not operate or install near any heat sources such as radiators, heat registers, stoves, or similar unit.
- Do not open product cover and do not attempt to repair this product by yourself. Please refer to qualified service personnel.
- Please insert the AC plug and secure it firmly to avoid any electrostatic discharge.
- Ensure all cords are connected, safely and correctly.
- Avoid Exposure to direct sunlight, Clean with a dry, soft cloth only.
- Do not allow metallic objects to come into contact with the AC/DC plug when the machine is in operation.
- Avoid placement near hot equipment such as amplifiers, to prevent the product from overheating.
- The contents of this operation manual may be updated from time to time to incorporate updated functionalities.
- Lighting and Power Surge Protection---Unplug the unit from the wall outlet during a lighting storm. This will prevent damage to the unit.
- The item is not a toy. Keep out of the reach of children.
- Do not place the radio in close proximity to other magnetized objects such as tapes, CD's televisions, or speakers as these may cause disturbance to the radio station reception.

Customer Service

This product is backed by the exclusive firstSTREET Guarantee. Try this product for 90 days. If for any reason you are not completely satisfied with your purchase, simply return the product within 90 days for a full refund of your purchase price, less shipping and handling or a merchandise credit to firstSTREET.

To find out more information about the firstSTREET 90-day home trial, or for answers to any of your questions you may contact the firstSTREET customer service department Monday through Friday from 9AM to 8PM (Eastern Time) at **(800) 958-8324**.

For technical support and answers to questions regarding the operation and installation of this item you may contact the manufacturer's technical support team by calling the toll free number below to obtain help. A customer service representative will assist you.

Please have the following information available when you call the service center:

- Your Name and Address
- Date of Purchase
- Model Number
- Serial Number
- Store Name and Address
- Type of problem with the unit

To contact technical support, please call **508-435-4830** or 800-639-3803.

Email Support: techsupport@fourstari.com

Manufacturer's Warranty

90 Day Limited Warranty

This product is warranted to be free from defects in material and workmanship for a period of 90 days. Warranty obligations are limited to replacement or repair of defective parts and components, at the option of the manufacturer. The warranty of this product is null and void if the product is subjected to negligence, abuse, modification, misuse, accident or if the customer uses the product for a function it was not intended for. This warranty is only valid for the original purchaser of this product and will not be honored if the product is resold. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

The manufacturer will not be liable for incidental or consequential damages caused by the use of this product. The manufacturer will not be liable for any costs such as lost profits or revenues, cost of temporary replacements, loss of data, loss of equipment or use of equipment or any claims by third parties.

In order to contact the manufacturer's technical support dept, please call **508-435-4830** or 800-639-3803.

E-mail Support: techsupport@fourstari.com



