



**Vuescape®**

## **9 " Digital Photo Frame**

**Item Number: 61000115**



## **Installation & User's Guide**

**All brand names and trademarks are the property of their respective owners**

## **FCC Norm**

### **FCC**

This equipment has been tested and complies with limits for Class B digital devices pursuant to Part 15 of Federal Communications Commission (FCC) rules.

### **FCC Compliance Statement**

These limits are designed to provide reasonable protection against frequency interference in residential installations. This equipment generates, and radiates radio frequency energy, and if not installed properly or used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in television reception, which can be determined by turning the equipment on and off. Interference may be corrected by one or more of the following measures:

- **Reorient or relocate the receiving antenna**
- **Increase the separation between the equipment and the receiver**
- **Plug the equipment into an outlet on a circuit different from that to which the receiver is connected.**



### **CAUTION!**

The Federal Communications Commission warns the user that changes or modifications to the unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

# **Contents**

<b>Precautions.....</b>	<b>4</b>
<b>Overview .....</b>	<b>5</b>
<b>Quick Start Guide .....</b>	<b>5</b>
<b>Easel Stand to the Digital Photo Frame.....</b>	<b>6</b>
<b>Package Contents .....</b>	<b>7</b>
<b>9” Digital Photo Frame.....</b>	<b>7</b>
<b>Installation and Setup of Accessories.....</b>	<b>8</b>
<b>Menu Control Buttons.....</b>	<b>9</b>
<b>Remote Control Operation .....</b>	<b>10</b>
<b>Changing the Battery in the Remote Control.....</b>	<b>10</b>
<b>On Screen Display (OSD) Main Menu.....</b>	<b>11-12</b>
<b>Specifications .....</b>	<b>13</b>
<b>Troubleshooting .....</b>	<b>14</b>
<b>Maintenance .....</b>	<b>15</b>
<b>Service Procedure.....</b>	<b>16</b>
<b>Warranty.....</b>	<b>17</b>

## Precautions

1. Read all of these instructions and save this manual for later use.
2. Follow all warnings and instructions on the product.
3. Do not insert sharp objects or spill liquid into the digital photo frame through the cabinet slots; this may cause accidental fire, electric shock or failure.
4. Unplug the unit when not in use for an extended period of time.
5. Unplug the unit from power outlet before cleaning.
6. Do not attempt to service this product yourself, as opening or removing the cover may expose you to potential electric shock. Only a qualified technician should service this product.
7. Do not apply pressure to the screen, the LCD screen is very delicate.
8. Keep the digital photo frame away from extreme heat, cold or humid places.
9. Do not place directly under sunlight, dusty surroundings or near equipment which may generate strong magnetic fields.
10. Do not place any object on the power cord.



## Overview

- The 9” Digital Photo Frame enables you to view digital photos, videos and play music files from different types of memory cards simply and quickly. There’s no need to use a computer. You can enjoy your photos anytime and anywhere. It’s very convenient and quick.
- The Digital Photo Frame does not require a direct connection to a computer. The built-in card reader can read a wide assortment of the most popular memory cards.
- The Digital Photo frame supports CF, SD, MMC, MS and MS Pro memory cards via the built-in card reader, and camera via the USB port. (NOTE: Not all digital cameras will support the USB input function, please refer to the owners manual of your digital camera)
- Automatic slideshow with multiple transition effects and adjustable display time
- Plays slideshow.
- Plays MP3 music.
- Plays MPEG1, MPEG2 and MPEG4 files stored on supported memory cards or external USB devices.

## Quick Start Guide

1. Insert your CF, SD, MMC, MS and MS Pro memory card found in your digital camera into the card slot on the side of the Digital Photo Frame. The Digital Photo Frame will initialize and display your media in a slide show format.
2. Plug the DC power adapter cable into the DC + 12V input and plug the AC end of the adapter into a normal AC outlet.

## Easel Stand to the Digital Photo Frame

1. Clear a flat clean area to set your photo frame down upon in order to attach the easel stand to the back of the frame. Make sure there are no sharp objects in the area that can make contact with the LCD screen of the photo frame that may cause damage to the screen.

Stand is attached at the back of the unit. Simply pull the stand up to desired angle.



2. The length can be adjusted by pushing the lock and then pull the stand.



3. You may set the Digital Photo Frame in a vertical or horizontal position as shown below.










Horizontal Position

 


Vertical Position

## Package Contents

9" Digital Photo Frame			
Plastic Frame (1 black and 1 wood tone frame)		Power Adapter	
User's Manual		Remote	
USB Cable		AV Cable	

## 9" Digital Photo Frame

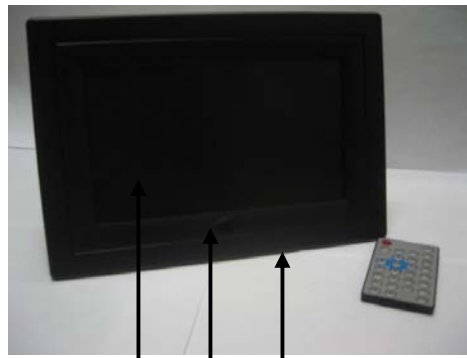

① ② ③

①	LCD Screen
②	Remote Control Receiver
③	Plastic Frame

## Instillation and Setup of Accessories

1. Carefully position your Digital Photo Frame so that you can see all of the connection ports on the side of the frame.
2. Plug the DC Power Adapter Cable into the DC +12V input, and plug the AC end of the adapter into a normal AC outlet.



3. The photo frame has built-in speakers but you may listen to the audio program by plugging in the Earphone Cable to the Earphone outlet.





- To view your pictures on TV you can plug the AV Cable into the AV port and connect to the proper input on your TV or DVD player.

 


- In order to view pictures, video and listen to music: insert the CF, SD, MMC, MS and MS Pro Memory Cards into the correct slot on the side panel of the photo frame. You may also connect a camera directly through a USB cable.

(NOTE: Not all digital cameras will support the USB input function, please refer to the owners manual of your digital camera)



## Menu Control Buttons

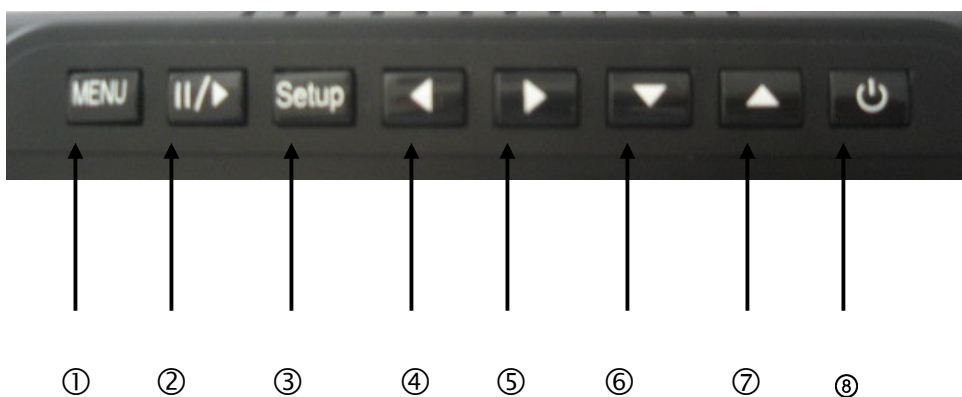

No.	Symbol	Function
①	<b>MENU</b>	<b>Goes to the main OSD Menu</b>
②	<b>II/&gt;</b>	<b>Pause and play the media</b>

③	<b>SETUP</b>	<b>Goes to settings mode</b>
④	<b>←</b>	<b>Moves the cursor Left</b>
⑤	<b>→</b>	<b>Moves the cursor Right</b>
⑥	<b>↓</b>	<b>Moves the cursor Down</b>
⑦	<b>↑</b>	<b>Moves the cursor Up</b>
⑧	<b>⏻</b>	<b>Turn the unit on or off</b>

## Remote Control Operation

1. **POWER:** Turn the unit on or off
2. **MUTE:** Mutes the volume
3. **PHOTO:** Goes to the Photo Setup and displays the photo files
4. **MUSIC:** Goes to the Music Setup and displays the music files
5. **MOVIE:** Goes to the MOVIE Setup and displays the video files
6. **Card:** Memory Card selection
7. **▲▼◀▶:** Move the cursor up/down/left/right when making a selection and rotate the picture.
8. **SLIDESHOW:** Activate the slide show



9. **SLIDE INTERVAL:** Set picture changing time
10. **ENTER:** Access the function selected
11. **OSD:** Show the file format and track# under PHOTO and MOVIE mode.
12. **MENU:** Goes to the main OSD Menu
13. **ZOOM:** Zooms in on the picture x 3 (photos only)
14. **MODE:** Select display mode of Auto Fit and Pan Scan
15. **◀◀▶▶:** Goes to the previous / next file
16. **PLAY/PAUSE:** Pause and play the media
17. **STOP:**
18. **VOL+ / VOL-:** Increase / decrease the volume
19. **STEP:** Goes to settings mode
20. **◀◀▶▶:** Rewinds and forwards the movie
21. **REPEAT:**


## Changing the Battery in the Remote Control

Hold the remote control, squeeze the button to the right, and pull the battery tray out. Then re-place the battery (model CR2025) inside the tray with the "+" polarity facing up, and then push the tray back to its place.



## On Screen Display (OSD) Main Menu



1. Turn on the Digital Photo Frame and press the “MENU” button on the remote or on the Digital Photo Frame to display the OSD menu.
2. Select the desired function menu, by pressing  button and press “ENTER”.

## MY PHOTO

 
<p>Provides a list of photos that you have saved on the card and allows you to see the photos.</p>	
--	--

## MY MUSIC

<p>Provides a list of song(s) that you have saved on the card and plays the song.</p>	
---	--


## MY MOVIE

Allows you to select the movie/video clip(s) that you have saved on the card.

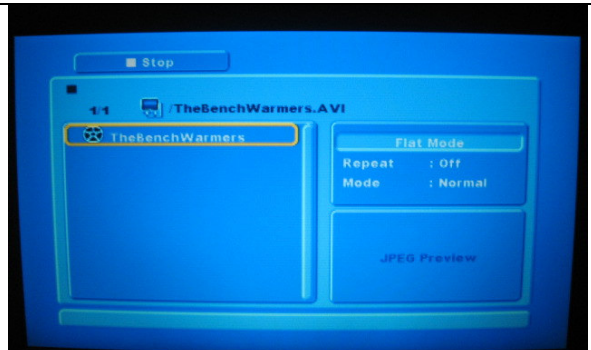

## MY SETTING

 Allows you to select the slide mode, time interval, transition, brightness, contrast and color.

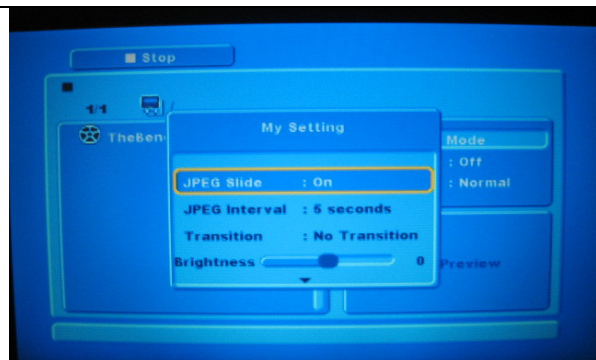

# Specifications

LCD Panel	Type Viewing Angle Contrast Ratio Brightness Response Time Resolution Aspect Ratio	9" TFT LCD Display H: 120° , V: 120 250 : 1 400 cd/m2 30ms 640 x 234 16 : 9
Supported Formats	Type	MP3, JPEG, MPEG1, MPEG 2 and MPEG4
Built-in Card Reader	Type	CF, SD, MMC, MS and MS Pro memory card
Media Audio Photo Video	Functions File Format File Format File Format	Video Play – A/V Output MP3 JPEG MPEG1, MPEG2 and MPEG4
Built-in Speakers		2 x speakers 1Watt
Power	Voltage Current Consumption	100-240V DC 12V 2A Active < 9 Watt Max
Slideshow		
Pictures	File Format	JPEG
Operating Condition	Temperature Air Humidity	15°C~50°C 20% ~ 80% R.H.
Dimensions	Physical	10.8" (W) 7.5" (H) 1.4" (D)
Net Weight		1.32 lbs
Regulation (Certifications)		FCC
Accessories		UL Adaptor, Remote Control, USB Cable, AV Cable and User's Manual.

## **Troubleshooting (FAQ)**

**1. Q: What type of file formats does the Digital Photo Frame support?**

**A:** Support JPEG, MP3, MPEG 1, MPEG 2 and MPEG 4

**2. Q: Why are some of my photos not able to be displayed on the viewer?**

**A:** Most digital cameras take and save the photos in a JPEG format which allows the digital photo frame to display the photos. However, some images (for example web page images, scanned images, or RAW format photos taken by special cameras) may not be supported.

**3. Q: There is no picture on the screen?**

**A:** Make sure the flash card is installed properly in the flash card reader.  
Verify the power adapter is connected properly to the power outlet and DC input on the digital picture frame.

Turn off the Digital Photo Frame and reinsert the memory card properly.

**4. Q: Why do my pictures look stretched or wider?**

**A:** This digital photo frame is designed with the latest 16:9 widescreen viewing aspect ratio. You may have to change the aspect ratio of your pictures from standard 4:3 aspect ratio format by changing the picture(s) resolution to 1024 x 768 (if applicable on your camera settings or on Photo software) and that will resolve your issue.

## **Maintenance**

To clean your digital photo frame, please refer to the instructions below:

**NOTE: To prevent electrical shock, do not open the Digital Photo Frame casing. Leave repair of the frame to qualified personnel, please see the tech support information in the warranty.**

### **1. Unplug the power**

Unplug the Digital Photo Frame power adapter from the AC socket before cleaning the monitor.

### **2. Check the cover**

Check to see if the frame and accessories are damaged, broken, or strained. If so, please consult the warranty card for Tech Support information.

### **3. Clean**

Never spray or pour any liquid directly onto the screen or frame. Avoid allowing any water or liquid from entering the Digital Photo Frame or accessories.

### **4. Cleaner**

Use water or non-ammonia/non-alcohol based glass cleaner. Do not use harsh or abrasive cleaners such as ketene (such as acetone), ethanol, toluene, acetic acid, methane, chloride, or other detergents to clean the digital photo frame , these chemicals can damage the LCD screen or the frame.

### **5. Screen**

To clean your LCD screen or case, use water or a mild cleaner, as listed above. Moisten a soft, clean cloth or if possible, use a special screen cleaner sheet or a solution suitable for static electricity application. Using any cleaner other than water or a mild cleaner may damage your digital photo frame and will not be covered under the warranty.

### **6. Storage of Unit**

If the Digital Photo Frame is not in use for a long time, please unplug it and store it in its original box in order to avoid any damage.



## 7. Disclaimer

Any damage resulting from use of any cleaner that is not mentioned above is not covered under the terms of the warranty on this product.

## Service Procedure

For technical support after the first 14 days of purchase, please call the toll free number below to obtain service. A customer service representative will assist you and provide a return authorization number (RA number) if needed allowing you to ship your product to the service center.

**DO NOT RETURN THIS PRODUCT TO THE STORE. PLEASE CONTACT THE TOLL FREE NUMBER LISTED BELOW**

Please have the following information available when you call the service center:

- Your Name and Address
- Date of Purchase
- Model Number
- Serial Number
- Store Name and Address
- Store Location Number
- Type of problem with the Unit

After receipt of the RA number:

- Send the complete unit, including power cord and adapter in the original carton to the address below.
- Include a copy of the original receipt for proof of purchase (within 90 days).
- Write the RA number on the outside of the package. Packages without RA numbers will not be accepted.
- The Digital Photo Frame is fragile. Use extreme care when handling and packaging the unit.
- The purchaser is responsible for any shipping charges to the repair facility and assumes all risk.
- The service center will repair or replace the unit and send it back to the purchaser within 10 working

days from receipt of the unit.

To contact the service facility, please call **508-435-4830** or 800-639-3803. The address for this facility is:

Fourstar Group  
26840 Fargo Ave. Unit C  
Bedford Heights, OH 44146

Email Support: [techsupport@fourstari.com](mailto:techsupport@fourstari.com)

## **Warranty**

### **90 Days Limited Warranty**

This product is warranted to be free from defects in material and workmanship for a period of 90 days. Warranty obligations are limited to replacement or repair of defective parts and components, at the option of the manufacturer. The warranty of this product is null and void if the product is subjected to negligence, abuse, modification, misuse, accident or if the customer uses the product for a function it was not intended for. This warranty is only valid for the original purchaser of this product and will not be honored if the product is resold. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

The manufacturer will not be liable for incidental or consequential damages caused by the use of this product. The manufacturer will not be liable for any costs such as lost profits or revenues, cost of temporary replacements, loss of data, loss of equipment or use of equipment or any claims by third parties.

After 14 days from purchasing the product, please call the phone number mentioned below to obtain service. **DO NOT RETURN THIS PRODUCT TO THE STORE.** A customer representative will give you a return authorization (RA number) allowing you to ship the product to the service center. The purchaser must have a copy of the original receipt for proof of purchase within 90 days. The purchaser of this product is responsible for any shipping charges to the repair facility. The manufacturer service center will repair or replace the unit in question and send it back to the purchaser within 10 working days of receipt of the unit.

In order to contact the service facility, please call **508-435-4830** or 800-639-3803.

The address for this facility is:

Fourstar Group  
26840 Fargo Ave. Unit C  
Bedford Heights, OH 44146

E-mail Support: [techsupport@fourstari.com](mailto:techsupport@fourstari.com)

