

Vuescape

iPod® Docking AM/FM Stereo Clock Radio with Alarm Item Number: 62904124



Installation & User's Guide

All brand names and trademarks are the property of their respective owners.



READ ALL INSTRUCTIONS BEFORE USE.

Always follow basic safety precautions when using electrical products, especially when children are present.

 WARNING-- To reduce the risk of fire, electric shock, or serious personal injury:

- Keep the product out of the reach of children and pets. This product is not intended for use by children. Extra caution is necessary when using any electrical product near children.
- Always ensure the product is unplugged from the electrical outlet before relocating or cleaning it.
- Keep the power cord and product away from heated surfaces.
- Do not use the product near water or other liquids.
- Do not place or drop the product into water or other liquids. If the product falls into water, immediately unplug it from the electrical outlet; do not touch or reach into the water.
- To disconnect the product, pull directly on the plug; do not pull on the power cord.
- Do not put any stress on the power cord where it connects to the product as the power cord could fray and break.
- Do not plug/unplug the product into/from the electrical outlet with a wet hand.
- Do not operate the product if it has a damaged or cut power cord or adapter, if wires are exposed, if it malfunctions, if it is dropped or damaged, or if it is dropped in or exposed to water. This product has no user-serviceable parts. Do not attempt to examine or repair this product yourself. Only qualified service personnel should perform any servicing; take the product to the electronics repair shop of your choice for inspection and repair.

CAUTION

To reduce the risk of personal injury or product/property damage:

- This product is intended for indoor, non-industrial, non-commercial use; do not use the product outdoors.
- Do not mount this product on a wall or on a ceiling.

Overview

Thank you for purchasing a Vuescape iPod® clock radio product!

Your iPod® will now be able to be enjoyed by you and your friends by listening to your music through our speaker system.

Your music is no longer confined to being heard through earbuds.

Enjoy your stereo clock radio for iPod® play, charge, and wake/sleep to your iPod alarm & EQ music functions!

 


Contents

- iPod Clock Radio
- Remote Control (2 AAA batteries included)
- AM Ant
- **Audio Connection Cable**
- AC Power Adapter
- 9 iPod Dock Inserts:
iPod Nano, iPod Mini, iPod Nano 2, iPod 20GB, iPod 40GB, iPod Photo 20GB & 30GB, iPod Photo 40GB & 60GB, iPod Video 30GB, iPod Video 60GB(80GB)

Buttons and Functions

Top of Unit:

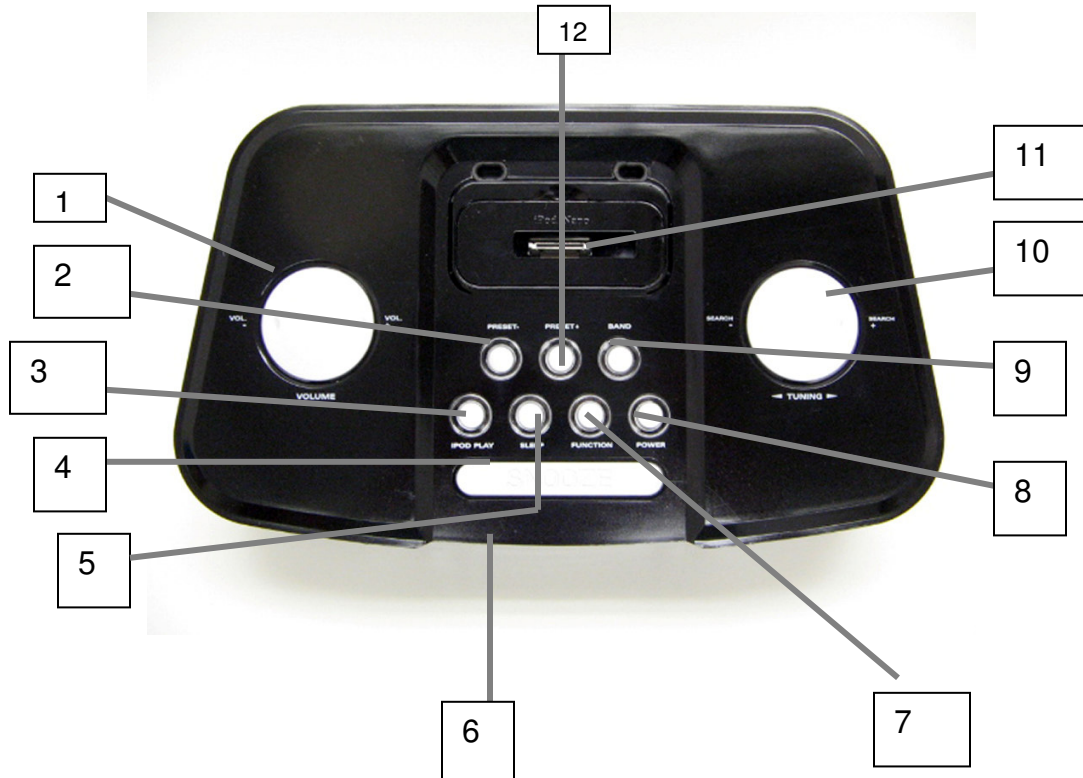

- | | |
|---------------------------|-----------------------------|
| 1. Volume Button | 7. Function Button |
| 2. Preset Previous Button | 8. Power Button |
| 3. iPod Play Button | 9. Band Button |
| 4. Snooze Button | 10. Frequency Search Button |
| 5. Sleep Button | 11. iPod Dock |
| 6. LCD Display | 12. Preset Next Button |

Rear View of the Unit:

 


- 13. DC In Jack
- 14. Headphones Jack
- 15. AM Antenna Jack
- 16. Auxiliary Input Jack
- 17. Alarm Set Button

- 18. Time/Preset Memory Button
- 19. Equalizer Button
- 20. FM Antenna
- 21. Battery Compartment

Remote Control Buttons and Features

- 1. LED Transmitter
- 2. POWER Button
- 3. iPod Play Button
- 4. Function Button
- 5. Alarm Button
- 6. Search Up Button
- 7. Volume Up Button
- 8. Preset Next Button
- 9. Equalizer Button
- 10. Time Memory Button
- 11. Preset Previous Button
- 12. Volume Down Button
- 13. Search Down Button
- 14. Snooze Button
- 15. Sleep Button
- 16. Band Button
- 17. Battery Compartment

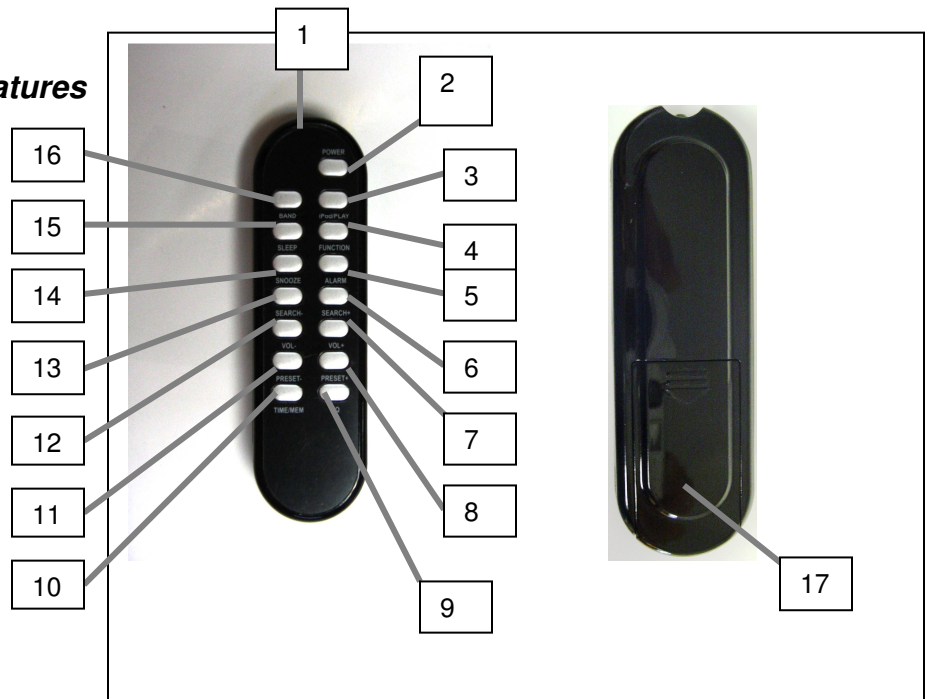

Getting Started

Battery Installation:

Clock/Radio

NOTE: Batteries may be installed as a backup to maintain timekeeping if AC power is interrupted. The Time will not be displayed but will reappear when AC power is restored.

1. Remove the Battery Compartment Cover by pushing the tab in the direction of the arrow.
2. Insert three "AA" alkaline batteries (not included), observing the proper polarity (+/-) as indicated inside the Battery Compartment, and then replace the Cover.

Remote Control

1. Remove the Battery Compartment Cover by sliding it in the direction of the arrow.
2. Insert two "AAA" alkaline batteries (not included), observing the proper polarity as marked inside the Compartment, and then replace the Cover.

Power Adapter:

Insert the small end of the AC Adapter into the Jack in the back of the unit and plug the other end into a standard 110-volt AC electrical outlet.

iPod Installation and Use

Important Precautions:

To make sure your iPod and clock radio work together, follow these 3 simple tips:

 
- **Always** use the insert that matches your iPod to avoid damage to the iPod connector pins.
- **Always** place and remove your iPod at a 15 degree angle to the rear. This allows your iPod to be inserted and removed smoothly.
- **Never** pull the iPod forward or push backwards. This can damage your Vuescape iPod Clock Radio product or your iPod.

Installing the iPod into the Unit:

1. Remove the Dock Cover by pulling it up.
2. Select the Dock Insert that corresponds to the model of iPod to be used as labeled on the bottom of each Insert, and place it into Dock so that the label side faces down and the tabs lock into the notches in the Dock. (Refer to the Dock Insert chart in the "Parts" section to select the correct Insert.)
3. Ensure that the correct Dock Insert is firmly in place, and then insert the iPod into the Dock.

NOTE: For older iPods that do not have a Dock Connector, use a stereo audio cable (not included) to connect the device to the Auxiliary Input Jack on the back of the unit (see the "Using a Non-Docking iPod or Other Audio Device" subsection).

4. To remove the Insert, remove the iPod and then lift the Insert from the Dock.

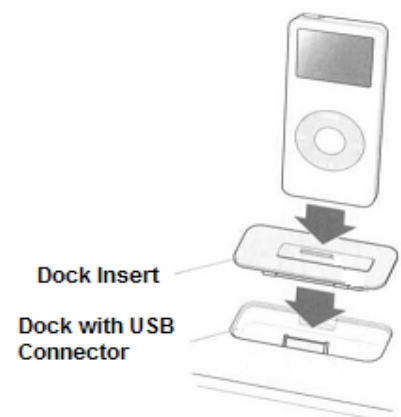

NOTE: ***iPod classic 80GB and iPod Nano 3 are compatible with the included docking insert for "iPod 20GB"

***iPod classic 160GB is compatible with the included docking insert for "iPod Video 60GB"

***iTouch can be connected by using the included Audio Cable.

***Reminder...all the iPod units can be docked in this clock radio unit except the iPod Shuffle and iTouch units can be connected by using the Audio Cable included with the Clock Radio.

Using the iPod with the Unit:

1. Press the Power Button on the unit, and then press the Function Button repeatedly until "iPod" is displayed.
2. Using the iPod Controls or the Remote Control (see the "Remote Control" subsection), browse for a song.



3. iPod Control Functions:

Function	Action
Play/Pause a song	Press the iPOD PLAY Button.
Adjust the volume	Press the VOL+ or VOL- side of the VOLUME Button.
Skip to the next song	Press the SEARCH+ side of the SEARCH Button.
Restart a song or skip to the previous song	Press the SEARCH- side of the SEARCH Button once to restart a song or twice to skip to the previous song.
Turn off the device	Press the POWER Button.
Fast-forward or rewind a song	Press and hold the SEARCH+ or SEARCH- side of the SEARCH Button to fast-forward or rewind, respectively.

Charging the iPod in the Unit:

The unit will recharge the iPod while docked. Ensure the correct Dock Insert is used and that the iPod is properly inserted.

NOTE: *The unit will not charge an iPod Shuffle, a non-docking iPod, or any other audio device.*

Clock and Alarm Functions

Setting the Time:

1. With the Time displayed, press the TIME/MEM Button on the back of the unit repeatedly to select the value to be changed, and then press the "+" or "-" side of the TUNING Button repeatedly to slowly increase/decrease the value, or hold the Button to rapidly increase/decrease the value.

NOTE: *If the Time is not displayed, press the POWER Button to turn off the function in use.*

2. Press the TIME/MEM Button again to return to the normal display.

NOTE: *The normal display will return after two seconds of inactivity.*

Setting and Using the Alarm:

1. With the Time displayed, press the Alarm Control Button to activate the Alarm Function. "ALARM1" will display indicating the Alarm is activated.

NOTE: *If the Time is not displayed, press the POWER Button to turn off the function in use.*

2. Press the Alarm Control Button repeatedly to select "BUZZER," "TUNER," or "iPod" as the Alarm sound. The text will display indicating the selection.
3. Press and hold the Alarm Control Button for two seconds, and then press the Alarm Control Button again to select the value to be changed.
4. Press the "+" or "-" side of the TUNING Button repeatedly to slowly increase/decrease the value, or hold the Button to rapidly increase/decrease the value.
5. Press the Alarm Control Button again to return to the normal display.
NOTE: *The normal display will return after two seconds of inactivity.*
6. To turn the Alarm off when it sounds, press the Alarm Control Button.

Snooze Function:

When the Alarm sounds, press the SNOOZE Button, which will turn off the Alarm and sound it again after nine minutes. The Snooze icon "zzZ" will display indicating the function is on.

Sleep Function:

1. To activate the Sleep Function, press the POWER Button to turn on the Radio, and then press the SLEEP Button repeatedly to set the duration in 10-minute intervals up to 90 minutes. "SLEEP" will display indicating the function is on.
2. The function will turn off when time has elapsed, or it can be manually turned off by pressing the POWER Button.

Radio Function

1. To turn on the Radio, press the Power Button and then press the Function Button repeatedly until a radio station displays.
2. Press the Band Button to select AM or FM.
3. Install/Extend the AM Antenna/FM wire Antenna until a clear signal is received.
4. Adjust the volume by pressing the VOL+ or VOL- side of the Volume Button repeatedly to slowly increase/decrease the volume, or hold the Button to rapidly increase/decrease the volume.
5. Press the SEARCH+ or SEARCH- side of the TUNING Button repeatedly to manually select a frequency, or hold and release after three seconds to scan for the next receivable radio station. If frequencies have been preset, press the PRESET+ or PRESET- Button repeatedly to select one of the preset frequencies (see the "Presetting Radio Frequencies" subsection).
NOTE: "ST" will display indicating that the frequency selected is broadcasting in stereo.
6. To turn off the Radio, press the Power Button.

Presetting Radio Frequencies:

1. With the Radio on, select the Frequency to be stored (see the "Radio" subsection).
2. Press the TIME/MEM Button, and then press the (CH) SEARCH+ or SEARCH- side of the TUNING Button to select the Preset Channel number (CH) from 1 to 9.
3. Press the TIME/MEM Button to save the frequency.



NOTE: A stored frequency can only be erased by replacing it with another frequency.

Remarks: When you listen to the AM frequency radio, please remove the iPod from the unit in order to avoid any interference of the AM reception.

Other Use Options

Remote Control:

Use the Remote Control Buttons in the same manner as the Buttons on the unit.

 
Equalizer:

When using the Radio, iPod, or Auxiliary functions, the Equalizer can be adjusted by pressing the EQ Button on the back of the unit to select "POP," "ROCK," "JAZZ," "CLASSIC," or no selection. The text will display indicating the selection, except if none is selected.



Using a Non-Docking iPod or Other Audio Device:

1. Connect the non-docking iPod or audio device to the AUX-IN Jack on the back of the unit using a stereo audio cable (not included).

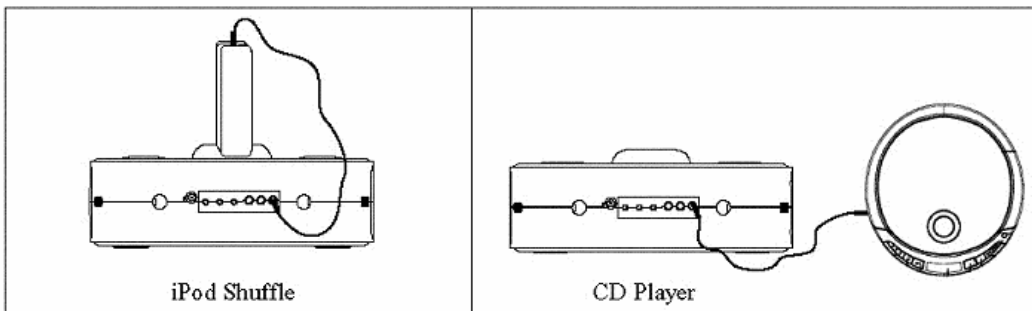

2. Press the POWER Button on the unit, and then press the Function Button repeatedly until "AU" (Auxiliary) displays.



3. Turn on and play the iPod/audio device.
4. Adjust the volume using the Volume Button on the unit and on the device, if necessary.
5. To turn off the iPod/audio device, press the POWER Button on the unit and then turn off the device.

Headphone Jack:

To use headphones (not included) with this unit, ensure the volume is adjusted to a low level, and then connect the headphones to the PHONES Jack on the back of the unit. The unit's speakers will deactivate.

WARNING: Avoid prolonged exposure to high sound levels, as this may cause permanent hearing damage.

Troubleshooting

PROBLEM	PROBABLE CAUSE	RESOLUTION
No sound	<ul style="list-style-type: none"> The volume is set too low. Headphones (or earbuds) are plugged into the unit. The iPod is not inserted properly. The iPod is paused or in the Hold position. The iPod may need to be reset. 	<ul style="list-style-type: none"> Increase the volume by pressing the VOL+ side of the Volume Button. Unplug the headphone (or earbuds). Remove and reinsert the iPod. Switch the iPod from the Pause or Hold position. Reset the iPod as instructed by the device manufacturer's instructions.
Distorted sound	<ul style="list-style-type: none"> The volume level is too high. The song file is distorted. 	<ul style="list-style-type: none"> Decrease the volume of the unit or of the device. Skip to another song file.
Unit warm after lengthy play.	<ul style="list-style-type: none"> This is acceptable, especially if the volume is at a high level. 	<ul style="list-style-type: none"> Lower the volume or turn off the unit until cool.
No power	<ul style="list-style-type: none"> The Insert is not securely connected. The electrical outlet is not operational. 	<ul style="list-style-type: none"> Ensure the Adapter is securely connected to both the Jack and to the electrical outlet. Ensure the unit is plugged into an operating electrical outlet.
No power - Remote Control	<ul style="list-style-type: none"> The transmitter on the front of the Remote or the sensor on the front of the unit is blocked. The battery power is low. The batteries are incorrectly installed in the Battery Compartment. 	<ul style="list-style-type: none"> Remove any material or dirt from the transmitter or sensor. Replace the batteries as instructed by the "Battery Installation" subsection. Verify that the battery polarities are correct in the Battery Compartment and adjust if necessary.
iPod did not charge	<ul style="list-style-type: none"> The iPod is not seated properly in the Dock. The iPod is not operating properly. 	<ul style="list-style-type: none"> Remove and replace the iPod, ensuring the Connector is unobstructed and the correct Insert is installed. Refer to the iPod manufacturer's instructions for troubleshooting information.
Can't access the files on my 5GB iPod (with Video) or iPod nano		<ul style="list-style-type: none"> Reset your iPod (as recommended on Apple web site.) (Will not effect music stored on your iPod.) Press the Hold switch On/Off (slide it to Hold, then turn it off). Press and hold the Menu + Select buttons until the Apple logo appears (10 seconds.) You may need to repeat this step.

Note: Please make sure that your iPod has the latest firmware. Check your iPod manual or the Apple website (www.apple.com) and follow the instructions on how to upgrade the firmware of your iPod.

IMPORTANT SAFEGUARDS

Signal Word Definitions






DANGER – Indicates an imminently hazardous situation, which, if not avoided, would result in death or serious injury. Usage of this signal word is limited to the most extreme situations.



WARNING – Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.



CAUTION – Indicates a potentially hazardous situation, which, if not avoided, might result in minor/moderate injury or product/property damage. It also alerts against unsafe practices.

 <p>The lightning flash with arrowhead symbol, with an equilateral triangle is intended to alert the user of the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	 <p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>The exclamation point within an equilateral triangle is intended to alert the user of presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
---	--	---

Care and Maintenance

Clean the product with a soft cloth; do not use liquids or abrasive chemicals or pads.

Battery Handling and Usage



WARNING: Only adults should handle batteries. Do not allow a child to use this product unless the Battery Compartment Cover is securely attached to the Battery Compartment in accordance with all product usage instructions.

- Follow the battery manufacturer's safety and usage instructions.
- Keep batteries away from children and pets.
- Do not mix a new and a used battery or mix batteries of different chemistries or sizes.
- Insert the batteries observing the proper polarity (+/-) as indicated inside the battery compartment. Failure to properly align the battery polarity can cause personal injury and/or property damage.
- Remove spent or discharged batteries from the product.
- Remove the batteries when not using the product for an extended period.
- Never throw batteries into a fire. Do not expose batteries to fire or other heat sources.
- Dispose or recycle spent/discharged batteries in compliance with all applicable laws. For detailed information, contact your local solid waste authority.

IMPORTANT INFORMATION REQUIRED BY THE FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference; and (2) this device must accept any interference received, including interference that may cause undesirable operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with instructions, may cause harmful interference to radio reception, which can be determined by turning the equipment off and on. Try to correct the interference by using one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

Service Procedure

Beyond the retailer return policy, please call the toll free number below to obtain service. A customer representative will give you a return authorization number (RA number) allowing you to ship your product to the service center.

Please have the following information available when you call the service center:

- Your Name and Address
- Date of Purchase
- Model Number
- Serial Number
- Store Name and Address
- Store Location Number
- Type of problem with the unit

After receipt of the RA number:

- Send the complete unit, including power cord and adapter in the original carton to the address below.
- Include a copy of the original receipt for proof of purchase .
- Write the RA number on the outside of the package. Packages without RA numbers will not be accepted.
- The LCD monitor is fragile. Use extreme care when handling and packaging the unit.
- The purchaser is responsible for any shipping charges to the repair facility and assumes all risk.
- The service center will repair or replace the unit and send it back to the purchaser within 10 working days from receipt of the unit.

To contact the service facility, please call 508-435-4830 or (800) 639-3803. The address for this facility is:

Four Star Group
26840 Fargo Ave. Suite C
Bedford Heights, OH 44146

Email Support: techsupport@fourstari.com

*** 30 Day Limited Warranty**

This product is warranted to be free from defects in material and workmanship for a period of 30 days. Warranty obligations are limited to replacement or repair of defective parts and components, at the option of the manufacturer. The warranty of this product is null and void if the product is subjected to negligence, abuse, modification, misuse, accident or if the customer uses the product for a function it was not intended for. This warranty is only valid for the original purchaser of this product and will not be honored if the product is resold.

The manufacturer will not be liable for incidental or consequential damages caused by the use of this product. The manufacturer will not be liable for any costs such as lost profits or revenues, cost of temporary replacements, loss of data, loss of equipment or use of equipment or any claims by third parties.

Please call the phone number included to obtain service. A customer representative will give you a return authorization number (RA number) allowing you to ship product to the service center. The purchaser must have a copy of the original receipt for proof of purchase within 30 days. The purchaser of this product is responsible for any shipping charges to the repair facility. The manufacturer service center will repair or replace the unit in question and send it back to the purchaser within 7 working days of receipt of the unit.