 




fourstargroup

ITEM: 11211722W

**THIS INSTRUCTION BOOKLET CONTAINS
IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE
REFERENCE.**

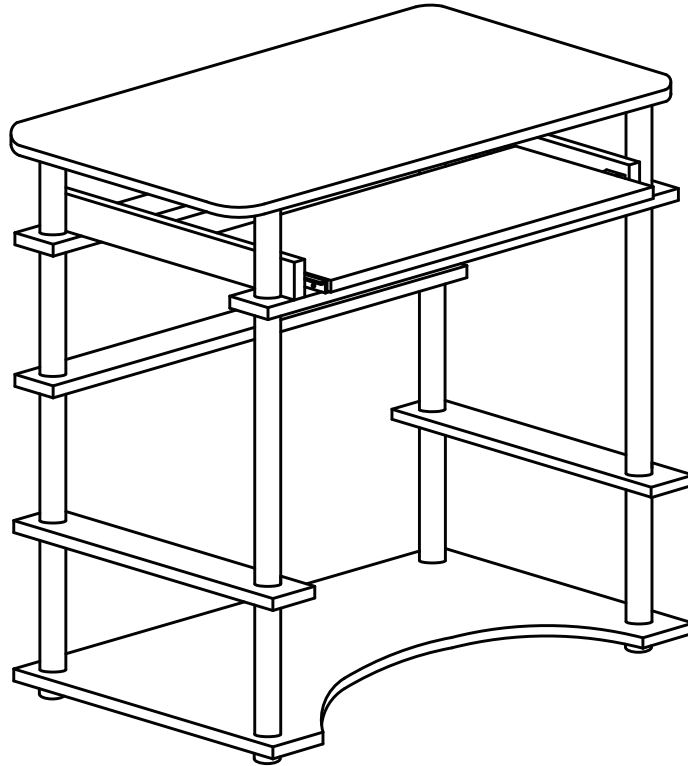

UPC#4893948120017 MODEL: 1781391

BLACK COMPUTER STAND



STOP Do not return to the store

**Do you have any questions ? Missing small parts or hardware?
If you need assistance with the assembly of your COMPUTER
DESK please e-mail our Customer Service Department at:
support@fourstari.com or call us at 1-800-639-3803**

Please let customer service know:

- 1. You purchased this item from Wal-Mart**
- 2. The item description is: Computer Desk**
- 3. The item number is 11211722W**
- 4. The part number/letter and quantity needed**

**If you have this information ready, we will be able to process
your request promptly. Thank you**

LOT#0708-00000

DATE PURCHASED

/

/

CAUTION :

 
1. Read this instruction manual and keep it for reference.
2. Adult supervision is required due to small parts.
3. Assemble on soft surfaces to prevent damage to the product finish.
4. Recommended two people to assemble the product.
5. Estimated half hour for assembly.
6. Make sure all parts are included before assembly.
7. Call our toll-free customer service if needed.

ASSEMBLY TOOLS REQUIRED

PHILLIPS SCREWDRIVER



HAMMER




OR

 RUBBER HAMMER

 
 
 
 

 




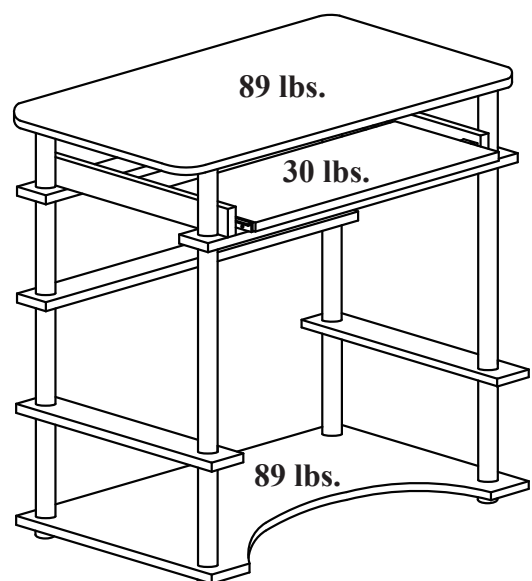








This unit is intended for use only with the products and maximum weights indicated. Use with other products or products heavier than the maximum weights indicated may result in instability causing possible injury. Furniture can tip over or break if improperly moved. Have a friend help to lift and carry the unit to its new location.



PARTS AND HARDWARE

BEFORE YOU BEGIN, PLEASE FOLLOW ASSEMBLY INSTRUCTIONS CAREFULLY.
FOLLOW THEM STEP BY STEP.

	Part Name	Line-art Drawing	Size	Quantity	Material	Finish	Finished Edges
1	Long Tube		3.8 x 3.8 x 47cm	2	PVC	Silver	
2	Short Tube		3.4 x 3.4 x 24.4cm	6	PVC	Silver	
3	Extra Short Tube		3.4 x 3.4 x 12cm	4	PVC	Silver	
4	Foot		3.3 x 3.3 x 2.4cm	4	PVC	Silver	
5	Insert Cap		3.4 x 3.4 x 1.3cm	4	PVC	Black	
6	Drawer Slide		25.4cm drawer slide	1 Set	Metal	Black	
7	10mm Screw		1cm Flat Head	8	Metal	Gold	
8	32mm Screw		3.2cm Flat Head	4	Metal	Gold	
9	Keyboard Stopper		0.4 x 1.4 x 4.5cm	2	PVC	Black	
10	Power Pin		1.9cm Power Pin	2	Metal	Silver	
A	Top Panel		1.5 x 39.5 x 60cm	1	Particleboard	Black	4
B	Bottom Panel		1.15 x 34 x 60cm	1	Particleboard	Black	4
C	Keyboard Panel		0.9 x 25 x 47.4cm	1	Particleboard	Black	1
D	Drawer Slide Crossbar		1.15 x 4 x 32.5cm	2	Particleboard	Black	3
E	Apron Crossbar		1.15 x 4 x 59.8cm	2	Particleboard	Black	4
F	Left & Right Crossbar		1.15 x 4 x 32.8cm	2	Particleboard	Black	4
G	Bottom Crossbar		1.15 x 4 x 59.8cm	1	Particleboard	Black	4

 
ASSEMBLY INSTRUCTIONS

Step 1.



Place the **DESKTOP (A)** surface face down on a soft cloth/blanket in order to protect the surface.

Place the **INSERT CAPS (5)** firmly into the openings, tap lightly with a hammer just enough for the inserts to remain lightly in the opening.

Turn the desktop surface over on the soft cloth surface and apply gradual pressure to each corner until the **INSERT CAPS (5)** are firmly into the opening.

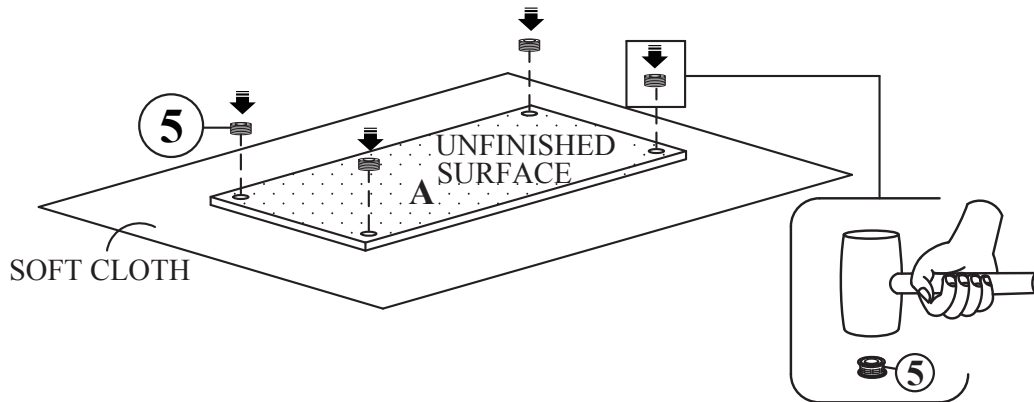

  Place a board over the PVC caps before tapping them in to place to review any damage to the inserts.

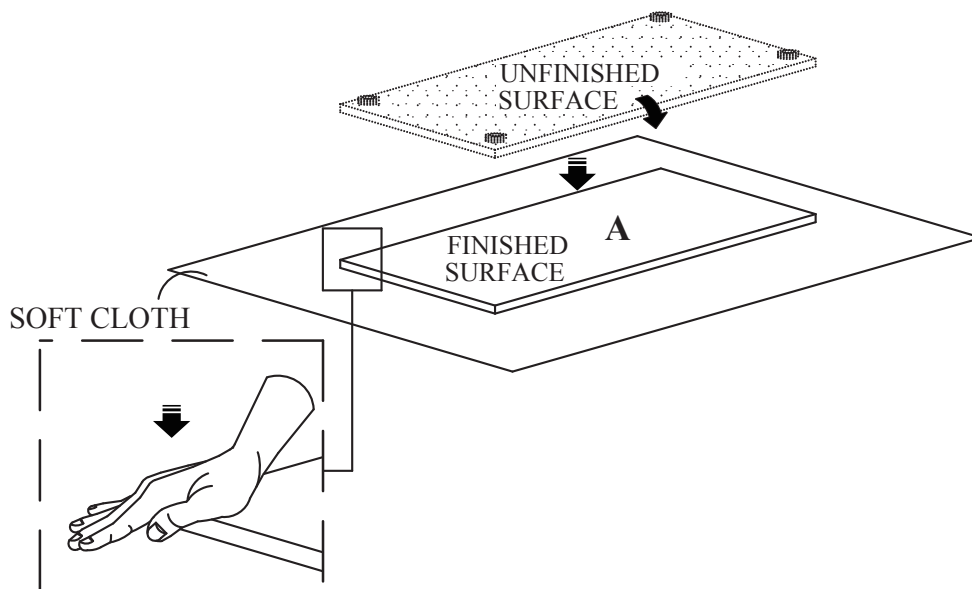


(A) Top Panel - 1 PC



(5) Insert Cap - 4 PCS

Step 2.


 
Carefully attach the EXTRA SHORT TUBES (3) to the INSERT CAPS (5).

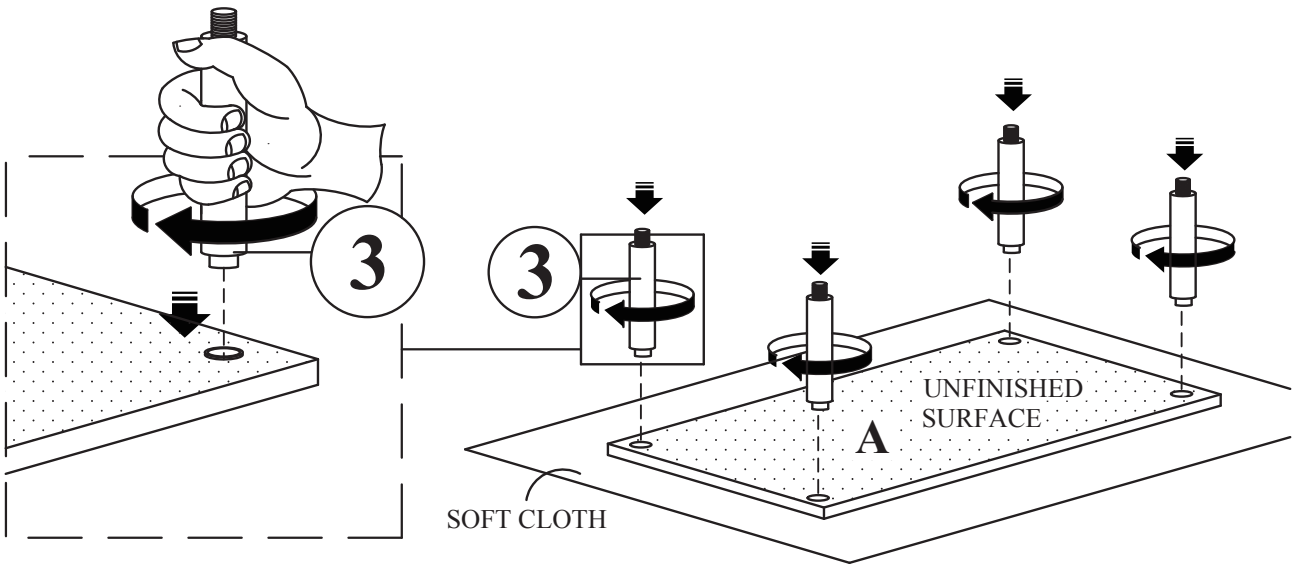


③ Extra Short Tube - 4 PCS

Step 3.

  Attach the 10" DRAWER SLIDES (6A) to the DRAWER SLIDE CROSSBAR (D) Using 10mm SCREWS (7).

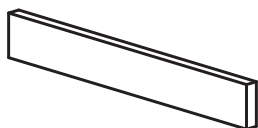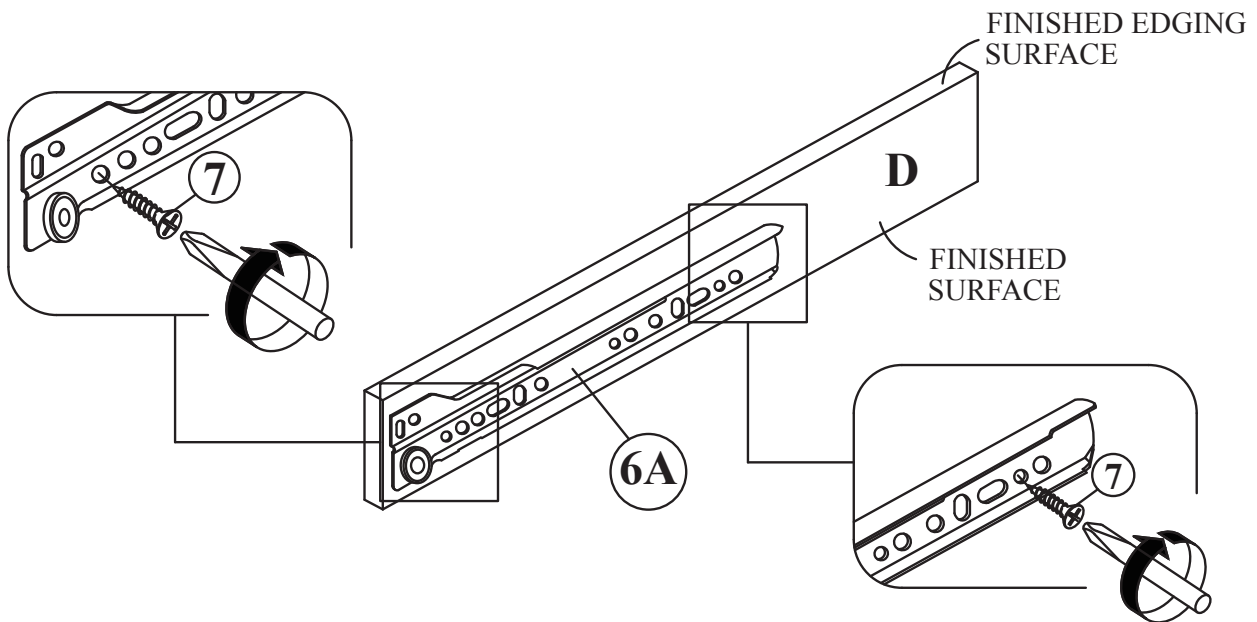

① D Drawer Slide Crossbar - 2 PCS

 


② 6 Drawer Slide - 2 PCS



③ 7 10mm Screw - 4 PCS

Step 4.

 Place the DRAWER SIDE CROSSBAR (D) upright & attach the APRON CROSSBAR (E) using 32mm SCREWS (8).

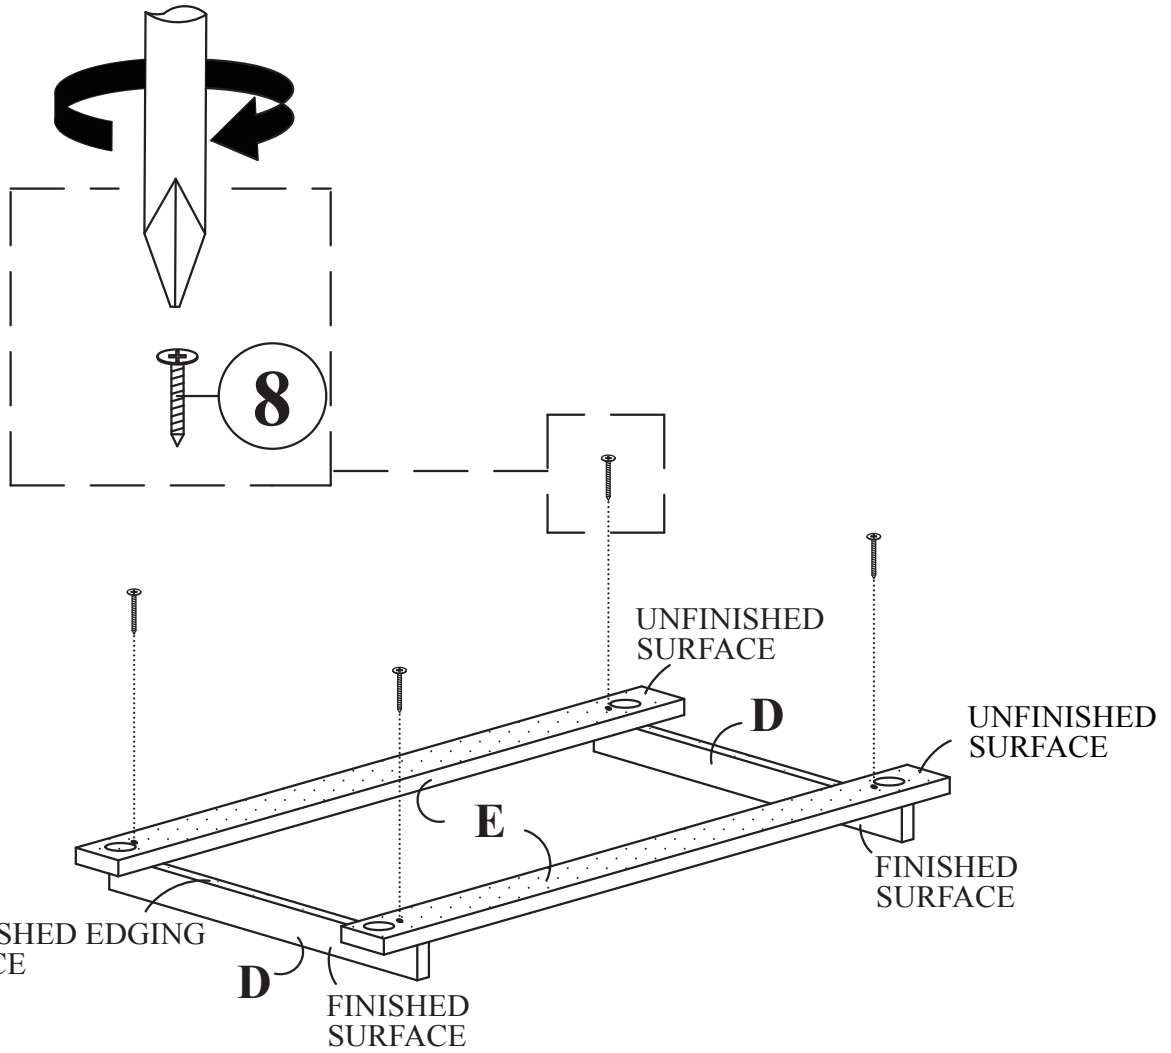



Ⓔ Apron Crossbar - 2 PCS



Ⓗ 32mm Screw - 4 PCS

Step 5.

  Place the keyboard drawer ASSEMBLY FROM STEP 4 over the EXTRA SHORT TUBES (3) and then attach the LONG and SHORT TUBES (1 and 2) to hold it in place.

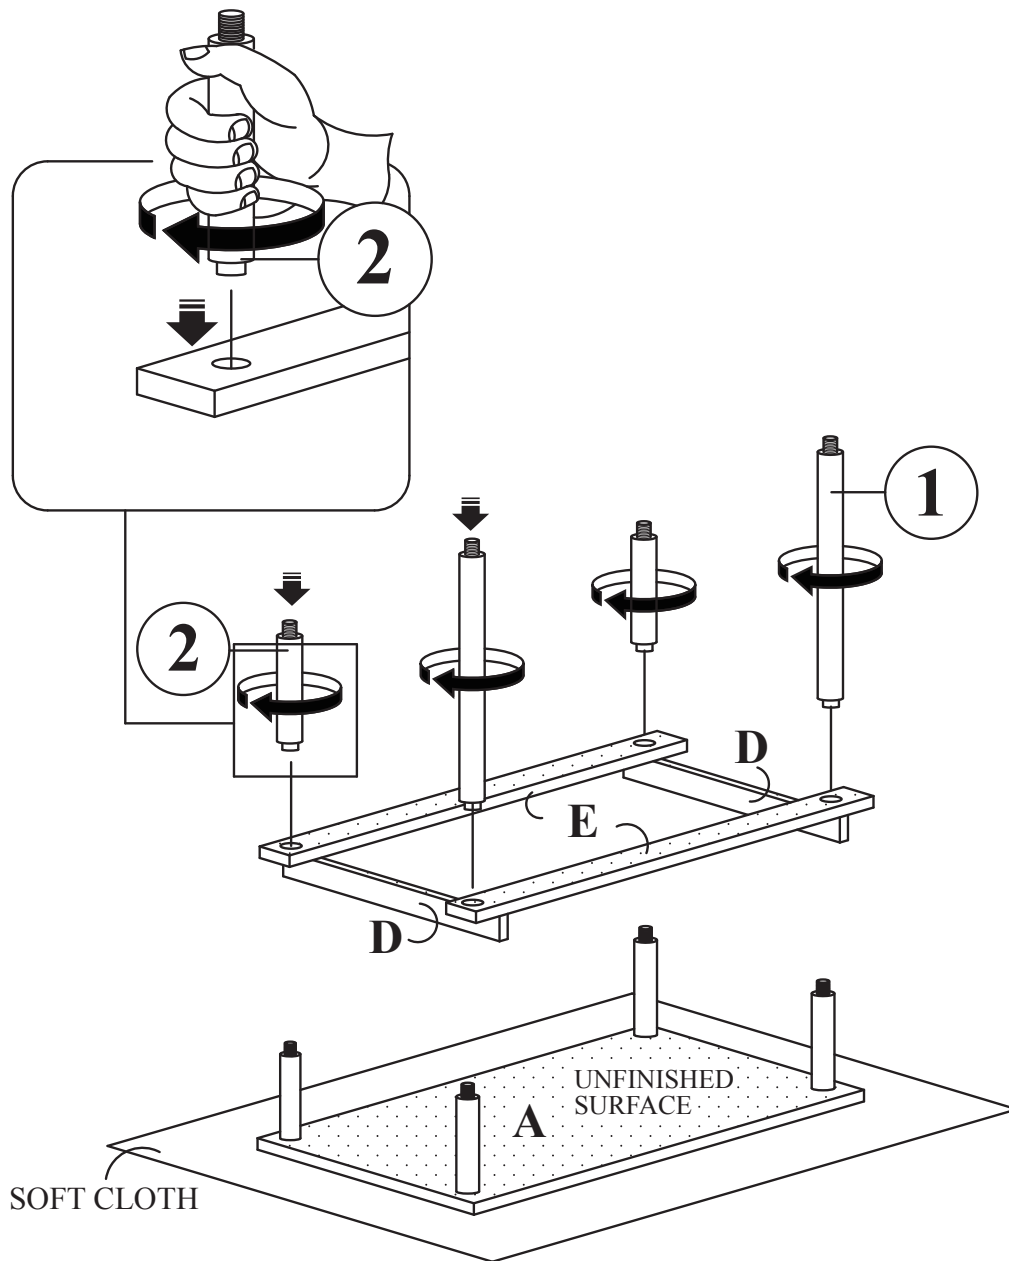

① Long Tube - 2 PCS

 
 


② Short Tube - 2 PCS

Step 6.

Place the **BOTTOM CROSSBAR (G)** over the **SHORT TUBES (2)**. Then, attach the **SHORT TUBES (2)**.

Place the **L&R CROSSBARS (F)** over the **LONG** and **SHORT TUBES (1 and 2)**, Then, attach **SHORT TUBES (2)** again.

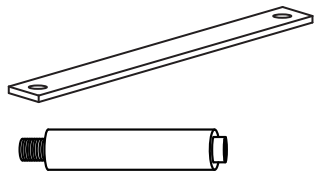
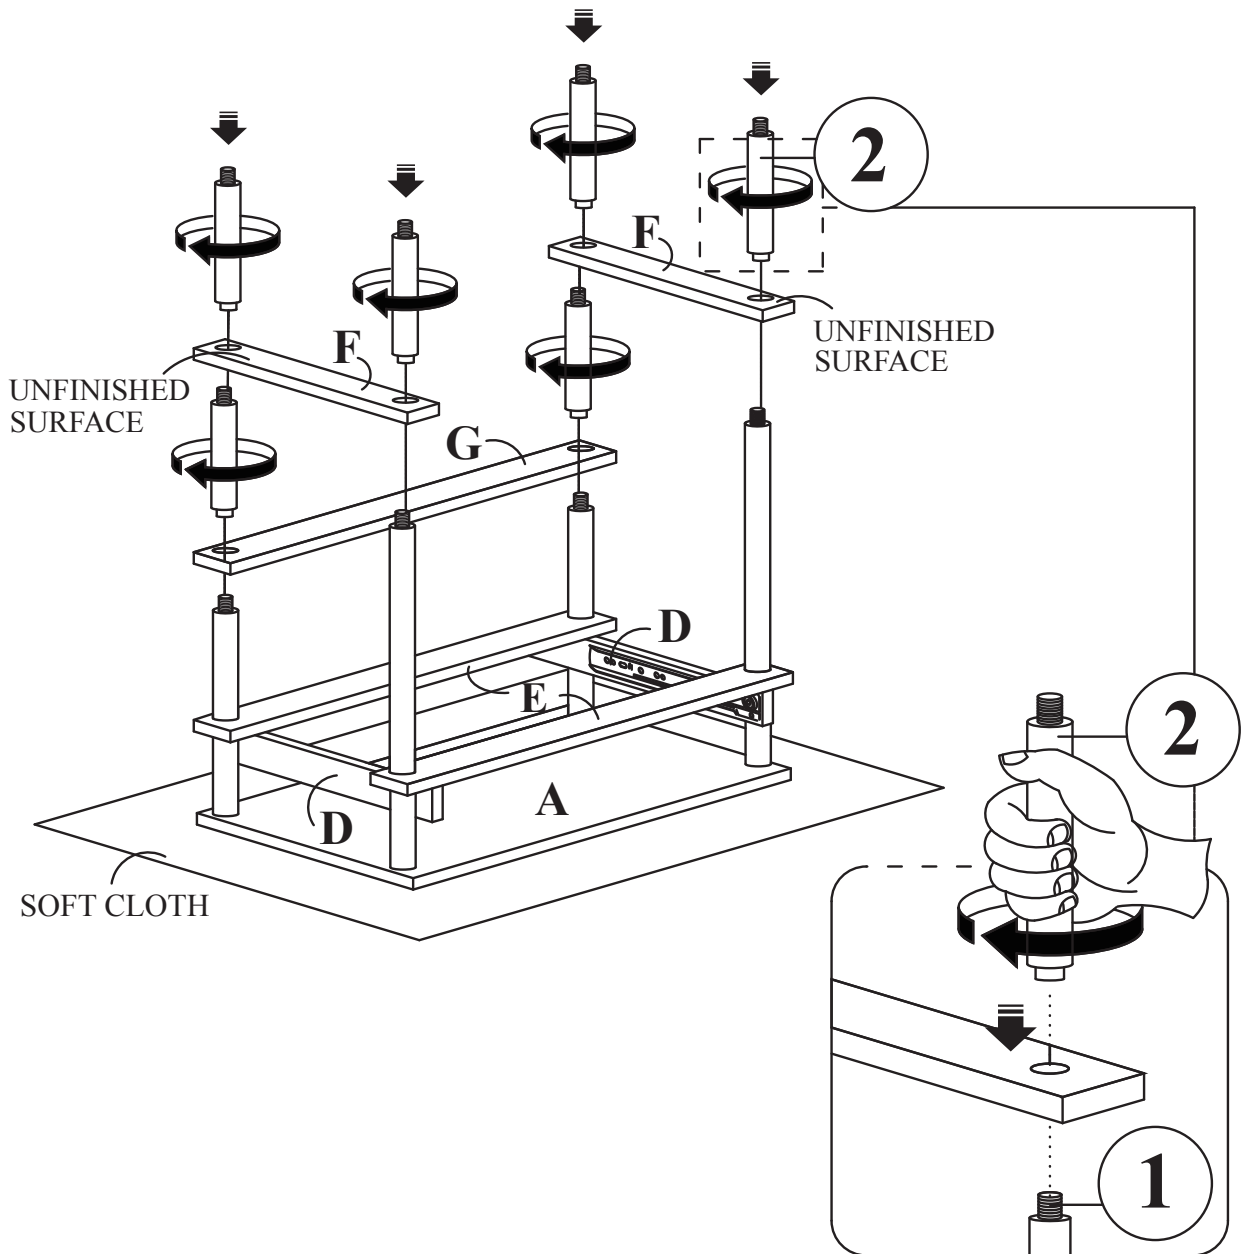


Ⓒ Bottom Crossbar - 1 PC

Ⓓ Short Tube - 6 PCS

Step 7.

  Place the BOTTOM PANEL (B) on to the SHORT TUBES (2) and then attach the FOOTINGS (4).

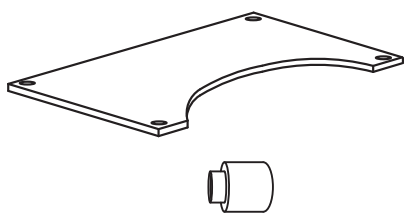
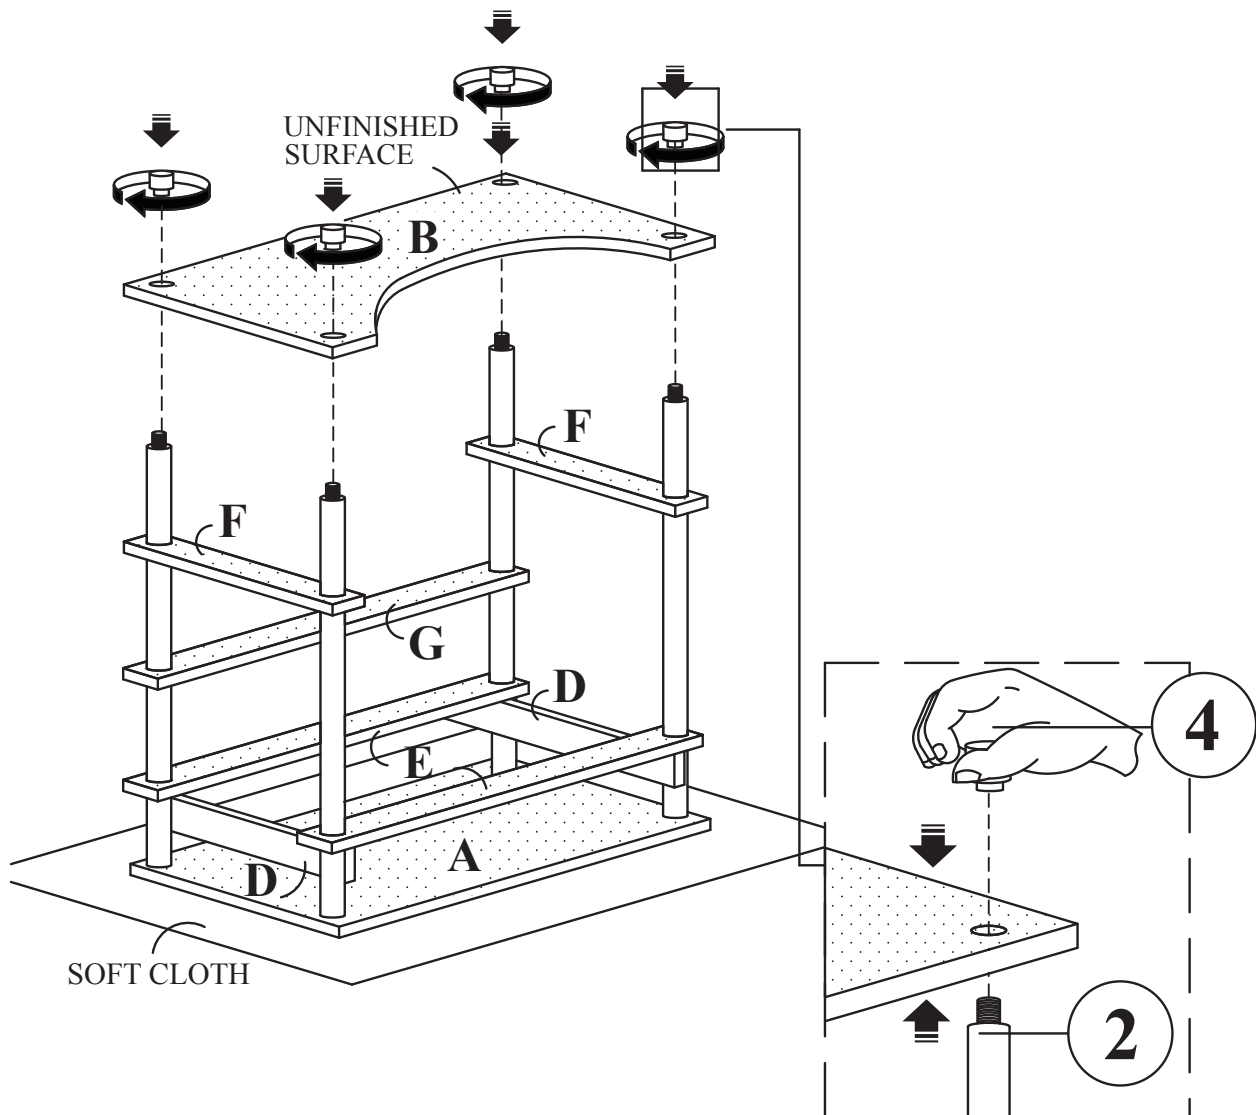


ⓑ Bottom Panel - 1 PC

ⓓ Foot - 4 PCS

Step 8.

  Attach the 10" DRAWER SLIDES (6B) to each side of the KEYBOARD DRAWER PANEL (C) Using 10mm SCREWS (7), Then attach the KEYBOARD STOPPER (9) to the unfinished edging surface of the KEYBOARD DRAWER PANEL (C) using POWER PIN (10).

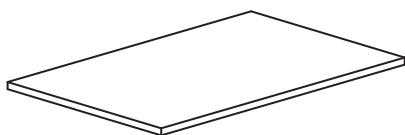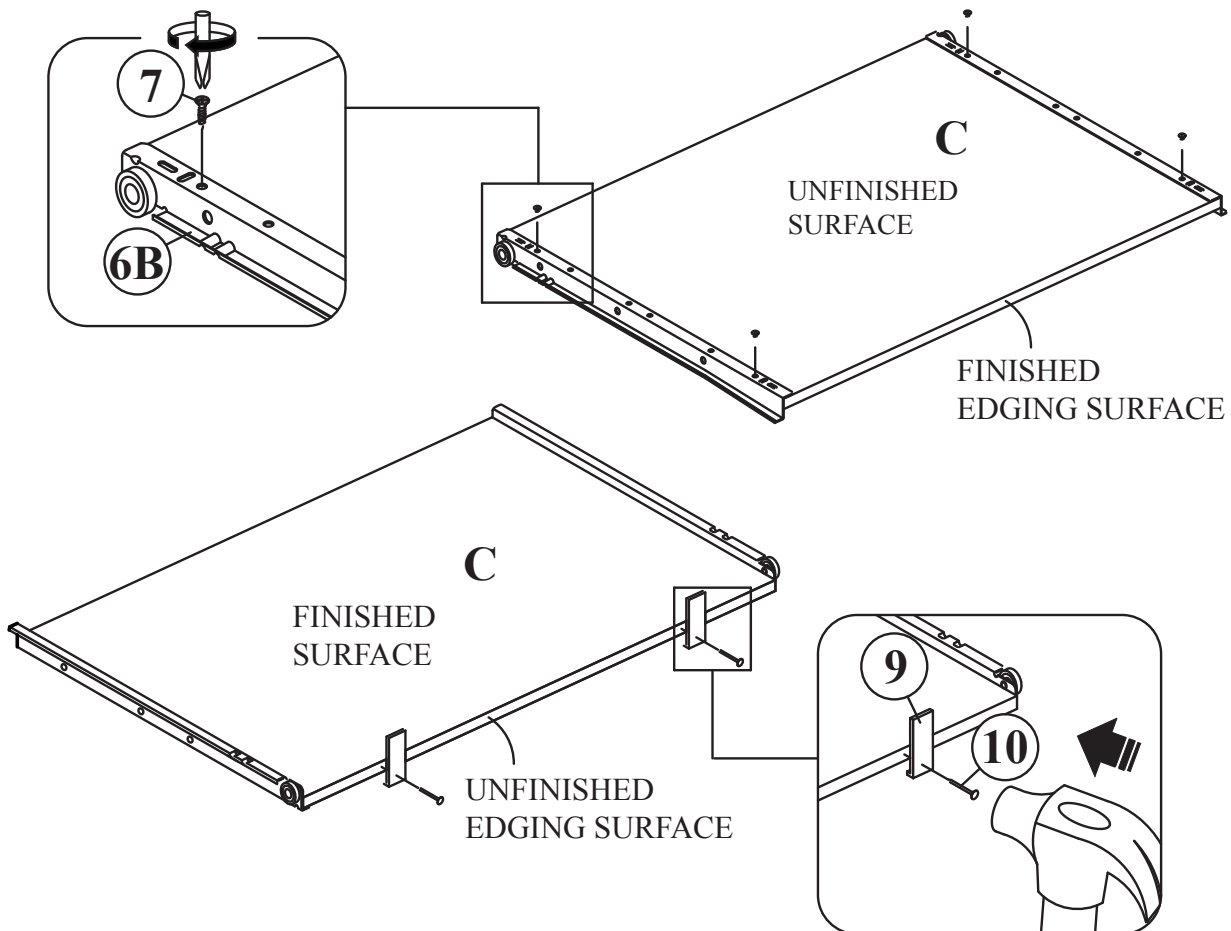


Ⓒ Keyboard Panel - 1 PC



Ⓔ Drawer Slide - 2 PCS



 Ⓗ 10mm Screw - 4 PCS





Ⓘ Keyboard Stopper - 2 PCS




Ⓙ Power Pin - 2 PCS

Step 9.

  Carefully turn the computer workstation right side up. Then insert the KEYBOARD DRAWER PANEL (C) from STEP 8 at the top of the rolling mechanism

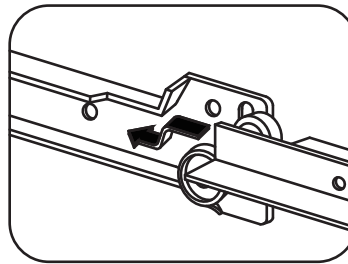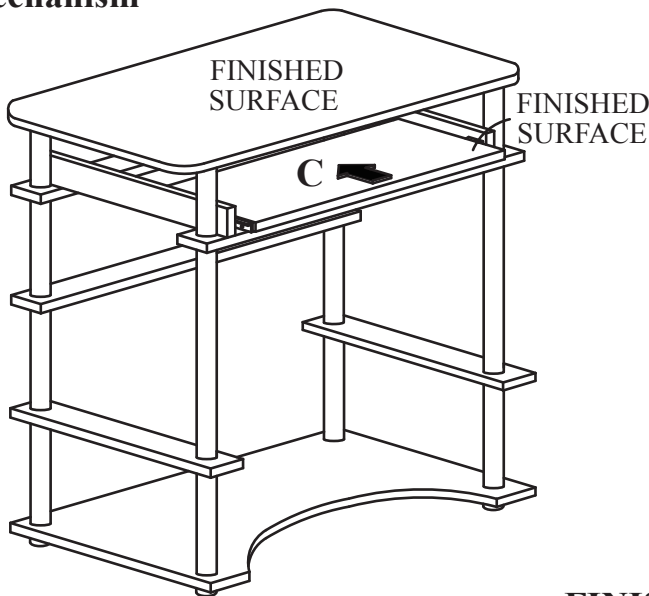


FINISHED

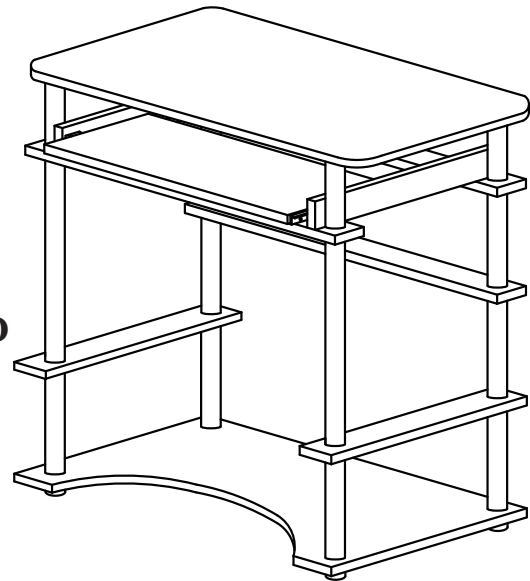 

To clean the computer desk, wipe with soft, dry cloth. Apply a small amount of cleaning solution to the cloth if required. Do not use abrasive cleaners in order to prevent scratching the surfaces.

 This unit is intended for use only with the products and maximum weights indicated. Use with other products or products heavier than the maximum weights indicated may result in instability causing possible injury. Furniture can tip over or break if improperly moved. Have a friend help to lift and carry the unit to it's new location.

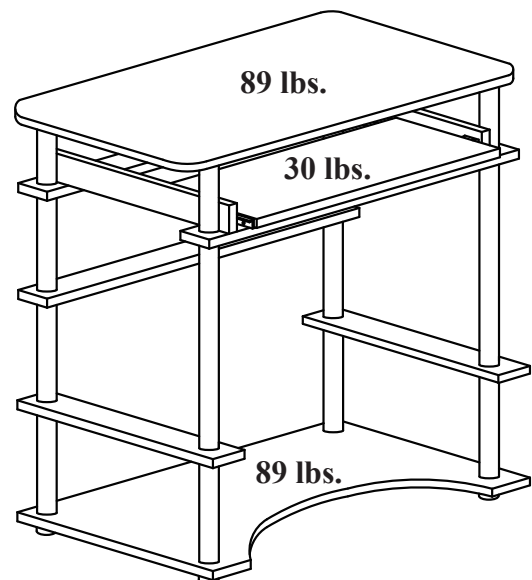

Do not return to the store

**Do you have any questions ? Missing small parts or hardware?
If you need assistance with the assembly of your COMPUTER
DESK please e-mail our Customer Service Department at:
support@fourstari.com or call us at 1-800-639-3803**