


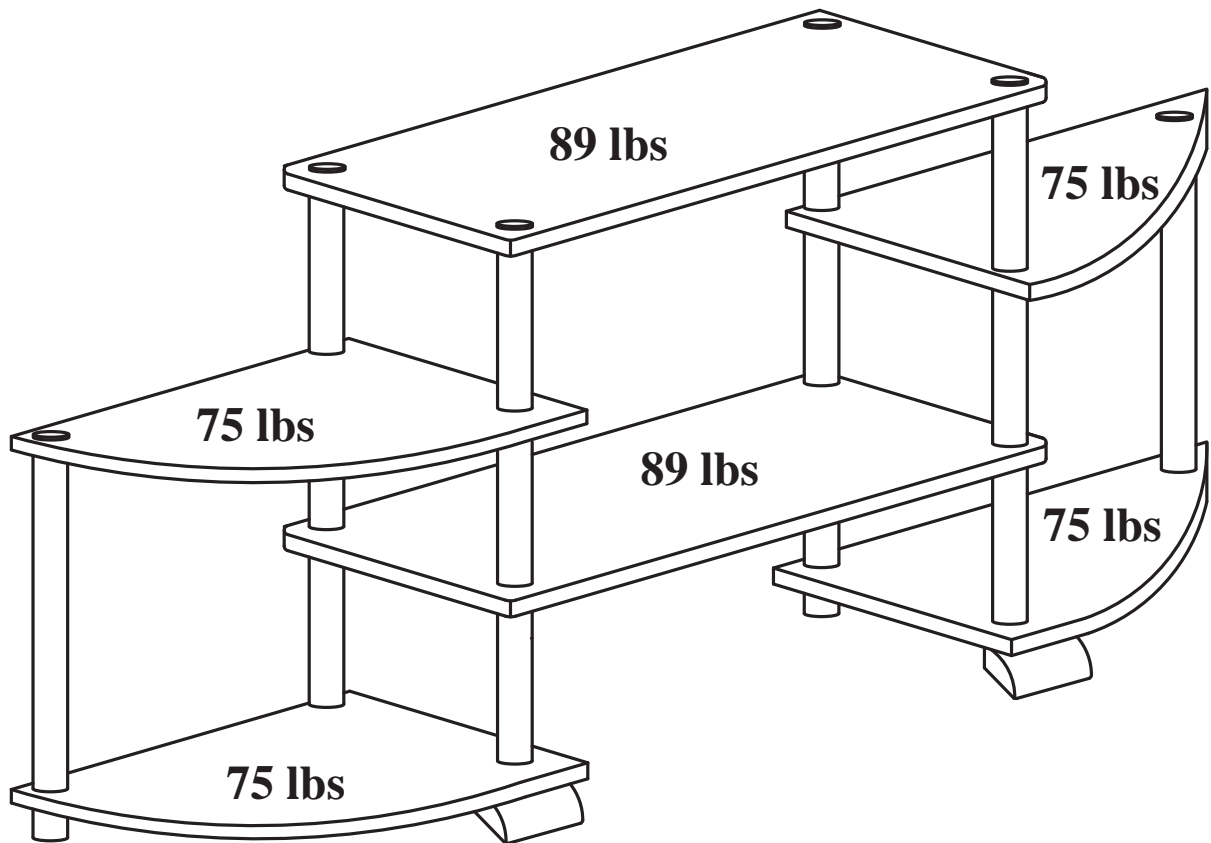


 

 
 
 


fourstargroup



MODEL: 11211851V

**ENTERTAINMENT CENTER**

## PARTS AND HARDWARE

<b>1</b>	<b>LONG POST (2 PCS)</b>	
<b>2</b>	<b>SHORT POST (12 PCS)</b>	
<b>3</b>	<b>CAP (6 PCS)</b>	
<b>4</b>	<b>NO-TIP FRONT FEET (2 PCS)</b>	
<b>5</b>	<b>LEG (4 PCS)</b>	
<b>A</b>	<b>CENTER SHELF PANEL (2 PCS)</b>	
<b>B</b>	<b>LEFT SIDE PANEL (2 PCS)</b>	
<b>C</b>	<b>RIGHT SIDE PANEL (2 PCS)</b>	

**BEFORE YOU BEGIN, PLEASE READ ASSEMBLY INSTRUCTIONS CAREFULLY. FOLLOW THEM STEP BY STEP.**

 

**CAUTION :**

- 1. ADULT SUPERVISION IS REQUIRED DUE TO SMALL PARTS. CARE SHOULD BE TAKEN IN THE UNPACKING AND ASSEMBLY OF THE PRODUCT.**
- 2. ASSEMBLE ON SOFT SURFACES TO PREVENT DAMAGE TO THE PRODUCT FINISH.**
- 3. MAKE SURE ALL PARTS ARE INCLUDED BEFORE ASSEMBLY.**


# ASSEMBLY INSTRUCTIONS

## STEP 1


ATTACH 2 LONG POSTS ( 1 ), 4 SHORT POSTS ( 2 ), 4 LEGS ( 5 ) AND 2 NO-TIP FRONT FEET ( 4 ) TO 2 SIDE PANELS ( B ) AS SHOWN.

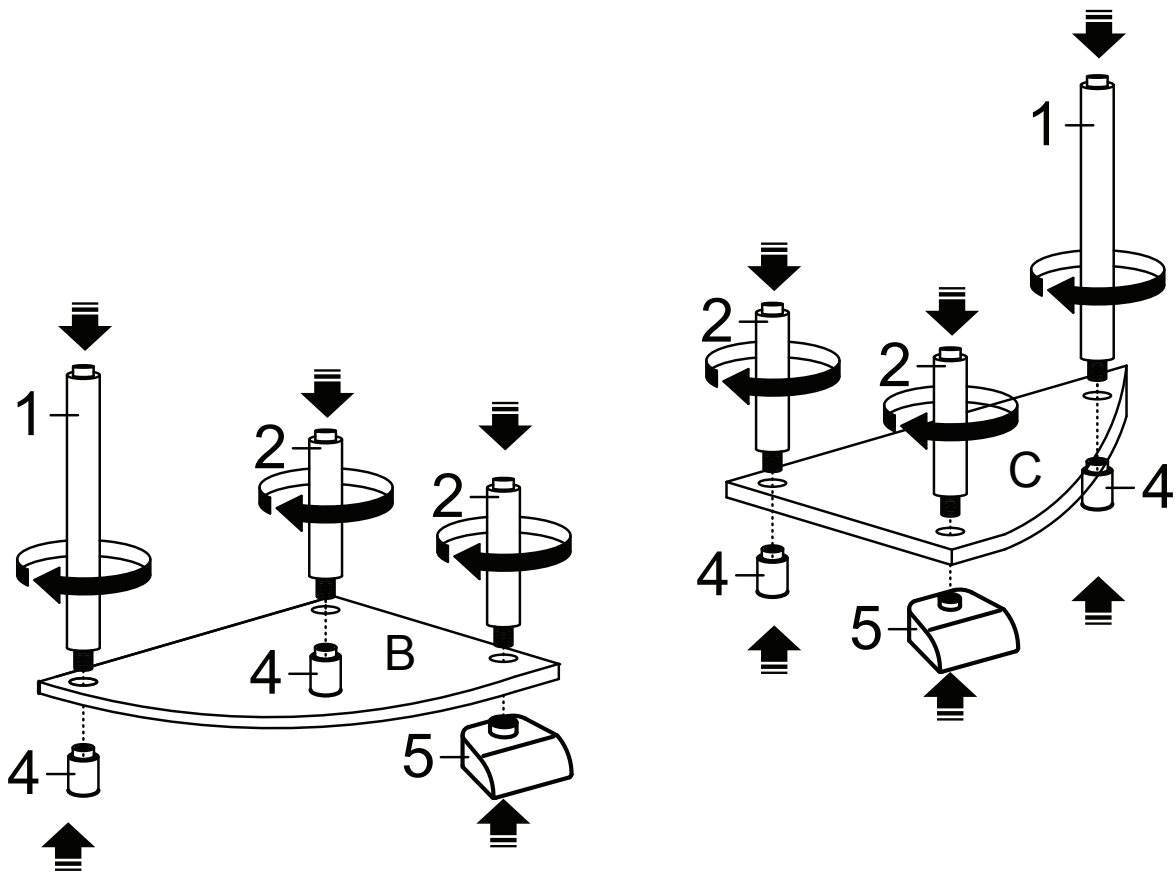

① LONG POST - 2 PCS

 

② SHORT POST - 4 PCS

 



④ NO-TIP FRONT FEET - 2 PCS



⑤ LEG - 4 PCS

**STEP 2**

 
**ATTACH CENTER PANEL ( A ) AND 4 SHORT POSTS ( 2 ) TO ASSEMBLED STEP 1 AS SHOWN.**

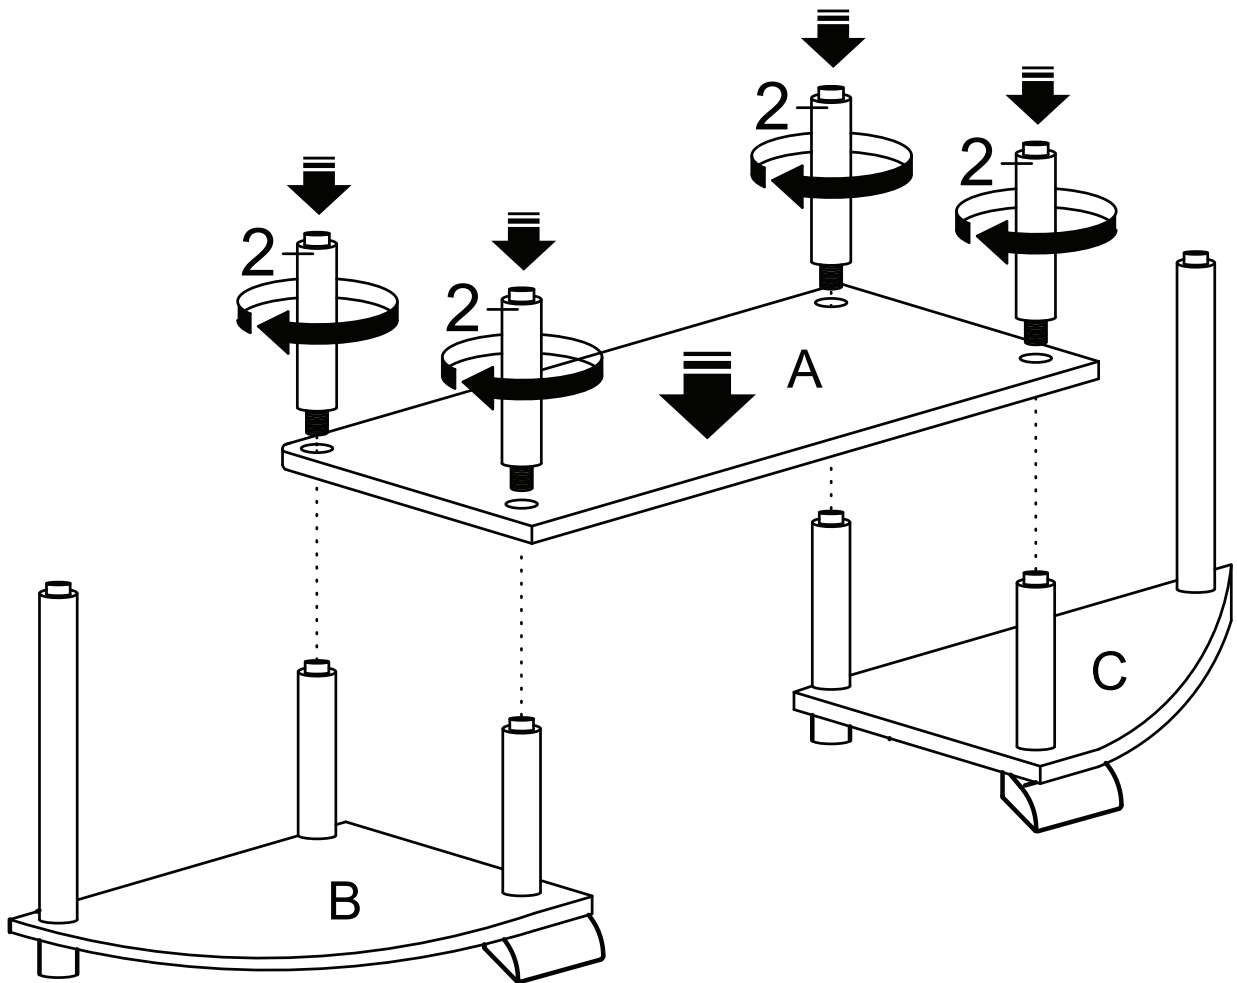

② SHORT POST - 4 PCS


**STEP 3**

**ATTACH 2 SIDE PANELS ( B ) AND 4 SHORT POSTS ( 2 ) TO ASSEMBLED STEP 2 AS SHOWN.**

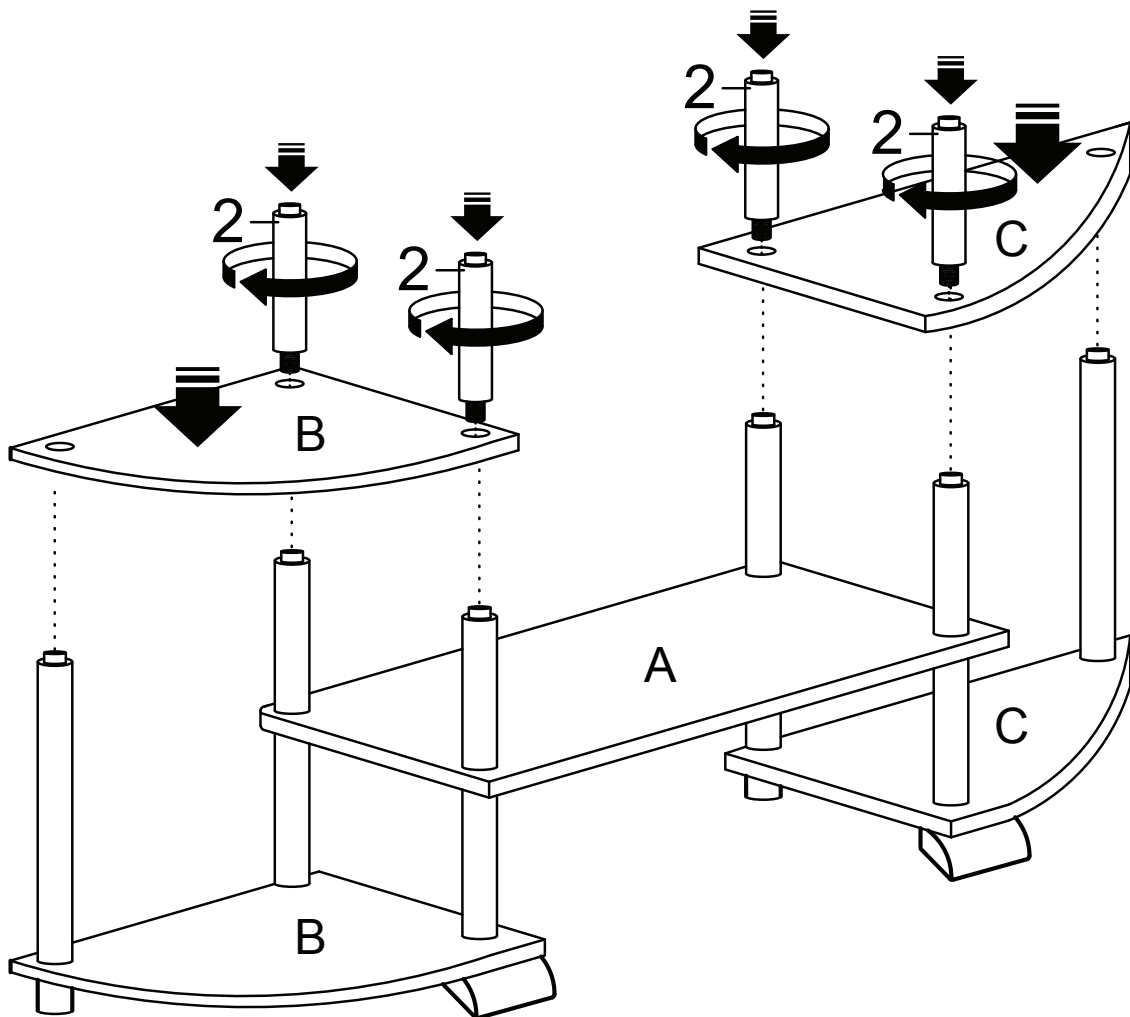

② SHORT POST - 4 PCS

**STEP 4**  
**ATTACH CENTER PANEL ( A ) AND 6 CAPS ( 3 ) TO ASSEMBLED**  
**STEP 3 AS SHOWN.**

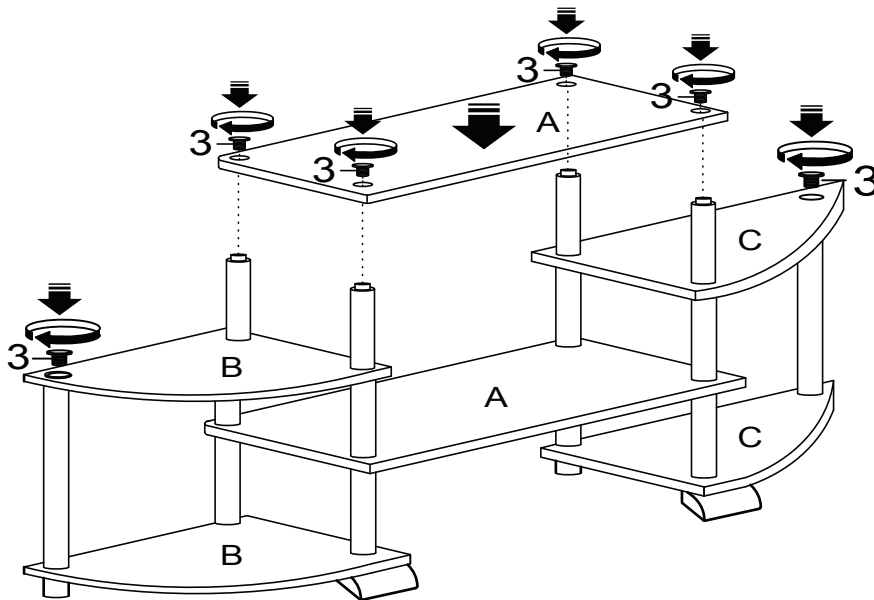

**③ CAP - 6 PCS**

This unit is intended for use only with the products and maximum weights indicated. Use with other products or products heavier than the maximum weights indicated may result in instability causing possible injury. Furniture can tip over or break if improperly moved. Have a friend help to lift and carry the unit to its new location.

Do you have any questions ? Missing small parts or hardware ?  
If you need assistance with the assembly of your  
ENTERTAINMENT CENTER please e-mail our  
Customer Service Department at:  
**support@fourstari.com**  
or call us at **(508) 435-4830**  
or **(800) 639-3803**

Please include the following information in your email:  
• Where item was purchased  
• Item, model, style or SKU number listed on instructions  
or box  
• Part number, description of the part and quantity needed

This information will help us get the proper part to you faster