


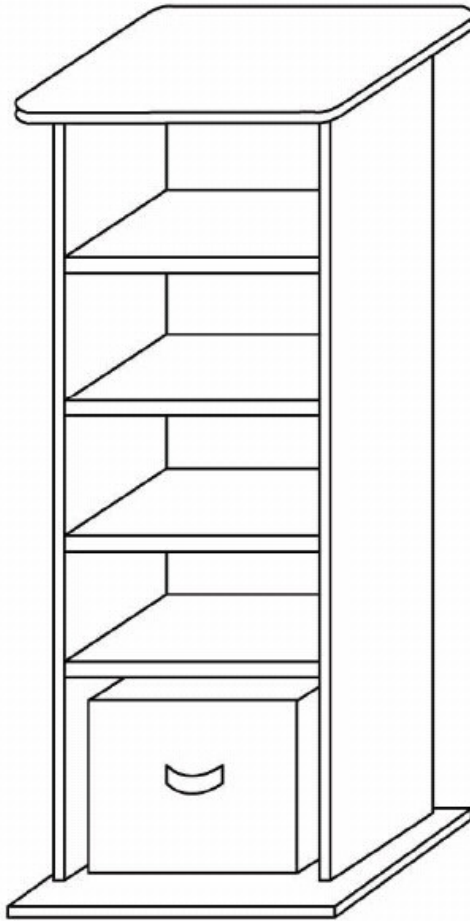

fourstargroup





 
 


 
 





MODEL: 11220888B

MEDIA STORAGE TOWER



Warning: To avoid any injury to the children, do not put object more than 10 lbs on the top of this CD rack.

PARTS AND HARDWARE

A		Bottom panel	1PC
B		Top panel	1PC
C		Shelf	4PCS
D		Left side panel	1PC
E		Right side panel	1PC
F		Rear panel	1PC
G		Wood screw	2PCS
H		Wood dowel	8PCS
I1/I2		Cam lock pin/ Cam lock	2PCS/2PCS
J		Shelf holding pins	16PCS
K		Foot nails	4PCS
L		Pin	10PCS
M		Storage bin	1PC


ASSEMBLY INSTRUCTIONS

STEP 1.

1.1 Put foot nail (K) onto bottom panel (A) as show.

1.2 Attach bottom panel (A) to left side panel (D) and right side panel (E) using wood screw (G) and wood dowel (H) as show.

Bottom

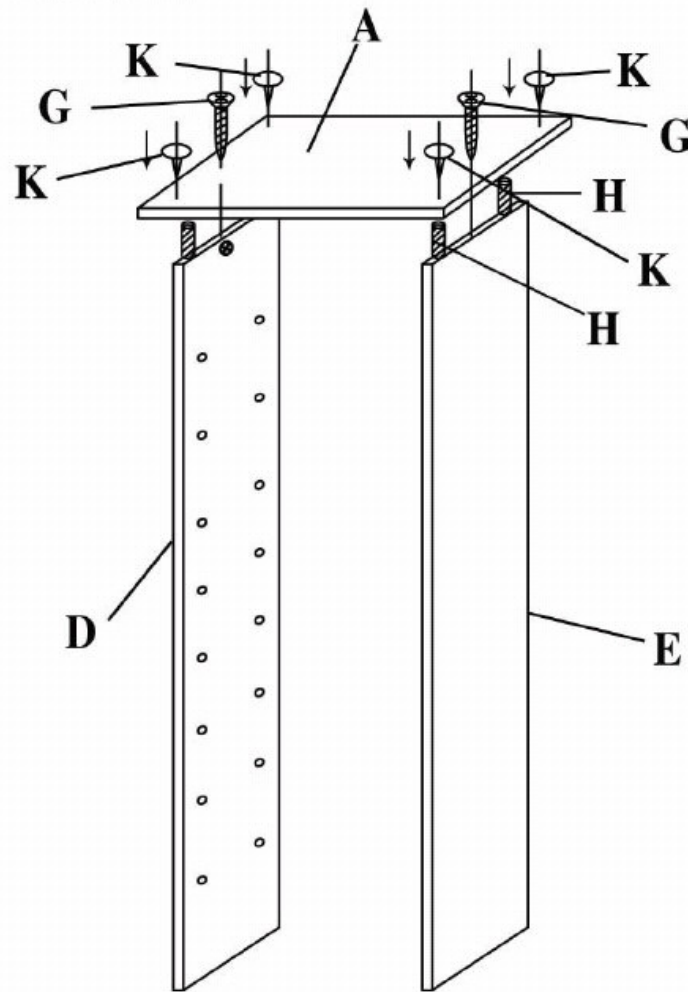


Top

1


STEP 2.

Place media tower frame (step1) bottom side down, attach top panel (B) to left side panel (D) and right side panel (E) using cam lock screw (I1) / (I2) and wood dowel (H) as show,

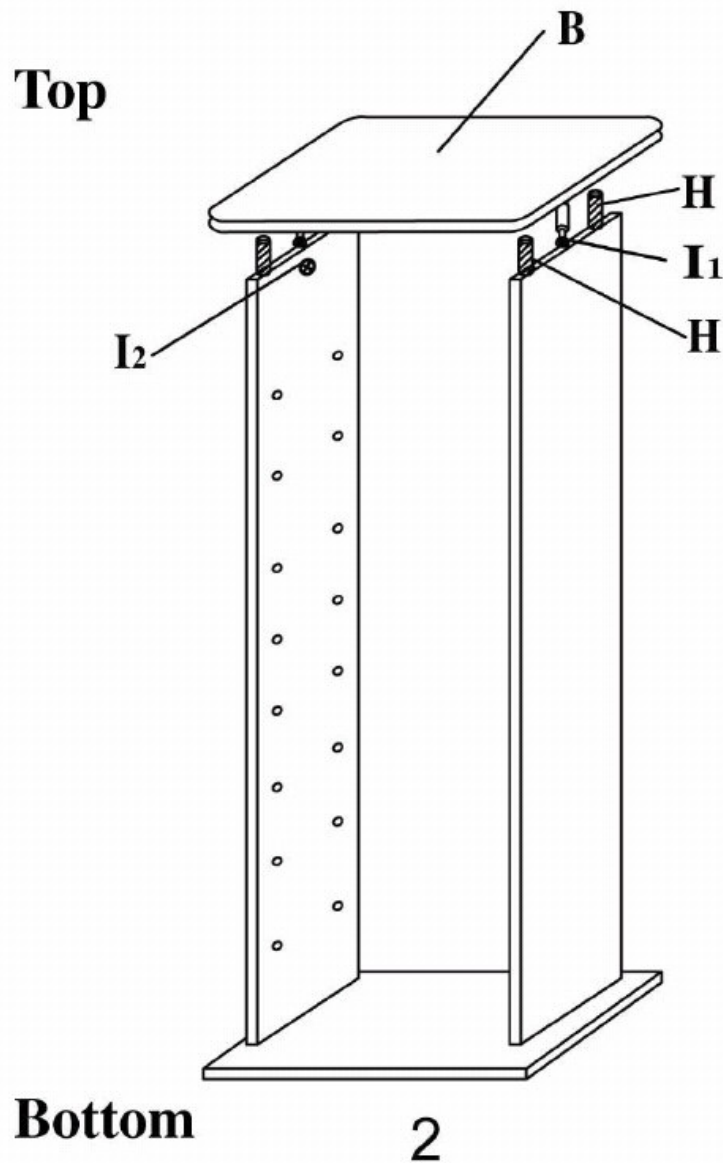

STEP 3.

Attach rear panel (F) to frame (STEP2) using pins (L) as show.

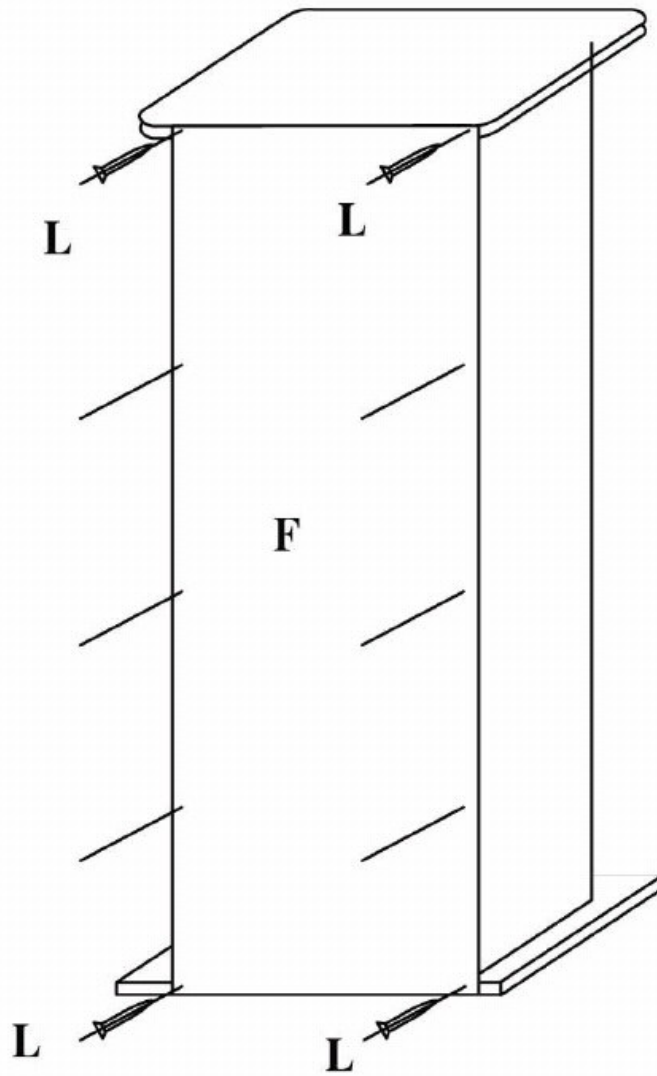


3

STEP 4.

4.1 Attach shelf holding pin (J) onto the hole of each side panel as show.

4.2 Put shelves (C) and storage bins (M) into media storage tower as show.

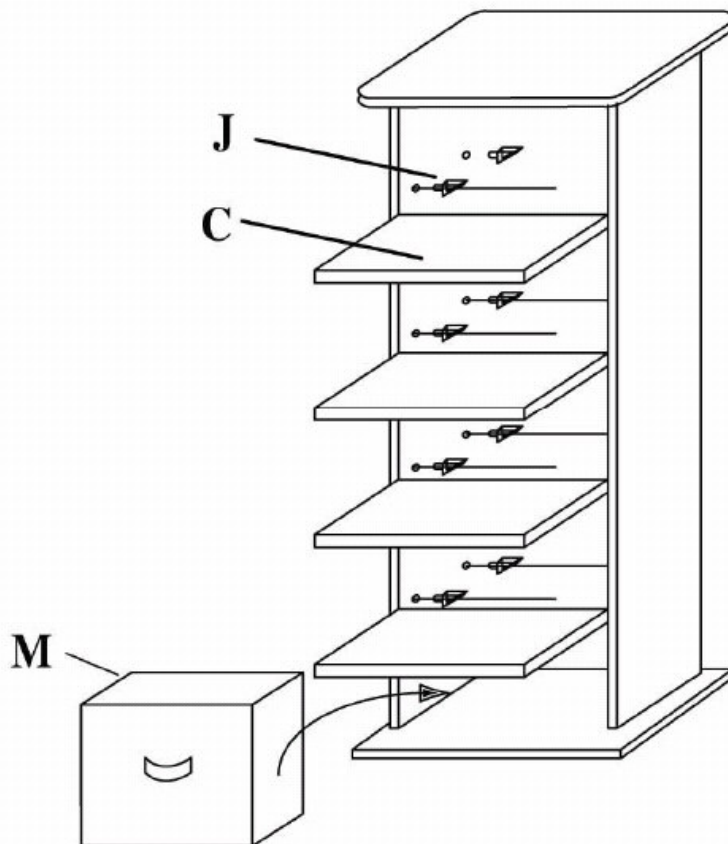

4

Do you have any questions? Missing small parts or hardware?

If you need assistance with the assembly of your
MEDIA STORAGE TOWER

please e-mail our Customer Service

Department at:

support@fourstari.com

or call us at (508) 435-4830

or (800) 639-3803

Please include the following information in your email:

- Where item was purchased
- Item, model, style or SKU number listed on instructions or box
- Part number, description of the part and quantity needed

This information will help us get the proper part to you faster

6