










fourstargroup



MODEL: 11220927

PHOTO STORAGE ACCENT TABLE


PARTS AND HARDWARE

A.	Top panel (1 PC)	
B.	Side panel (2 PCS)	
C.	Bottom panel (2 PCS)	
D.	Top shelf (3 PCS)	
E.	Wood screw (12 PCS)	
F.	Photo frame (3 PCS)	
G.	Storage bin (2 PCS)	

ASSEMBLY INSTRUCTIONS

STEP 1

ATTACH TOP PANEL(A),TOP SHELVES(D) AND BOTTOM SHELVES(C) TO SIDE PANEL(B) USING WOOD SCREWS (E) AS SHOWN.

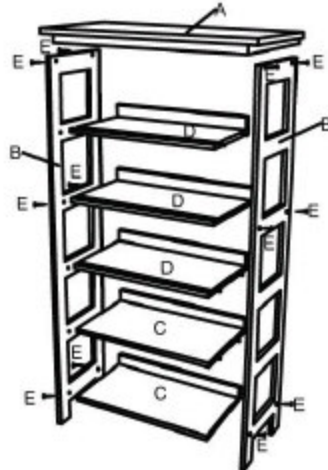

***IMPORTANT: DO NOT TIGHTEN ALL SCREWS ON THIS STEP**

STEP 2


ATTACH PHOTO FRAMES (F) ON THE GROOVE OF EACH TOP SHELVES (D) AS SHOWN



***IMPORTANT: TIGHTEN ALL SCREWS ON THIS STEP.**

STEP 3

PUT STORAGE BINS (G) ON EACH BOTTOM SHELVES AS SHOWN.

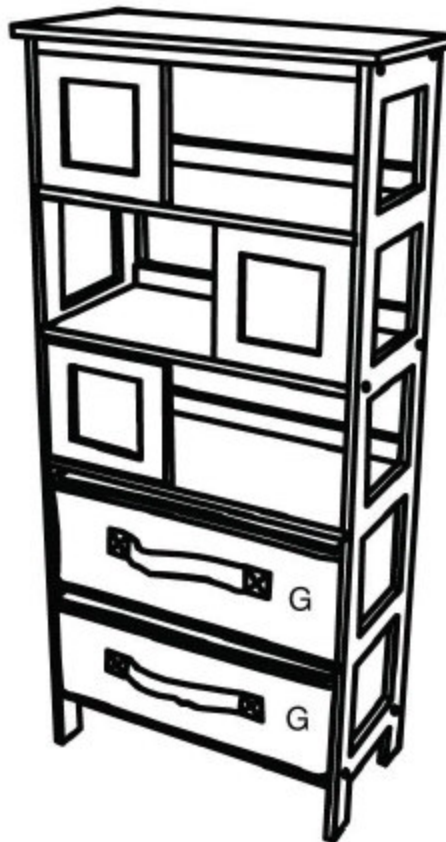

Do you have any questions ? Missing small parts or hardware ?

If you need assistance with the assembly of your

PHOTO STORAGE ACCENT TABLE please e-mail our

Customer Service Department at:

support@fourstari.com

or call us at (508) 435-4830

or (800) 639-3803

Please include the following information in your email:

- Where item was purchased
- Item, model, style or SKU number listed on instructions or box
- Part number, description of the part and quantity needed

This information will help us get the proper part to you faster