 


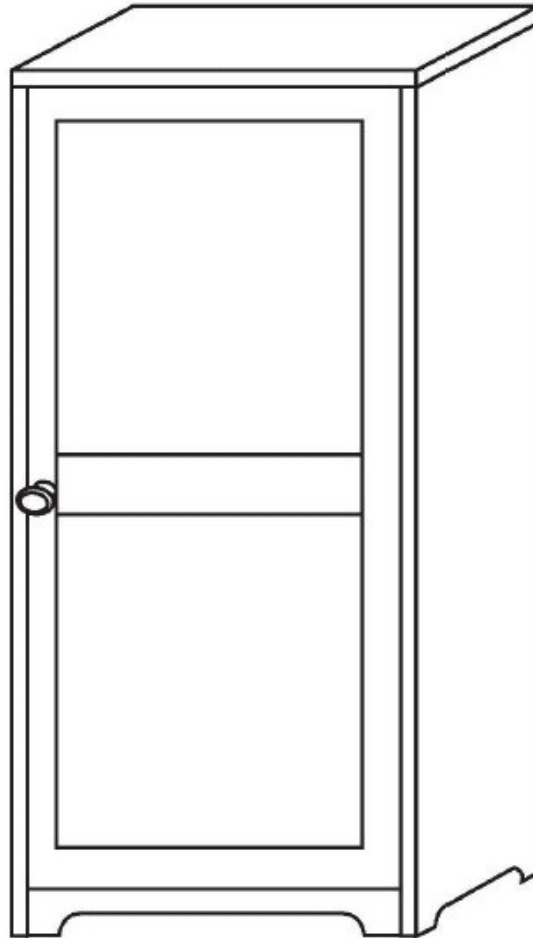

 
 
 
 
 



 


 




 

 




fourstargroup



MODEL: 11221028FF

WOODEN PANTRY

PARTS LIST AND HARDWARE

<p>A. Wood dowel 18PCS</p> 	<p>B. Wood screw 12PCS</p> 	<p>C. Cam lock 4PCS</p> 
<p>D. Hinge 2PCS</p> 	<p>E. Hinge screw 12PCS</p> 	<p>F. Knob with screws 1PC</p> 
<p>G. Shelf holder 8PCS</p> 	<p>H. Pin 26PCS</p> 	<p>I. Screw cap 1PC</p> 
<p>J. Magnet with screw 2PCS</p> 	<p>K. Wall plate 2PCS</p> 	<p>L. Wall screw with nut 2PCS</p> 
<p>M. Metal plate 2PCS</p> 	<p>① Left side panel 1PC</p> 	<p>② Middle Shelf 1PC</p>  <p>③ Bottom Shelf 1PC</p> 
<p>④ Shelf apron 1PC</p> 	<p>⑥ Right side panel 1PC</p> 	<p>⑦ Top panel 1PC</p> 
<p>⑤ Bottom apron 1PC</p> 	<p>⑨ Removable shelf 1PC</p> 	<p>⑩ Rear Panel 1PC</p> 
<p>⑧ Door panel 1PC</p> 		

 
ASSEMBLY INSTRUCTIONS

STEP 1.1

Attach Middle shelf (2), Bottom shelf (3) Shelf Apron (4) and Bottom Apron (5) to Left side panel (1) and Right side panel (6) using Wood Dowels (A) and Wood Screws (B) as shown.


STEP 1.2

Attach Screw Cap (I) to cover each screw hole as shown.

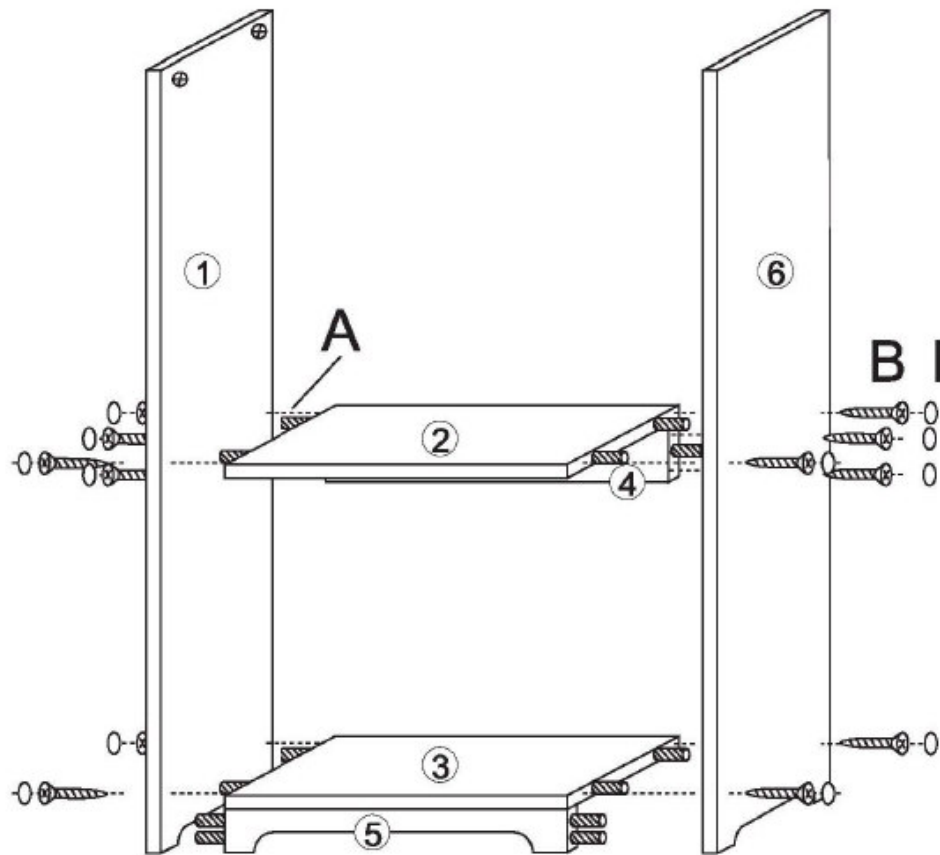

STEP 2

 Attach Top Panel (7) to each side panel using Wood Dowels (A) and Cam locks (C) as shown.

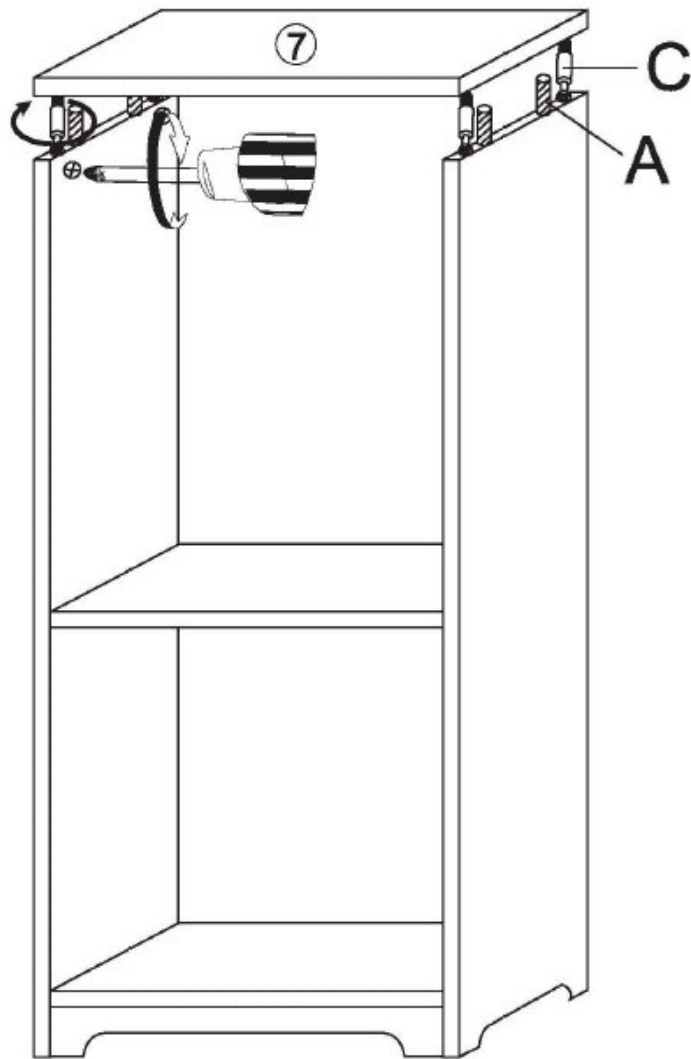


STEP 3.

3.1 Attach Hinge (D) to Right side panel (6) and Door Panel (8) using Hinge Screws (E) as shown.

3.2 Attach Knob (F) to Door Panel (8) using knob screws as shown.

3.3 Insert Shelf Holders (G) to each side panels, then place removable shelves (9) on it as shown.

 
3.4 Attach Magnet (J) to Top Panel (7) and Bottom Panel (3) using magnet screws and attach Metal plate (M) to the back of the door as shown.

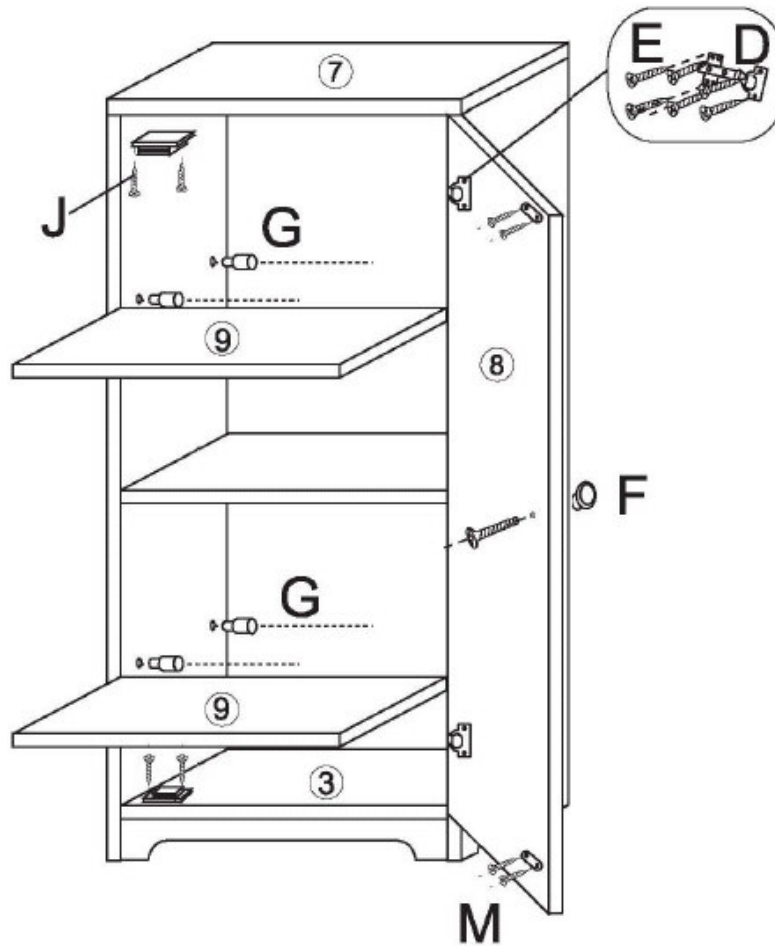

Step 4

Attach Rear Panel (10) to back of the pantry frame using Pins (H) as shown.

*** In order to avoid the tilting issues, you can use the provided Wall Plate (K) and Screw with nut (L) to fix this product on the wall as shown ***

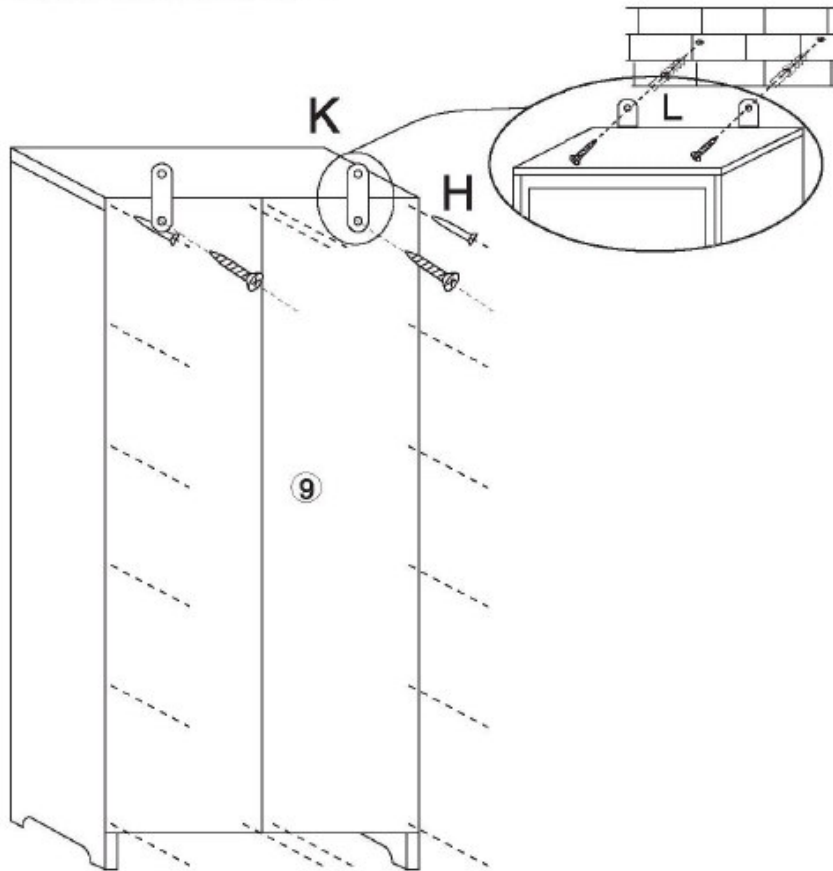 

Do you have any questions? Missing small parts or hardware?
If you need assistance with the assembly of your
WOODEN PANTRY please e-mail our
Customer Service Department at:
support@fourstari.com
or call us at (508) 435-4830
or (800) 639-3803

Please include the following information in your email:

- Where item was purchased
- Item, model, style or SKU number listed on instructions or box
- Part number, description of the part and quantity needed

This information will help us get the proper part to you faster