 




fourstargroup

ITEM: MS30-084-008-16

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE. THIS INSTRUCTION MANUAL IS PRINTED ON RECYCLED PAPER USING EARTH FRIENDLY SOY BASED INK.

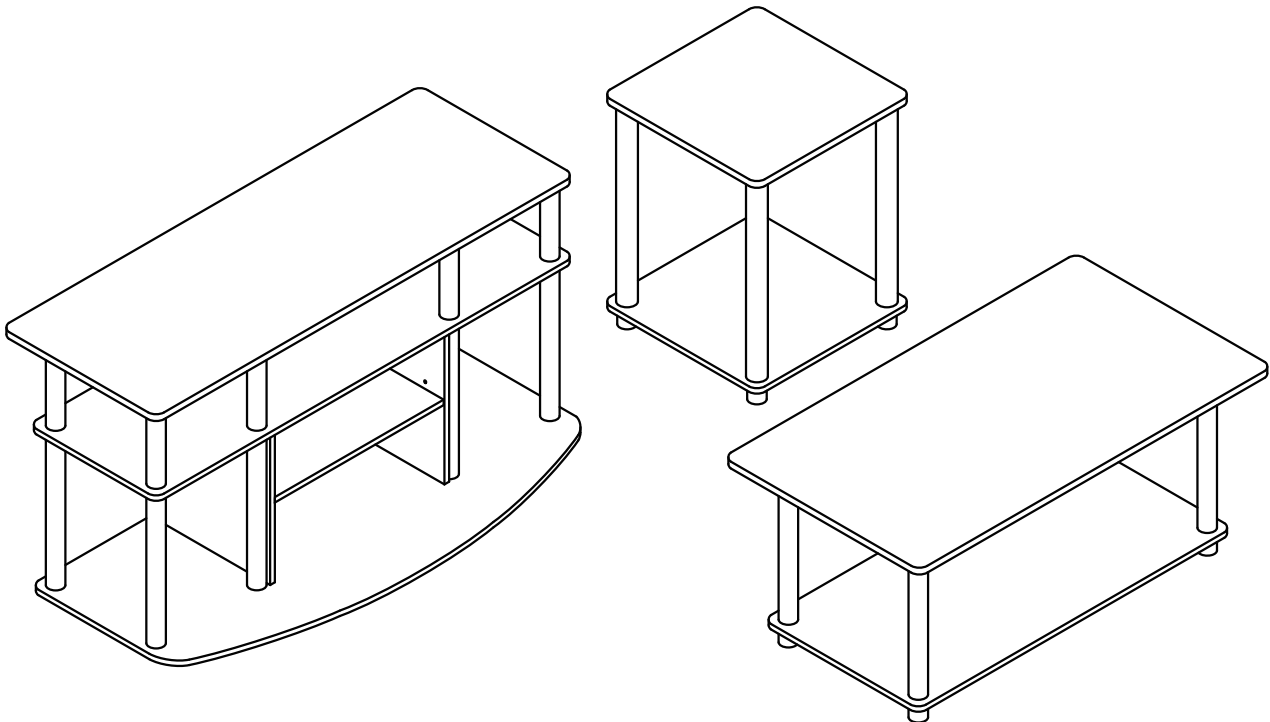

UPC#4893948113408 MODEL: MS30-084-008-16

## TV STAND & TABLE SET

**STOP** Do not return to the store

Do you have any questions? Missing small parts or hardware? If you need assistance with the assembly of your TV STAND & TABLE SET please e-mail our Customer Service Department at: [support@fourstari.com](mailto:support@fourstari.com) or call us at 1-800-639-3803

Please let customer service know:

1. You purchased this item from Wal-Mart
  2. The item description is: TV STAND & TABLE SET
  3. The item number is MS30-084-008-16
  4. The part number/letter and quantity needed
- If you have this information ready, we will be able to process your request promptly. Thank you

LOT#0308-00000

DATE PURCHASED

/

 
/

## CAUTION :

1. Read this instruction manual and keep it for reference.
2. Adult supervision is required due to small parts.
3. Assemble on soft surfaces to prevent damage to the product finish.
4. Recommended two people to assemble the product.
5. Estimated half hour for assembly.
6. Make sure all parts are included before assembly.
7. Call our toll-free customer service if needed.


## ASSEMBLY TOOLS REQUIRED

HAMMER






OR

    RUBBER HAMMER

 
 
 




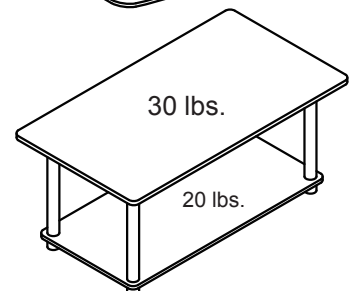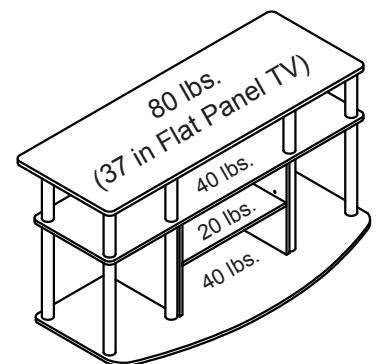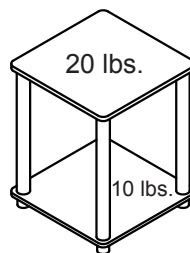












   This unit is intended for use only with the products and maximum weights indicated. Use with other products or products heavier than the maximum weights indicated may result in instability causing possible injury. Furniture can tip over or break if improperly moved. Have a friend help to lift and carry the unit to its new location.



# PARTS AND HARDWARE

  BEFORE YOU BEGIN, PLEASE FOLLOW ASSEMBLY INSTRUCTIONS CAREFULLY.  
FOLLOW THEM STEP BY STEP.



	Part Name	Line-art Drawing	Size	Quantity	Material	Finish	Finished Edges
1	Long Tube		3.8 x 3.8 x 47cm	4	PE	Black	
2	Medium Tube		3.4 x 3.4 x 37cm	12	PE	Black	
3	Short Tube		3.4 x 3.4 x 19.2cm	8	PE	Black	
4	Long Foot		3.4 x 3.4 x 4.8cm	8	PE	Black	
5	Short Foot		3.4 x 3.4 x 2.4cm	8	PE	Black	
6	Foot		4 x 4 x 2.2cm	4	PE	Black	
7	Wooden Dowel		0.6 x 0.6 x 3cm	8	Wood	Brown	
8	Shelf Support		0.9 x 0.9 x 1.5cm	4	PE	White	
9	Warning Label		5.6 x 6.4cm	1	Label	White	
A	Top Panel (Entertainment)		1.5 x 39.5 x 106.7cm	1	Particleboard	Black	4
B	Center Panel (Entertainment)		1.15 x 32 x 106.7cm	1	Particleboard	Black	4
C	Bottom Panel (Entertainment)		1.15 x 47 x 106.7cm	1	Particleboard	Black	4
D	Side Panel (Entertainment)		1.15 x 29 x 34cm	2	Particleboard	Black	2
E	Shelf Panel (Entertainment)		1.15 x 28.6 x 45cm	1	Particleboard	Black	2
F	Top Panel (Coffee Table)		1.5 x 50 x 90cm	1	Particleboard	Black	4
G	Shelf Panel (Coffee Table)		1.15 x 39.5 x 80cm	1	Particleboard	Black	4
H	Top Panel (End Table)		1.5 x 39.5 x 39.5cm	1	Particleboard	Black	4
I	Shelf Panel (End Table)		1.15 x 39.5 x 39.5cm	1	Particleboard	Black	4

# ASSEMBLY INSTRUCTIONS

  
## ENTERTAINMENT CENTER

### Step 1.

Attach SHORT TUBES (3) to TOP PANEL (A).

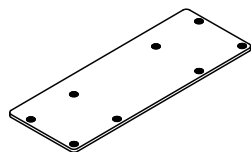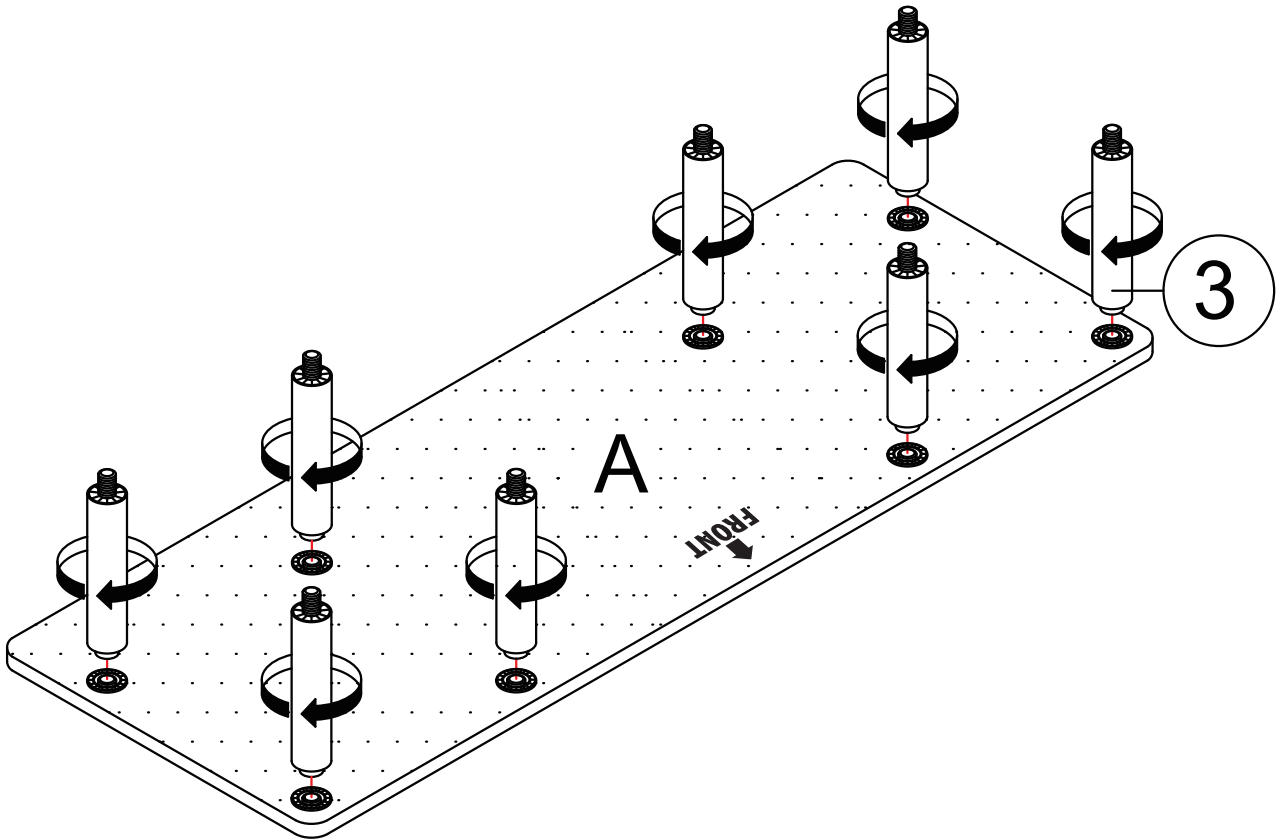



Ⓐ Top Panel - 1 PC

 


③ Short Tube - 8 PCS

**Step 2.**

  Attach CENTER PANEL (B) using MEDIUM TUBES (2).

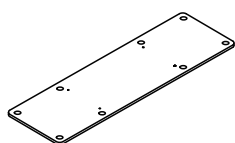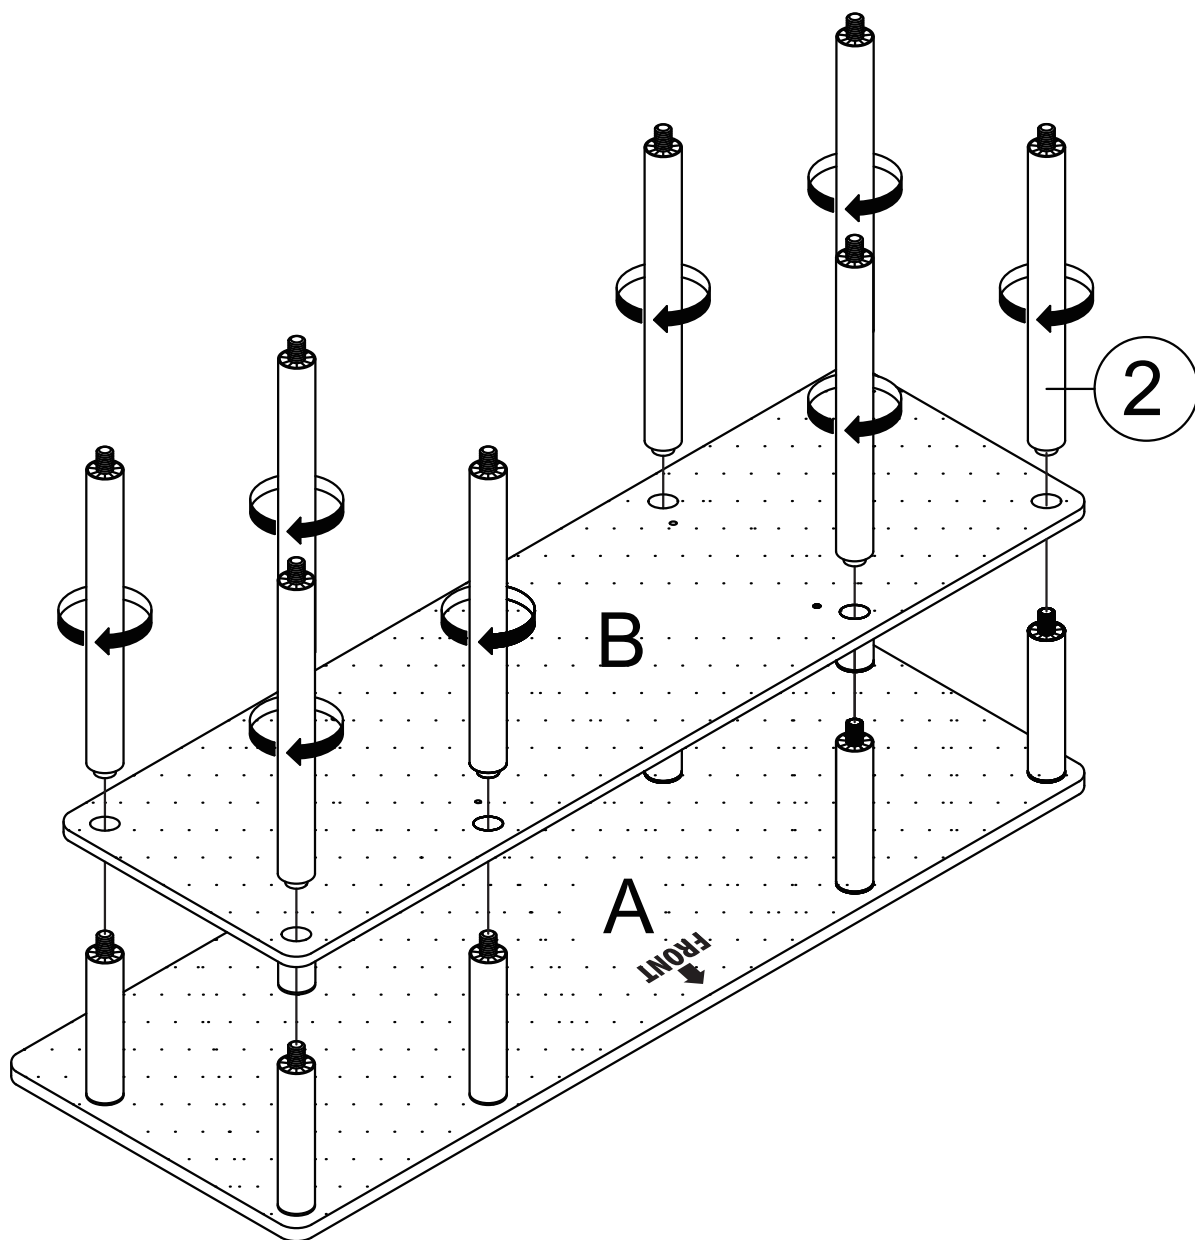



Ⓑ Center Panel - 1 PC

 

② Medium Tube - 8 PCS

**Step 3.**

  Insert WOODEN DOWELS (7) into SIDE PANEL (D).  
Next attach SIDE PANEL (D) to CENTER PANEL (B).

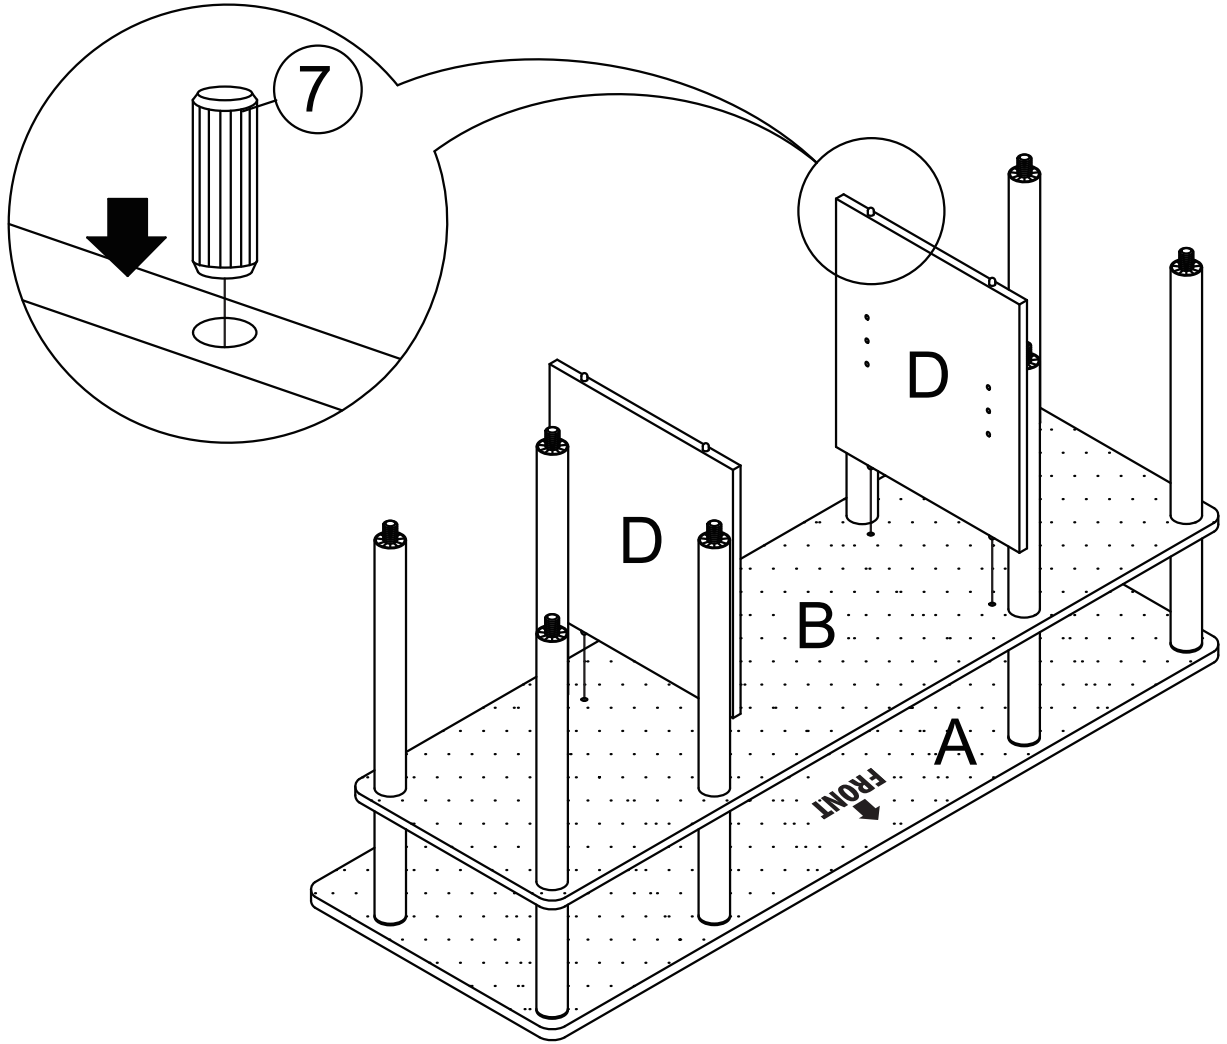



① Side Panel - 2 PCS



⑦ Wooden Dowel - 8 PCS

**Step 4.**

  Using a rubber hammer, attach FOOT (6) to BOTTOM PANEL (C).

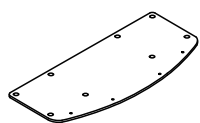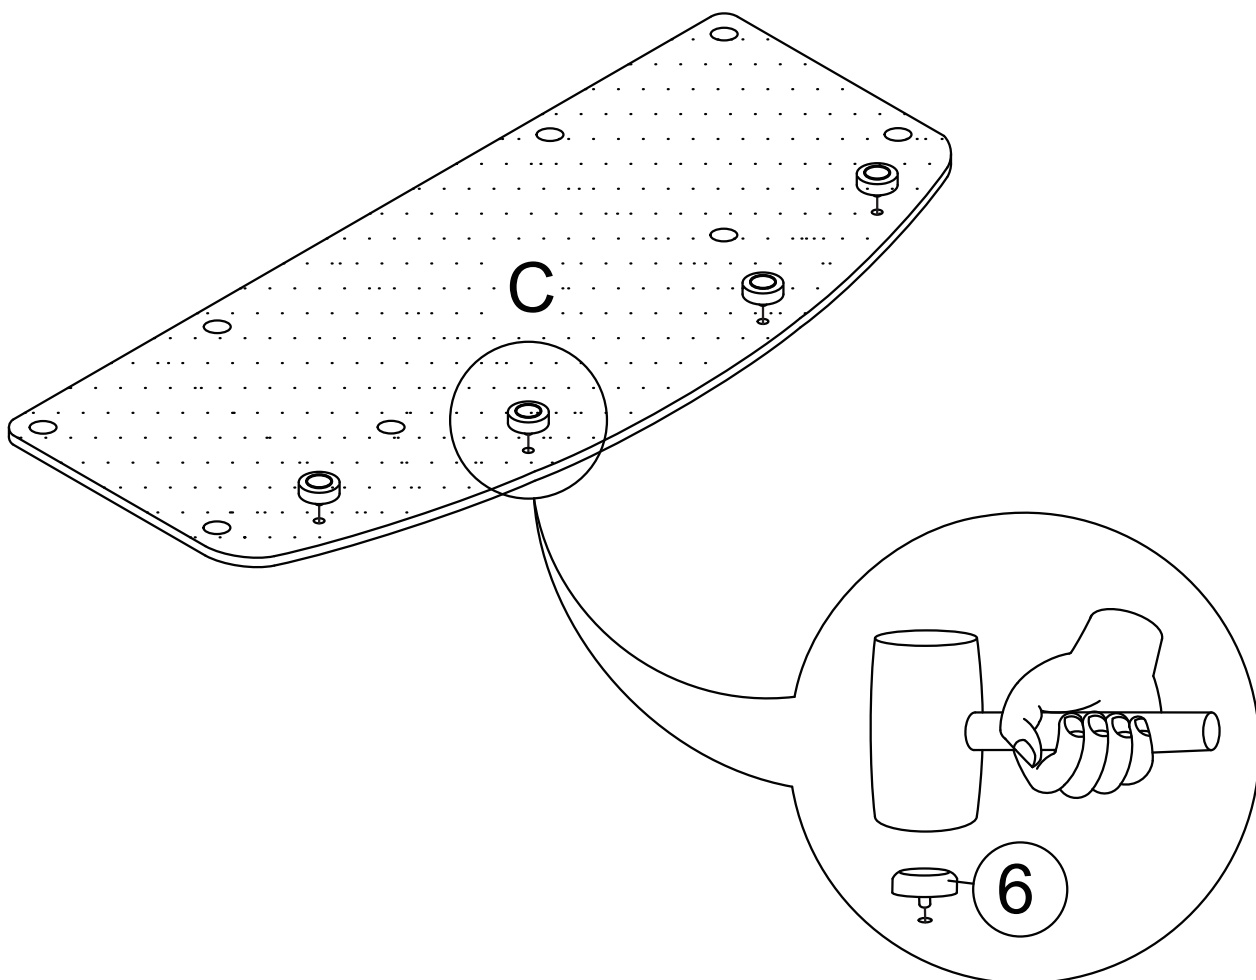



© Bottom Panel - 1 PC



⑥ Foot - 4 PCS

**Step 5.**

  Attach BOTTOM PANEL (C) using SHORT FOOT (5).

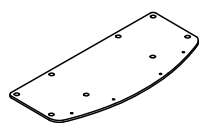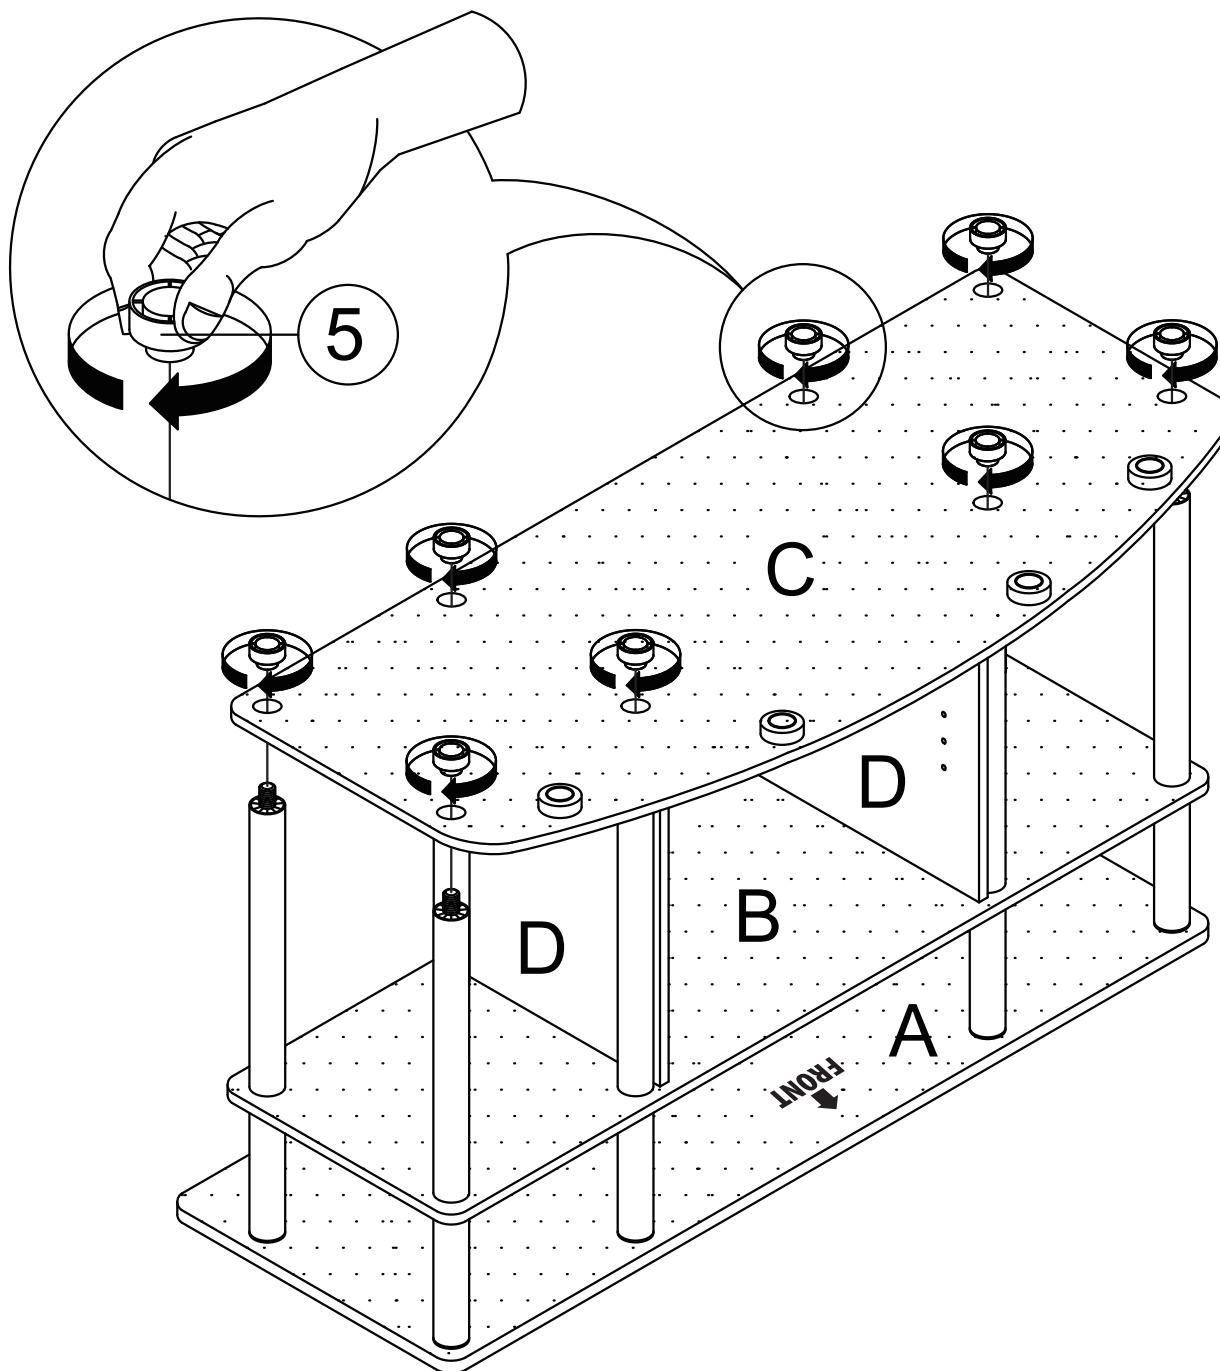

© Bottom Panel - 1 PC



⑤ Short Foot - 8 PCS





## Step 6.

  Insert SHELF SUPPORTS (8) into SIDE PANEL (D) and then add SHELF PANEL (E).

Apply the WARNING LABEL (9) to the TOP PANEL (A). You should be able to read the label when the TV is removed from the unit. When the TV is in place, it should hide the label. Peel off the backing and apply the label as shown in the diagram.

NOTE: This is a permanent label intended to last for the life of the product. Once applied, do not try to remove it.

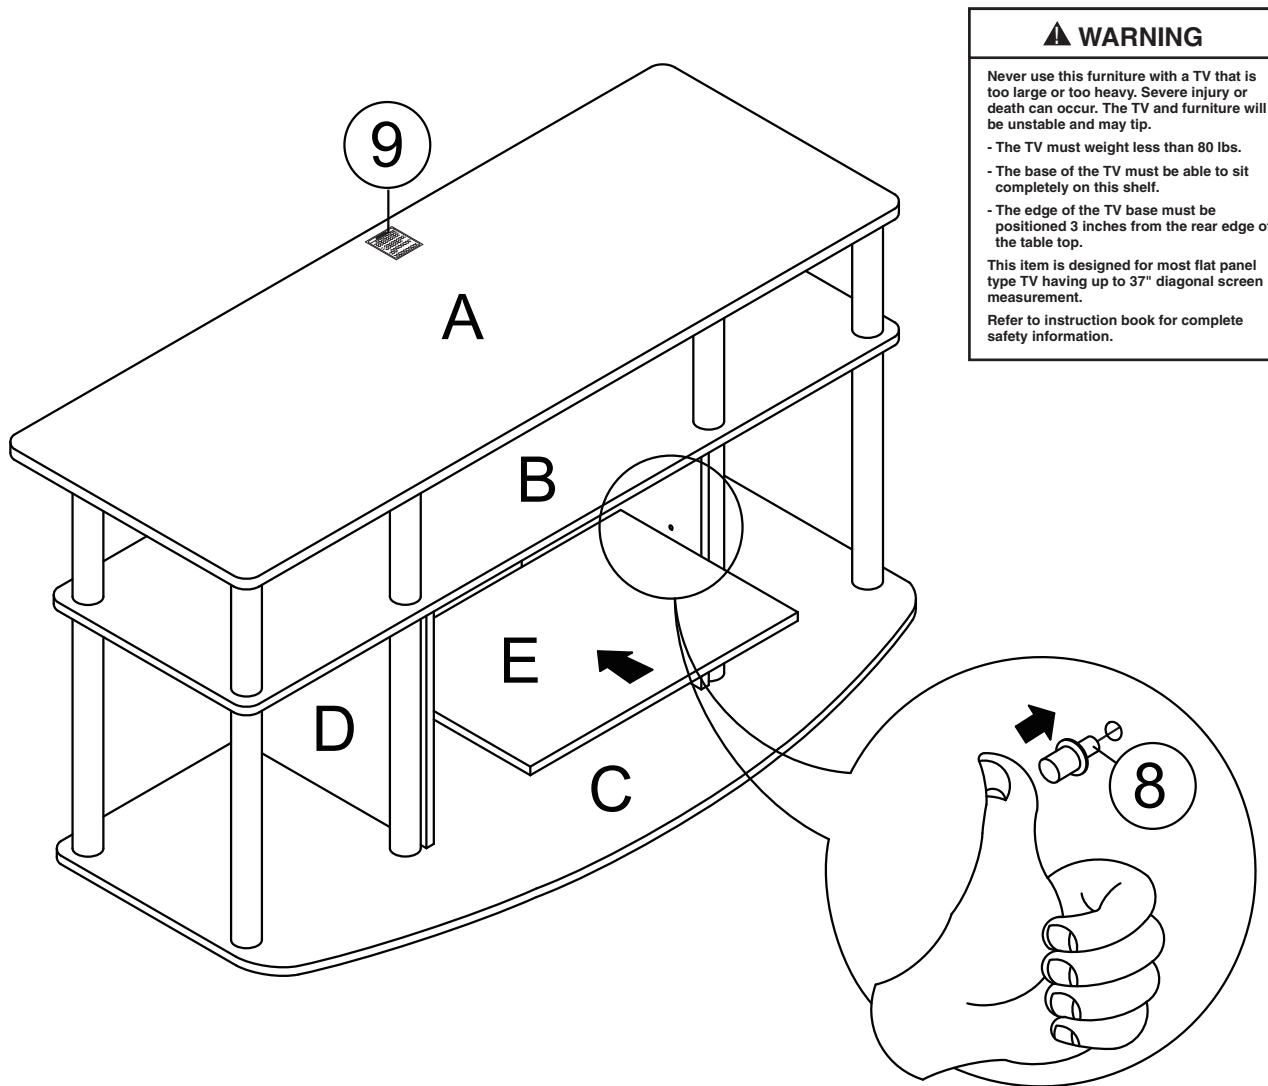

Ⓔ Shelf Panel - 1 PC



Ⓗ Shelf Support - 4 PCS





Ⓘ Warning Label - 1 PC


## COFFEE TABLE
  
### Step 7.

Attach MEDIUM TUBES (2) to TOP PANEL (F).

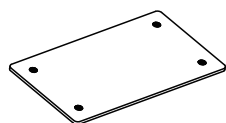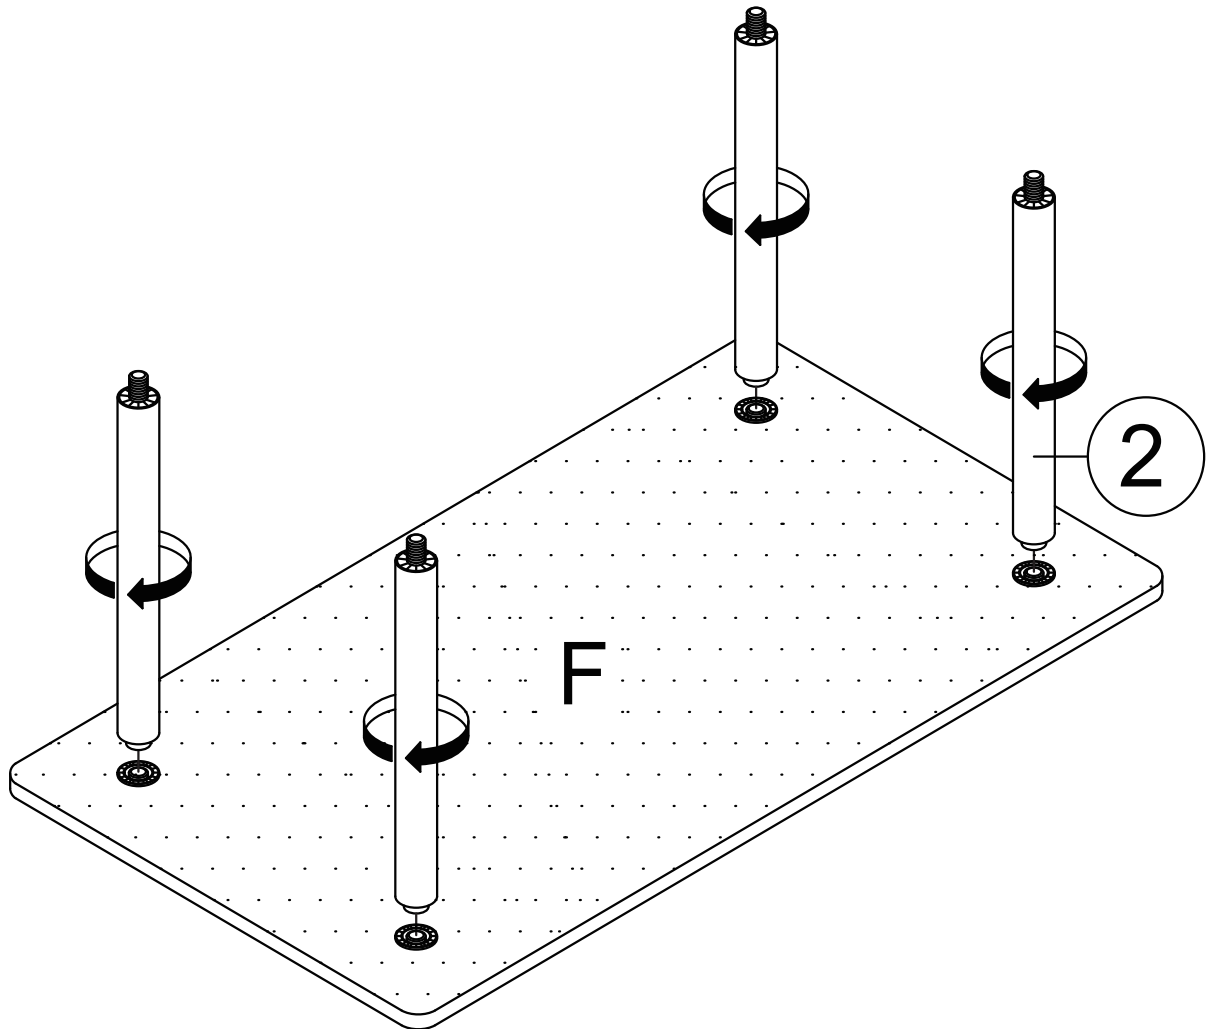



ⓕ Top Panel - 1 PC

 

② Medium Tube - 4 PCS

**Step 8.**

  Attach SHELF PANEL (G) using LONG FOOT (4).

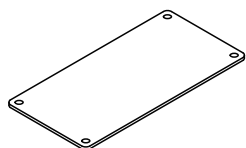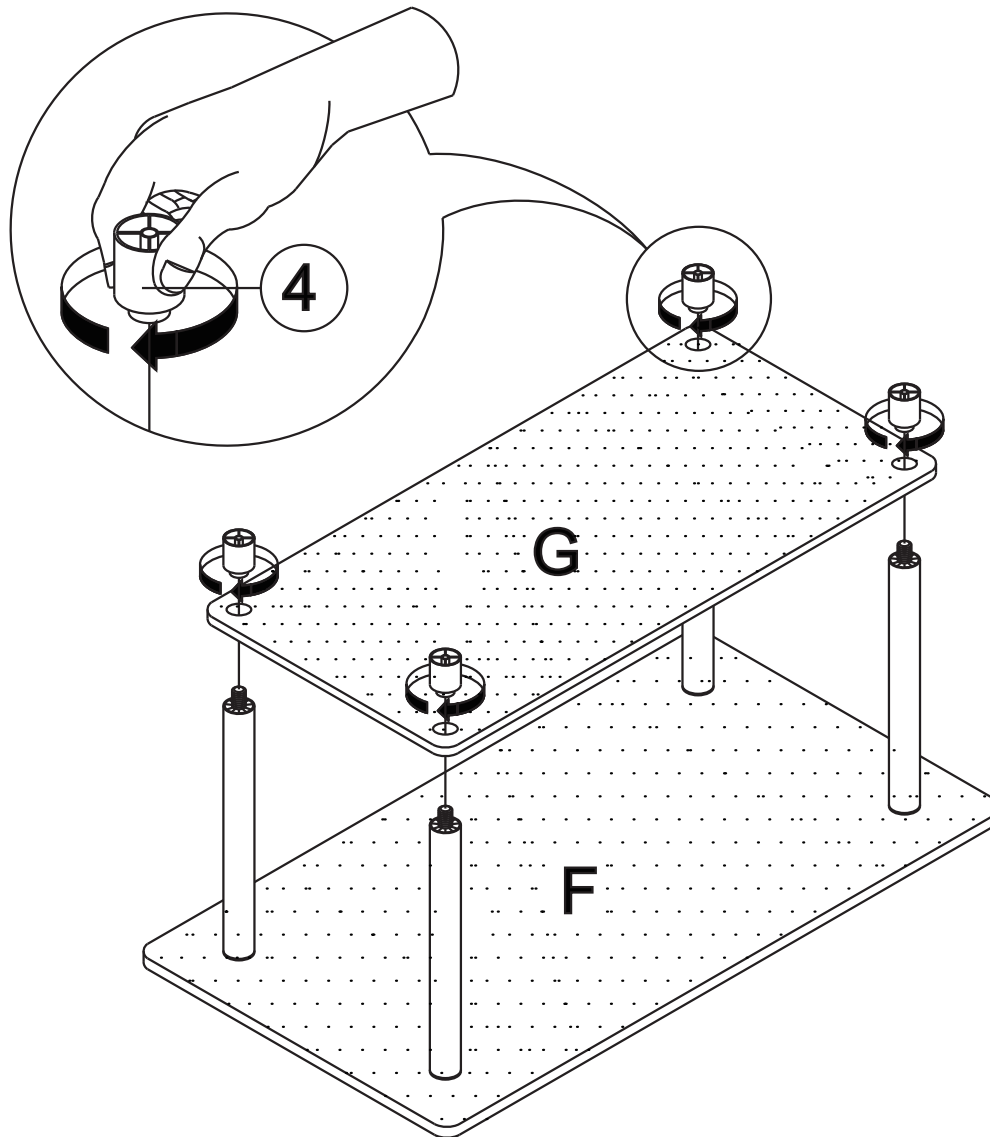



Ⓒ Shelf Panel - 1 PC

Ⓓ Long Foot - 4 PCS


## END TABLE
  
### Step 9.

Attach LONG TUBES (1) to TOP PANEL (H).

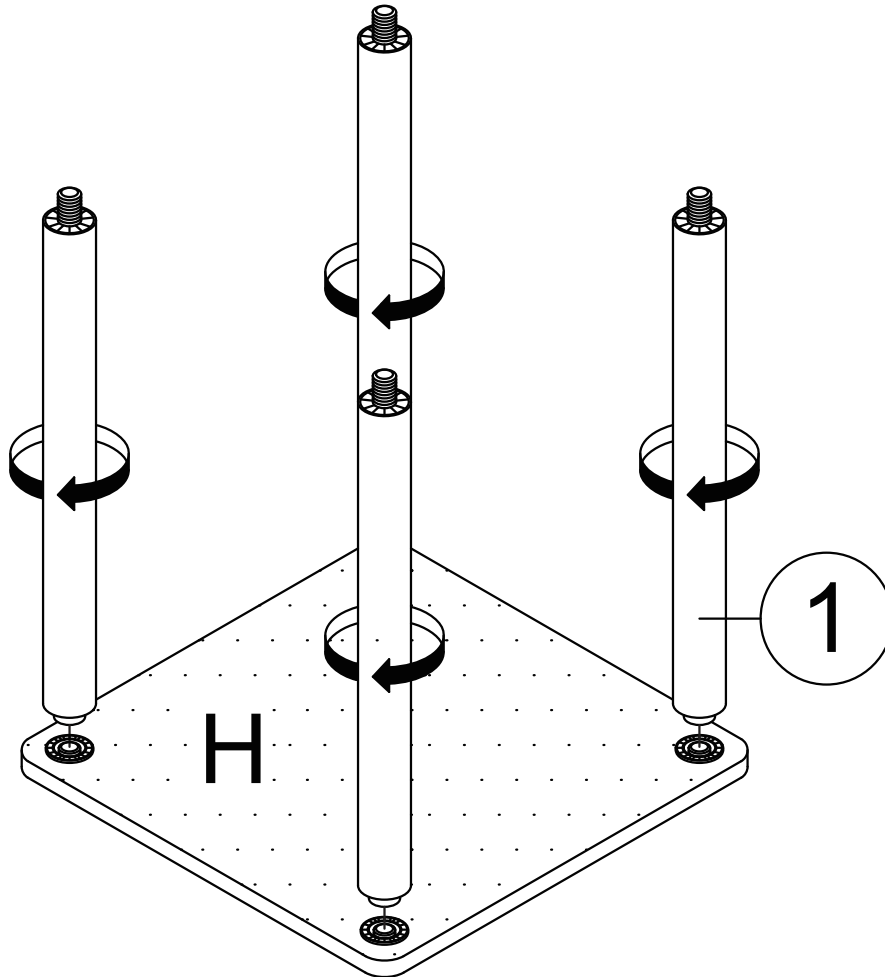



Ⓜ Top Panel - 1 PC

 

① Long Tube - 4 PCS

**Step 10.**

  Attach SHELF PANEL (I) using LONG FOOT (4).

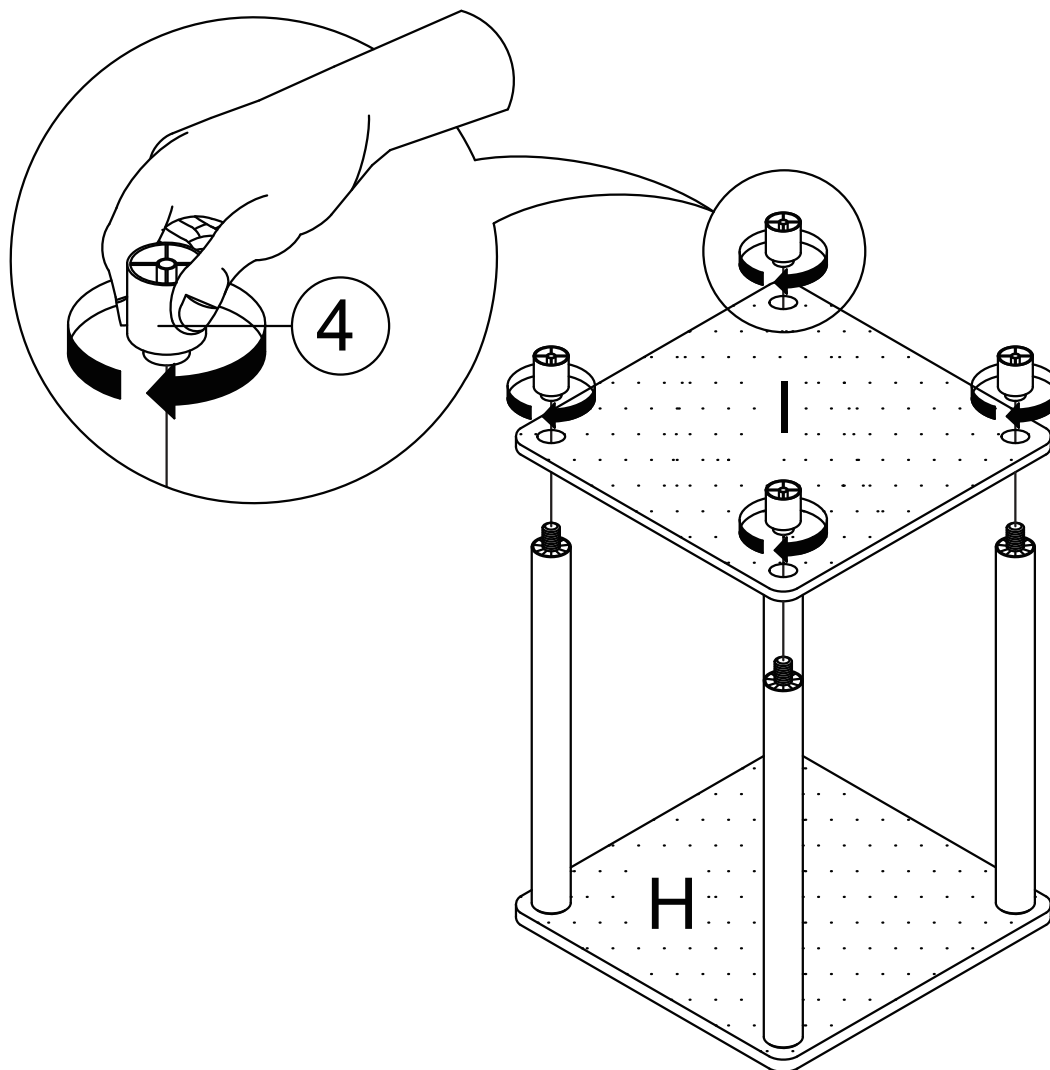





① Shelf Panel - 1 PC



④ Long Foot - 4 PCS

To clean the TV stand & table set, wipe with soft, dry cloth. Apply a small amount of cleaning solution to the cloth if required. Do not use abrasive cleaners in order to prevent scratching the surfaces.

    **NOTE:** The base of the TV unit must be 3 inches away from the rear edge of the top. Put the TV unit with equal distance side-to-side to ensure mounting stability. Failure to mount the TV unit properly can render the product unstable which may cause damage of injury.

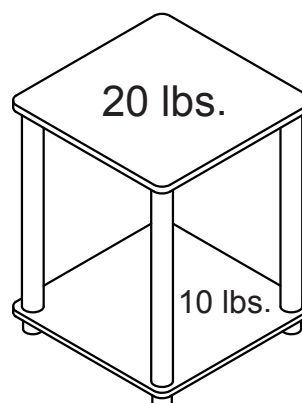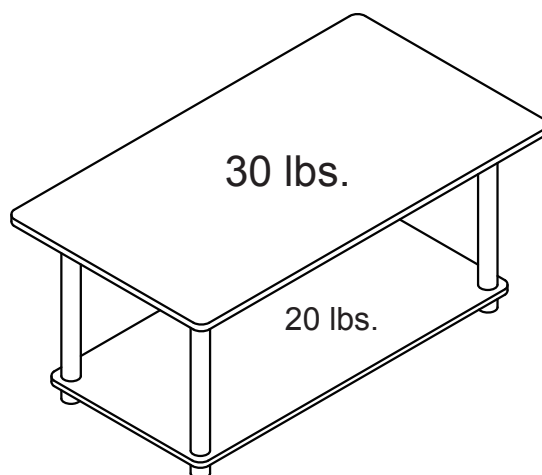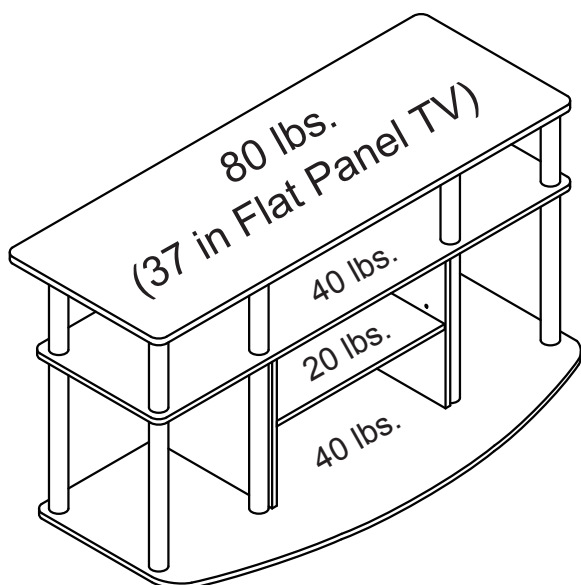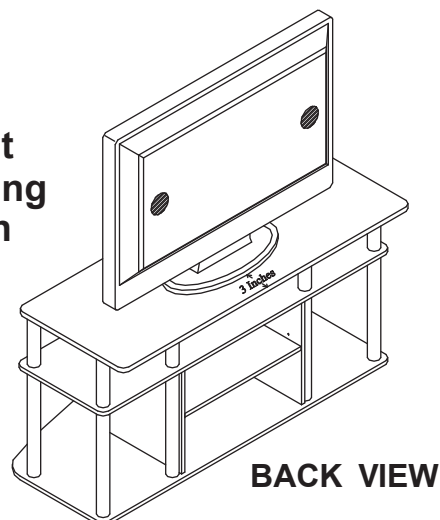

This unit is intended for use only with the products and maximum weights indicated. Use with other products or products heavier than the maximum weights indicated may result in instability causing possible injury. Furniture can tip over or break if improperly moved. Have a friend help to lift and carry the unit to its new location.

**Do you have any questions? Missing small parts or hardware? If you need assistance with the assembly of your TV STAND & TABLE SET please e-mail our Customer Service Department at: [support@fourstari.com](mailto:support@fourstari.com) or call us at 1-800-639-3803**