


Side door shelf

MODEL: 11224984E **HIGH BOY**

ENTERTAINMENT CENTER

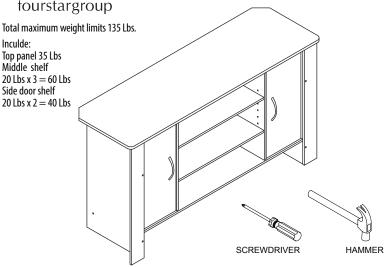

BEFORE YOU BEGIN, PLEASE READ ASSEMBLY INSTRUCTIONS CAREFULLY. FOLLOW THEM STEP BY STEP.

- 1. ADULT SUPERVISION IS REQUIRED DUE TO SMALL PARTS. CARE SHOULD BE TAKEN IN THE UNPACKING AND ASSEMBLY OF THE PRODUCT.
- 2. ASSEMBLE ON SOFT SURFACES TO PREVENT DAMAGE TO THE PRODUCT FINISH.
- 3. MAKE SURE ALL PARTS ARE INCLUDED BEFORE ASSEMBLY.
- 4. PLACE ENTERTAINMENT CENTER ON FLAT, LEVEL SURFACE, ENTERTAINMENT CENTER WILL NOT BE STABLE ON HIGH PILE CARPETING OR OUT OF LEVEL SURFACES. NOT FOR USE ON HIGH PILE CARPETING OR OTHER SIMILAR SURFACES.
- 5. SHOULD YOU HAVE REASON FOR CONCERN FOR STABILITY AND SECURITY, TIPPING OR KNOCKING OF THE TELEVISION DUE TO, BUT NOT LIMITED TO, SMALL CHILDREN, PETS OR LOCATION, PLEASE TETHER TELEVISION TO THE WALL TO PREVENT IT FROM TIPPING. TETHER NOT INCLUDED, REFER TO TELEVISION USER'S MANUAL OR AFTER MARKET ACCESSORY DEALERS.
- 6. NOT FOR USE WITH TUBE STYLE, CRT TELEVISIONS. WEIGHT LIMIT 135 LBS.

Do you have any questions? Missing small parts or hardware? If you need assistance with the assembly of your HIGH BOY ENTERTAINMENT CENTER please e-mail our Customer Service Department at: support@fourstari.com or call us at (800) 639-3803 or

visit www.fourstari.com


- Please include the following information when contacting us:
- · Where item was purchased
- · Item, model, style or SKU number listed on instructions or box
- Part number, description of the part and quantity needed This information will help us get the proper part to you faster.

PARTS LIST AND HARDWARE


NO	PARTS LIST	QTY
Α	TOP PANEL	1pc
В	SIDE PANEL	2pcs
С	CENTER LEFT PANEL	1pc
D	CENTER RIGHT PANEL	1pc
E	SHELF PANEL	2pcs
F	BOTTOM PANEL	1pc
G	LEFT DOOR PANEL	1pc
Н	RIGHT DOOR PANEL	1pc
I	FRONT PANEL	2pc
J	BACK PANEL	2pcs
K	LEG PANEL	1pc

NO	HARDWARE LIST		QTY
1	C/B SCREW M4x32mm		14pcs
2	DOWEL M5x20mm		10pcs
3	MAGNECTIC CATCHES		2pcs
4	TAPPING SCREW M5x8mm	₽	2pcs
5	(SPRING) DOOR HOLDER	A	4pcs
6	SHELF SUPPORT	D	8pcs
7	HANDLE (MOON)		2pcs
8	P/H SCREW M3.6x15mm	O Marie	4pcs
9	NAIL LEG	0	7pcs
10	POWER PIN		16pcs
11	GLUE		1pc


INSTALL DOWELS (2) INTO PANELS (B) (C) (D) & (I)

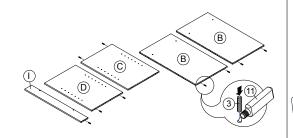


- INSTALL DOOR HOLDERS (5) INTO DOOR
- PANELS (G) & (H), AS SHOWN. INSTALL SCREW (4) TO DOOR PANELS (G) & (H),
- AS SHOWN.
 INSTALL HANDLE (7) TO DOOR PANELS (G) & (H) USING SCREW (8), AS SHOWN.

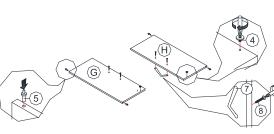


INSTALL MAGNECTIC CATCHES (3) TO TOP

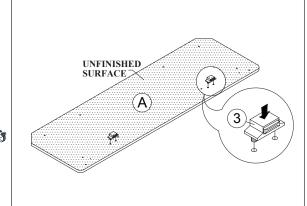


ATTACH LEG PANEL (K) TO BOTTOM PANEL (F)

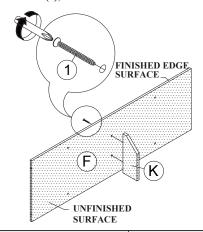


ATTACH PANELS (C) & (D) TO BOTTOM PANEL (F) USING SCREW (1), AS SHOWN.

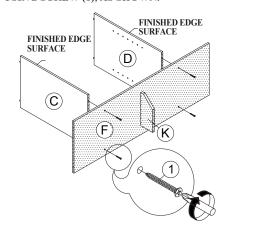

ATTACH ASSEMBLED UNIT TO TOP PANEL (A) USING GLUE (11), AS SHOWN.

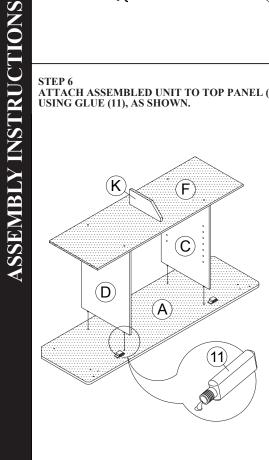


- ATTACH SIDE PANELS (B) TO TOP PANEL (A) USING GLUE (11), AS SHOWN.
- CAUTION: PANEL (B) SMALL HOLES OUTWARD

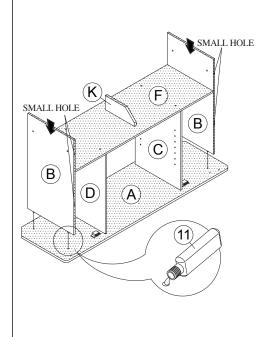


STEP 8

- ATTACH SIDE PANELS (B) TO BOTTOM PANEL (F) USING SCREWS (1), AS SHOWN.
- ATTACH PANELS (I) TO TOP PANEL (A) USING GLUE (11), AS SHOWN.

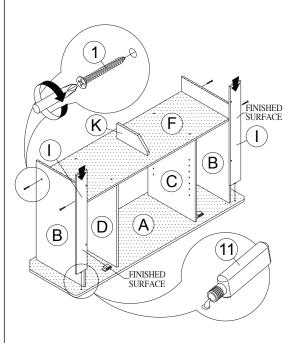


- ATTACH PANELS (I) TO SIDE PANELS (B) USING
- SCREW (1), AS SHOWN. INSTALL NAIL LEGS (9) TO PANELS (B) (I) & (K),

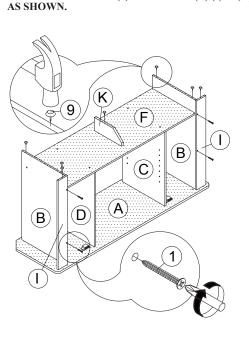


STEP 10

- ATTACH BACK PANELS (J) TO THE BACK POSITION OF ASSEM-**BLED UNIT USING POWER PIN**
- (10), AS SHOWN.

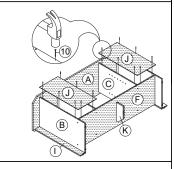

 - ATTACH DOOR PANELS (G) & (H) TO PANEL (A) & (F), MAKE SURE DOOR HOLDERS (5) INTO THE HOLE, AS SHOWN.
- INSTALL SHELF SUPPORTS (6) TO PANELS (C) & (D), MAKE SURE LEFT AND RIGHT HOLE AT THE SAME LINE, ATTACH SHELF PANELS (E) ON THE SHELF SUPPORT(6) AS SHOWN.



COMPLY WITH THIS CAUTION COULD RESULT IN PERSONAL INJURY AND/OR PROPERTY DAMAGE!

This unit is intended for use only with the products and maximum weights indicated. Use with other products or products heavier than the maximum weights indicated may result in instability causing possible injury. Furniture can tip over or break if improperly moved. Have a friend help to lift and carry the unit to

