 


**ASSEMBLY INSTRUCTIONS**

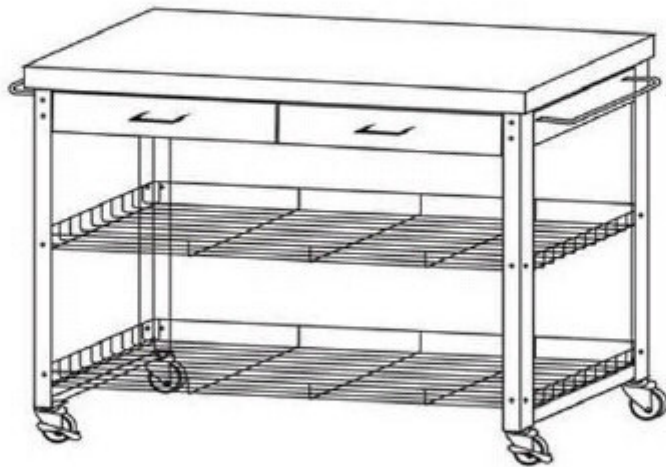




 



 






fourstargroup


















**MODEL:X1210101B**  
**SOLID WOOD TOP KITCHEN CART**

## PARTS LIST

|                              |  |
|------------------------------|--|
| A. WOOD TOP PANEL 1PC        |    |
| B. WOOD BOTTOM FRAME 1PC     |    |
| C. METAL SHELF 2PCS          |    |
| D. METAL LEG A 2PCS          |    |
| E. METAL LEG B 2PCS          |    |
| F. METAL CROSSBAR 2PCS       |    |
| G. WOOD BACK PANEL 1PC       |    |
| H. WOOD LEFT SIDE PANEL 1PC  |   |
| I. WOOD RIGHT SIDE PANEL 1PC |  |
| J. DRAWER FRONT PANEL 2PCS   |  |
| K. DRAWER REAR PANEL 2PCS    |  |
| L. DRAWER BOTTOM PANEL 2PCS  |  |
| M. DRAWER SIDE PANEL 4PCS    |  |
| N. WOOD CROSSBAR 2PCS        |  |

## HARDWARE LIST

|                                      |   |
|--------------------------------------|---|
| a. LARGE SCREW(dia. 5X30mm) 16PCS    |    |
| b. MEDIUM SCREW(dia. 5X25mm) 4PCS    |    |
| c. SMALL SCREW (dia. 3.5X25mm) 20PCS |    |
| d. HANDLE WITH SCREWS 2PCS           |    |
| e. SIDE HANDLE WITH SCREWS 2PCS      |    |
| f. PLASTIC CONNECTOR 8PCS            |    |
| g. SMALL NUT(dia. 6mm) 16PCS         |    |
| h. MACHINE SCREW(dia. 6x16mm) 16PCS  |    |
| i. LARGE NUT(dia. 8mm) 4PCS          |  |
| j. WASHER 4PCS                       |  |
| k. REAR WHEELS 2PCS                  |  |
| l. FRONT WHEELS(WITH BRAKE) 2PCS     |  |
| m. WOOD DOWEL(DRAWER STOPPER) 2PCS   |  |
| n. ALLEN WRENCH 1PC                  |  |
| o. HEXAGON WRENCH 1PC                |  |

## ASSEMBLY INSTRUCTIONS

 
**PLEASE READ THE FOLLOWING INSTRUCTIONS AND WARNING BEFORE ASSEMBLY OR USE:**

- MAKE SURE ALL PARTS LISTED HERE ARE INCLUDED. DO NOT USE IF YOU FIND ANY DAMAGED PARTS.
- ASSEMBLE THE PRODUCT ON A CLEAN, SMOOTH SURFACE SUCH AS A CARPET TO AVOID DAMAGING THE PRODUCT.
- DO NOT STAND OR SIT ON THIS PRODUCT TOP; DO NOT USE THIS PRODUCT AS A STEP LADDER !
- Inspect the product to be sure it is in proper working order and condition, and be sure all screws, bolts, knobs are firmly secured before use.
- Every month, check all screws and parts and tighten any that may have loosened.
- If any parts are missing, broken, damaged, immediately stop using this product until repairs are made.
- Replacement parts can be obtained by calling 1-800-639-3803.
- FAILURE TO FOLLOW THESE PRECAUTIONS AND/OR IMPROPER USE OF THIS PRODUCT COULD RESULT IN SERIOUS INJURY!

### KITCHEN CART ASSEMBLY

**STEP 1:**


Attach the two **WOOD CROSSBARS(N)** to the **WOOD TOP(A)** using the **SMALL SCREWS(c)**, as shown.

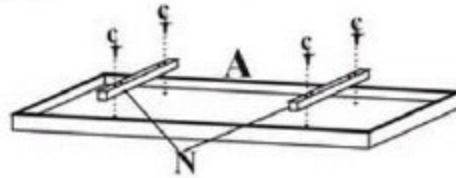

**Step 1**

**STEP 2:**

 
Attach the four **METAL LEGS (D,E)** to the assembled **WOOD TOP(A)** from **STEP 1** using four **MEDIUM SCREWS(b)**, as shown.

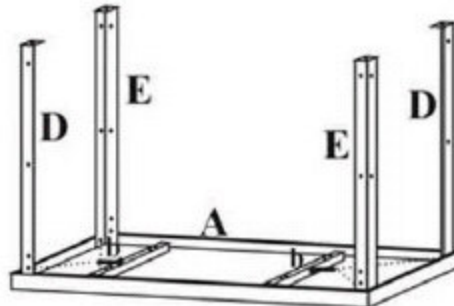

**Step 2**

**STEP 3**

 
Attach the **WOOD LEFT SIDE PANEL(H)**, **RIGHT SIDE PANEL(I)**, and the **BACK PANEL(G)** to the **WOOD BOTTOM FRAME PANEL(B)** using **LARGE SCREWS(a)**, as shown.

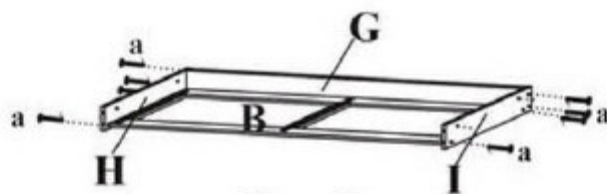

**Step 3**

**STEP 4**

 Attach the two metal **SIDE HANDLES(e)** to the **SIDE PANELS(H, I)** from **STEP 3** using **SCREWS(e)**, as shown.

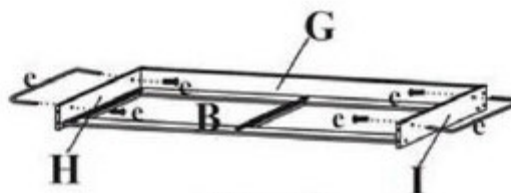


**Step 4**

**STEP 5**

Attach the assembled parts from STEP 4 to the parts from STEP 2 using eight **LARGE SCREWS(a)**, as shown.

 
Screw the two **FRONT WHEELS(I)** and the two **REAR WHEELS(K)** to the four **LEGS(D, E)** accordingly, as shown.

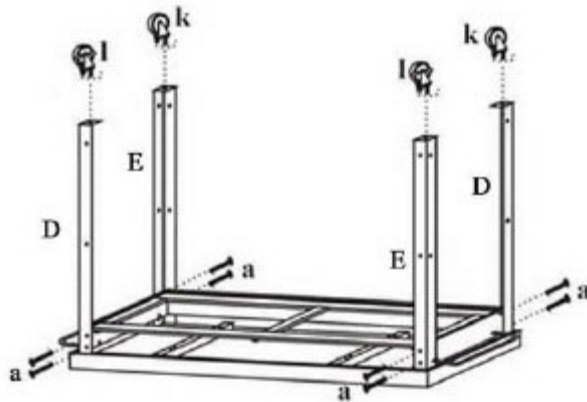

**Step 5**

**STEP 6**

 
Insert the **SMALL NUTS(g)** into the pre-drilled holes on the **PLASTIC CONNECTORS(f)**, then attach the **PLASTIC CONNECTORS(f)** to the two **METAL SHELVES(C)**, as shown.

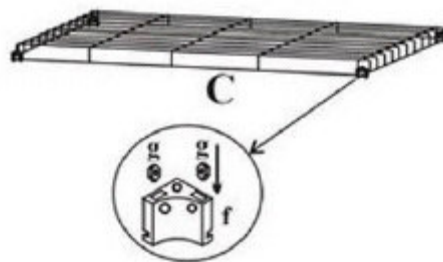

**Step 6**

**STEP 7**

 
Attach the two METAL SHELVES(C) from STEP 6 to the LEGS using MACHINE SCREWS(h), as shown.

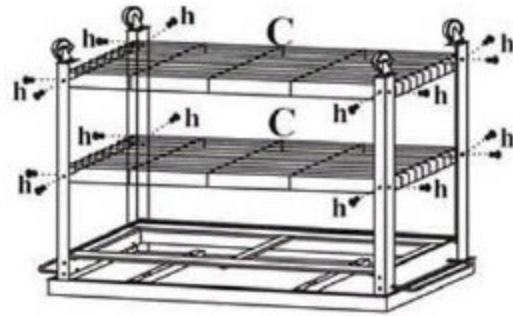

**Step 7**

**STEP 8**

 
Attach the two METAL CROSSBARS(F) to the legs using the LARGE NUTS(i) and the WASHERS(j), as shown.

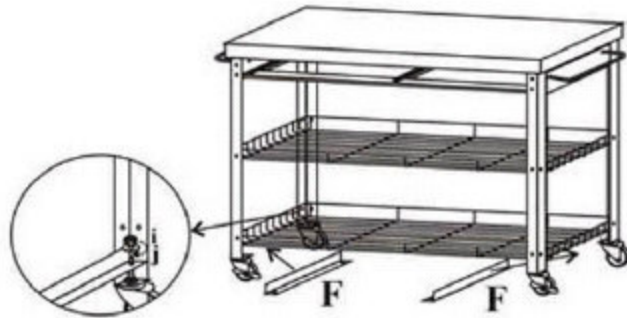

**Step 8**

### STEP 9

 Assemble the DRAWER FRONT PANEL(J) and two DRAWER SIDE PANELS(M) by using SMALL SCREWS(c), slide into the DRAWER BOTTOM PANEL(L), then attach the DRAWER REAR PANEL(K) by using SMALL SCREWS(c). Attach the metal DRAWER HANDLE(d) to the DRAWER FRONT PANEL(J) using SCREWS(d), as shown.

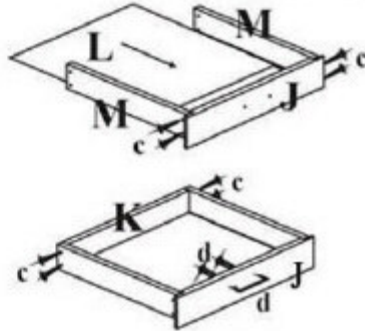


### Step 9

Repeat above to assemble the other drawer

### STEP 10

 Attach the two drawers from STEP 9 to the cart, then attach the two WOOD DOWELS(m) into the hole of each CROSSBAR(N) accordingly to prevent the drawers from being pulled all the way out, as shown.

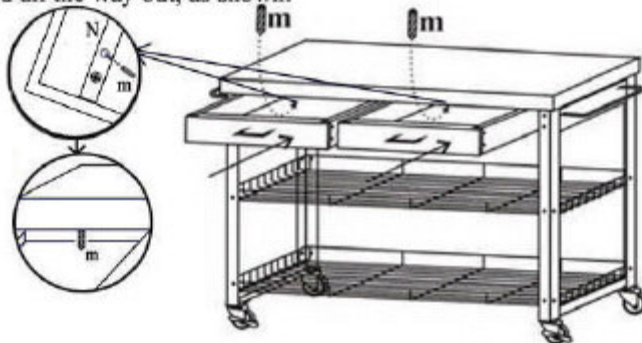

### Step 10

Do you have any questions? Missing small parts or hardware?  
If you need assistance with the assembly of your Kitchen Cart  
please e-mail our Customer Service  
Department at: [support@fourstar.com](mailto:support@fourstar.com)  
or call us at (508) 435-4830  
or (800) 639-3803

Please include the following information in your email:  
• Where item was purchased  
• Item, model, style or SKU number listed on instructions  
or box  
• Part number, description of the part and quantity needed

This information will help us get the proper part to you faster