

















fourstargroup



MODEL: 12504043

KID'S POOL GAZEBO

PARTS LIST AND HARDWARE

NO	HARDWARE LIST	QTY
1	TUBE 1 	8 PCS
2	TUBE 2 	8 PCS
3	TUBE 3 	4 PCS
4	TUBE 4 	4 PCS
5	TUBE 5 	4 PCS
6	TUBE 6 	4 PCS
7	TUBE 7 	4 PCS
A	FOOT CAP 	8 PCS
B	3 WAY CONNECTOR 	4 PCS
C	4 WAY BASE CONNECTOR 	4 PCS
D	4 WAY UPPER CONNECTOR 	4 PCS
E	ROOF CONNECTOR 	1 PC
F	PVC POOL 	1 PC
G	PE CANOPY 	1 PC

ASSEMBLY INSTRUCTIONS

PRECAUTIONS:

1. CHECK ALL PARTS AND HARDWARE LISTED ON THE PARTS LIST. LAY THEM ON A CLEAR AND LEVEL SURFACE PRIOR TO ASSEMBLY.
2. IT IS RECOMMENDED TO HAVE 2 PEOPLE FOR ASSEMBLY.

STEP 1

CONNECT ALL THE 8 PCS OF TUBE 1 TO FOOT CAP (A) AS WELL AS 3 WAY CONNECTOR (B) AND 4 WAY CONNECTOR (C). SPREAD OUT PVC POOL (F). MAKE TUBE 2 THROUGH THE SEWING EDGE ON THE PVC POOL (F) AND CONNECT THEM TO THE 3 WAY CONNECTOR (B) AND 4 WAY CONNECTOR (C). REFER TO FIG 1 TO FINISH THE ASSEMBLY OF THE POOL BASE.



FIG. 1

STEP 2

CONNECT THE REST TUBES AS THE FIGURE BELOW SHOWS TO FINISH THE MAIN FRAME OF THE ITEM.

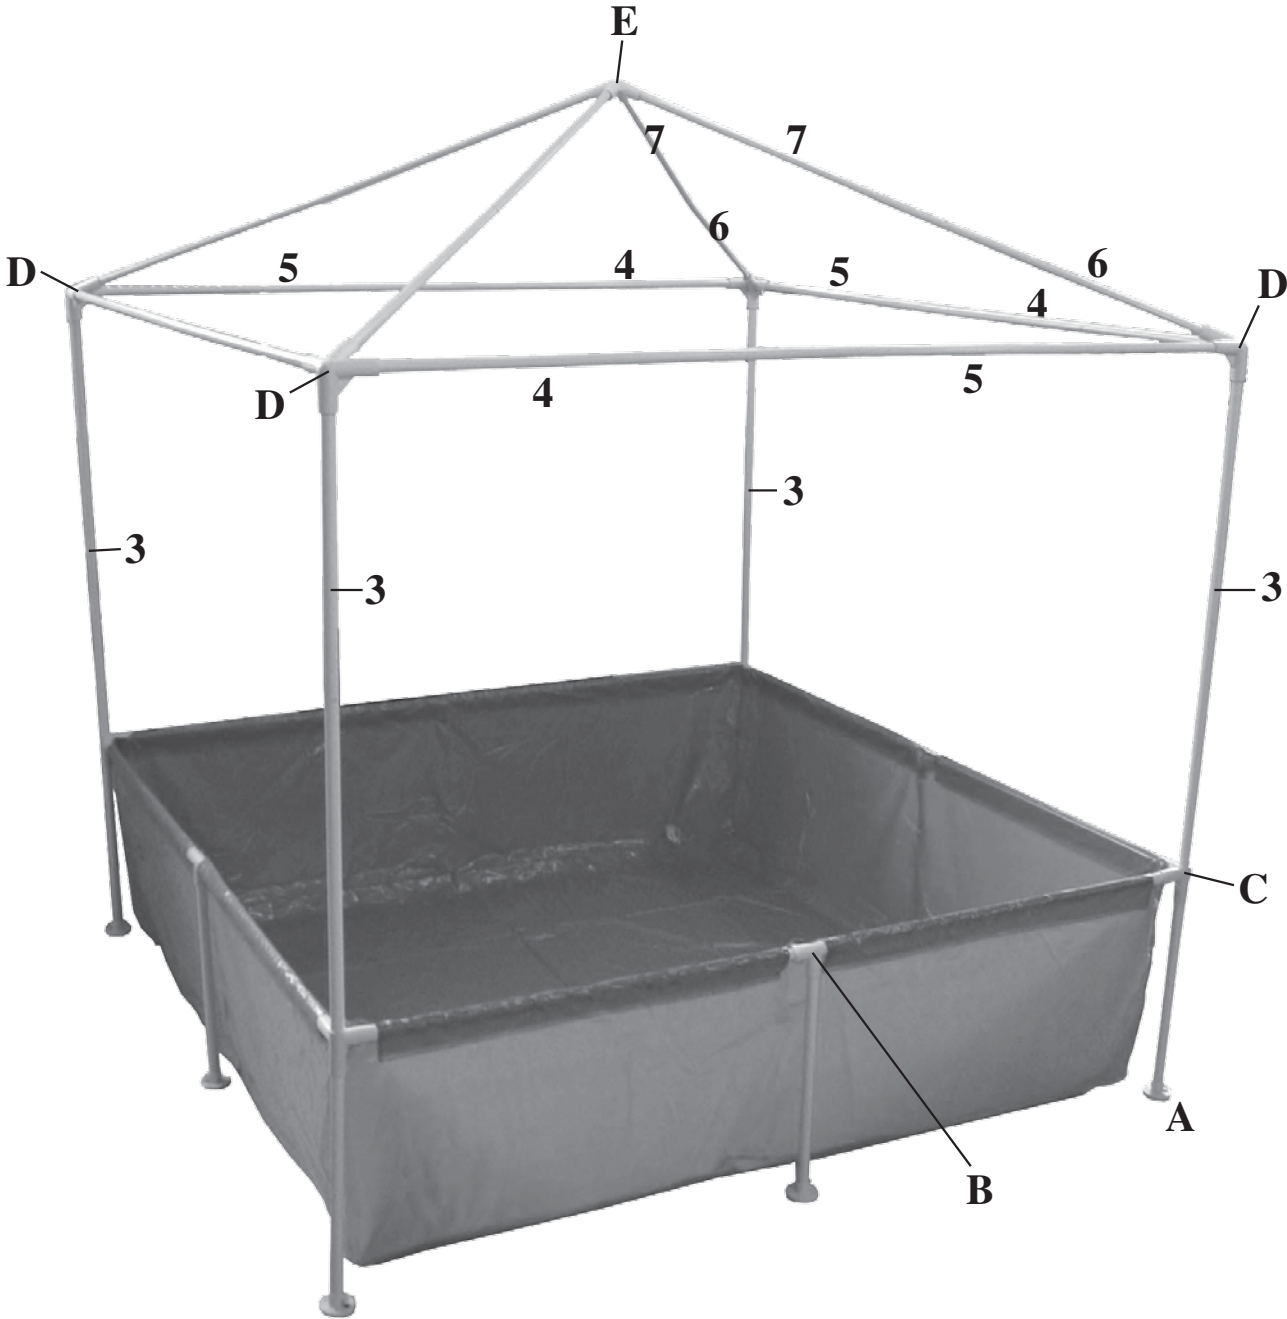


FIG. 2

STEP 3

COVER THE PE CANOPY (G). FASTEN THE HOOK ON THE PE CANOPY TO THE FOOT CAP, AND FIX THE PE CANOPY TO THE POLE AS FIG 3.

NOW THE ASSEMBLY OF THIS ITEM IS FINISHED.



FIG. 3

 **WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.**

This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

Children should be supervised to play in or near this item in any cases. Make sure the item is completely finished its assembly before using.

Do you have any questions? Missing small parts or hardware?
If you need assistance with the assembly of your KID'S POOL
GAZEBO please e-mail our Customer Service Department at:
support@fourstari.com
or call us at **(508) 435-4830**
or (800) 639-3803

Please include the following information in your email:

- Where item was purchased
- Item, model, style or SKU number listed on instructions or box
- Part number, description of the part and quantity needed

This information will help us get the proper part to you faster