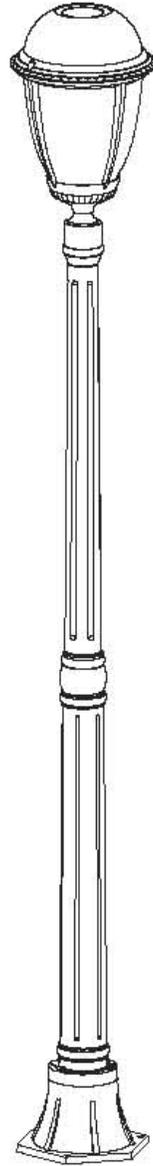




fourstargroup

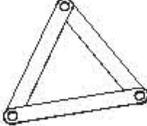
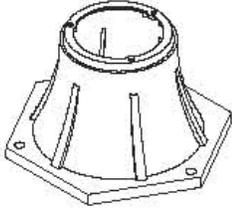
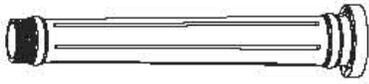
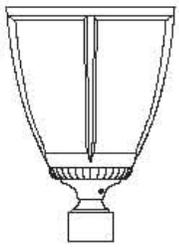
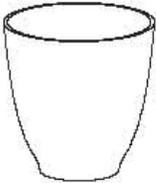
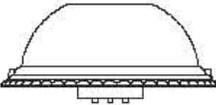
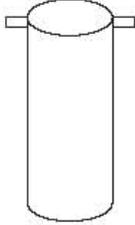


**MODEL:12217083  
CRANFORD 65 IN.  
SOLAR POST LANTERN**

**⚠ CAUTION:** TO AVOID BATTERY LEAKAGE

- Be sure to insert the batteries correctly and always follow the battery Manufacturers' instructions;
- Do not mix old and new batteries or alkaline, standard(carbon-zinc) or rechargeable (nickel-cadmium) batteries;
- Always remove weak or dead batteries from the product.

# PARTS LIST

<p><b>A."J"BOLTS(4-3/4"L × 1-1/2"W)-3PCS</b></p> 	<p><b>B.MOUNTING PLATE -1PC</b></p> 	<p><b>C.BASE-1PC</b></p> 
<p><b>D.LOWER STEM-1PC</b></p> 	<p><b>E.UPPER STEM-1PC</b></p> 	<p><b>F.LAMPSHADE HEAD SET -FRAME-1PC</b></p> 
<p><b>F.LAMPSHADE HEAD SET -GLASS-1PC</b></p> 	<p><b>G.TOP LAMPSHADE COVER-1PC</b></p> 	<p><b>H.BOLTS-2PCS</b></p> 
<p><b>I.SPRING WASHERS -3PCS</b></p> 	<p><b>J.J-BOLT NUTS-3PCS</b></p> 	<p><b>K.DIFFUSER-1PC</b></p> 
<p><b>L.BOLTS-3PCS</b></p> 		

# ASSEMBLY INSTRUCTIONS

- 1.CAREFULLY REMOVE ALL PARTS FROM THE CARTON AND PLACE THEM ON A SMOOTH,STABLE SURFACE.**
- 2.UNTIGHTEN THE TOP LAMPSHADE COVER(G) THEN TURN THE SWITH TO "ON"AS fig.4, FIX THE DIFFUSER(K) TO THE TOP LAMPSHADE COVER(G).**
- 3.FIX THE TOP LAMPSHADE COVER(G) TO THE LAMPSHADE HEAD SET(F) WITH THE BOLTS(H).**
- 4.ATTACH THE UPPER STEM(E) INTO THE LAMPSHADE HEAD SET(F) BY TURNING CLOCKWISE UNTIL TIGHT.**
- 5.ATTACH THE LOWER STEM(D) INTO THE UPPER STEM(E) BY TURNING CLOCKWISE UNTIL TIGHT.**
- 6.ATTACH THE BASE(C) INTO THE LOWER STEM(D) BY FIXING THREE PIECES OF BOLTS(L).**

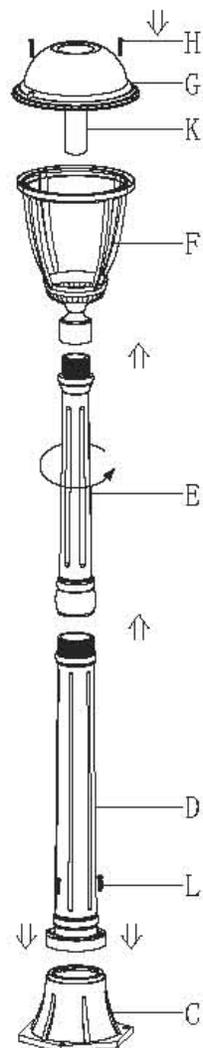


fig.1

# INSTALLATION INSTRUCTIONS

- 1.POST LANTERN SHOULD BE SECURELY MOUNTED TO A SOLID SURFACE(DECK OR CONCRETE PATIO) OR MOUNTED ON A CEMENT BASE WHEN INTENDED FOR USE AS A REPLACEMENT FOR A POST LANTERN.**

**NOTE:SUFFICIENT CONCRETE SHOULD BE USED TO PROVIDE AN ADEQUATE AND STABLE BASE FOR THE LANTERN.**

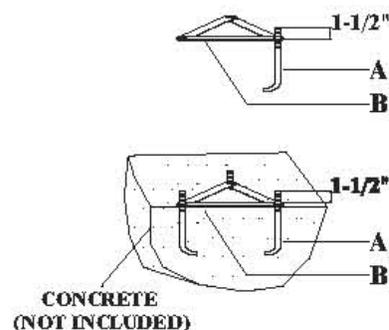
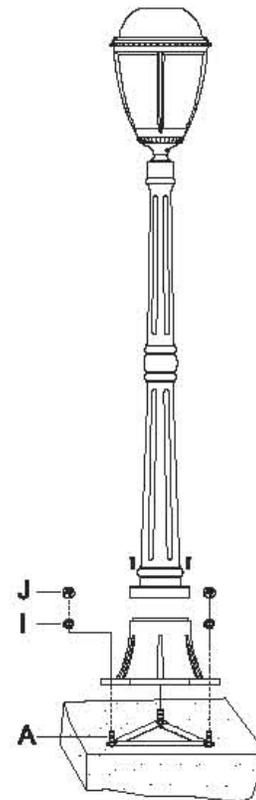


fig.2

**2.POSITION THE ASSEMBLED POST LANTERN ONTO THE "J" BOLTS (A) AND TIGHTEN THE ASSEMBLED POST LANTERN AND THE "J" BOLTS (A) WITH SPRING WASHERS (I) AND J-BOLT NUTS(J).**



**fig.3**

**TO REPLACE THE BATTERY:**

1.USE A PHILLIPS HEAD SCREWDRIVER TO REMOVE 2 BOLTS(H) FROM THE TOP LAMPSHADE COVER(G).

2.UNCOVER THE DOOR OF THE BATTERY BOX BY USING A SCREWDRIVER TO REMOVE THE SCREW.


3.REMOVE THE OLD BATTERY AND REPLACE THEM WITH NEW NI-CAD AA BATTERY.

**NOTES:USE NI-CAD RECHARGEABLE BATTERY ONLY.**

4.REPLACE THE DOOR OF THE BATTERY BOX AND RETIGHTEN SCREWS.

5.SLIDE THE POWER SWITCH TO THE ON POSITION,IF DESIRED.

6.REPLACE THE TOP LAMPSHADE COVER(G) TO THE LAMPSHADE HEAD SET(F)AND TIGHT THEM WITH THE BOLTS(H).

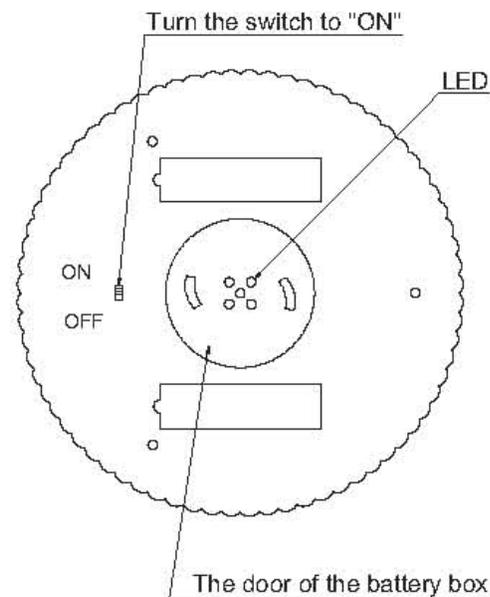

**fig.4**

Do you have any questions? Missing small parts or hardware?  
If you need assistance with the assembly of your CRANFORD  
65 IN.SOLAR POST LANTERN  
please e-mail our Customer Service Department at:  
[support@fourstari.com](mailto:support@fourstari.com)  
or call us at (508) 435-4830  
or (800)639-3803

Please include the following information in your email:

\*Where item was purchased

\*Item,model,style or SKU number listed on instructions  
or box

\*Part number,description of the part and quantity needed

This information will help us get the proper part to you faster