
fourstargroup

MODEL: 11222722CB **6 DRAWER ORGANIZER** 

Total maximum weight limits 28 Lbs. Inculde:

Small bins 4 Lbs x 2 = 8 Lbs

Big bins 5 Lbs x 4 = 20 Lbs

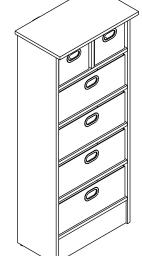

BEFORE YOU BEGIN, PLEASE READ ASSEMBLY INSTRUCTIONS CAREFULLY. FOLLOW THEM STEP BY STEP.

- 1. ADULT SUPERVISION IS REQUIRED DUE TO SMALL PARTS. CARE SHOULD BE TAKEN IN THE UNPACKING AND ASSEMBLY OF THE PRODUCT.
- 2. ASSEMBLE ON SOFT SURFACES TO PREVENT DAMAGE TO THE PRODUCT FINISH.
- 3. MAKE SURE ALL PARTS ARE INCLUDED BEFORE ASSEMBLY.
- 4. NOT FOR USE ON HIGH PILE CARPETING.
- 5. PLACE DESK ON FLAT LEVEL SURFACE. ASSEMBLY TOOLS REQUIRED

SCREWDRIVER


HAMMER



-mail our Customer Service Department at: **Support@fourstari.com or** call us at (800) 639-3803 if calling locally from Ma ns or box • Part number, description of the part and quantity nee

## PARTS AND HARDWARE LIST

NO	PARTS LIST		QTY	NO	HARDWARE LIST		QTY
A	TOP PANEL		1 PC	1	PLASTIC DOWEL	0	28 PCS
В	LEFT SIDE PANEL	[:::::/	1 PC	2	SCREW	<b>(1)</b>	4 PCS
С	RIGHT SIDE PANEL	[:::::/	1 PC	3	L-BRACKET		2 PCS
D	CENTER PANEL		1 PC	4	POWER PIN	0-	18 PCS
E	1 <sup>ST</sup> SHELF PANEL		1 PC	5	NON-WOVEN BIN(BIG)		4 PCS
F	3 <sup>RD</sup> SHELF PANEL		1 PC	6	NON-WOVEN BIN(SMALL)	<b>®</b>	2 PCS
G	2 <sup>ND</sup> & 4 <sup>TH</sup> SHELF PANEL		2 PCS	7	NAIL LEG	0)—	4 PCS
Н	BOTTOM PANEL		1 PC	8	CAM-LOCK NUT		6 PCS
I	SKIRT PANEL		1 PC	9	CAM-LOCK SCREW		6 PCS
J	SIDE BACK PANEL		2 PCS	10	COVER STICKER		6 PCS
K	CENTER BACK PANEL		1 PC				

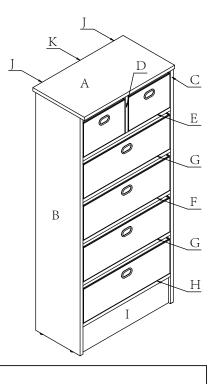


**ASSEMBLY INSTRUCTIONS** 


INSTALL DOWEL (1) INTO PANEL (B) & (C), AS SHOWN. INSERT CAM-LOCK NUT (8) INTO THE PRE-DRILLED HOLES ON PANEL (B) & (C).

INSERT AND SECURE CAM-LOCK SCREW (9) INTO THE PRE-DRILLED HOLES ON (A) (B) & (C).


INSTALL NAIL LEG (7) WITH HAMMER.

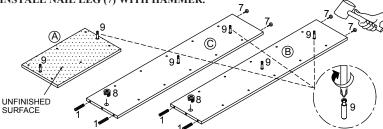


ATTACH PANEL (F) TO PANEL (B). TIGHTEN CAM-LOCK NUT (8) USING SCREWDRIVER.

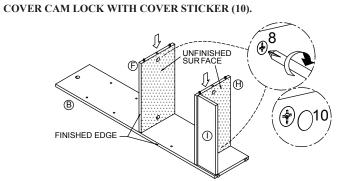


INSTALL DOWEL (1) INTO PANEL (D) (E) (F) (G) (H), AS SHOWN. INSERT CAM-LOCK NUT (8) INTO THE PRE-DRILLED HOLES ON

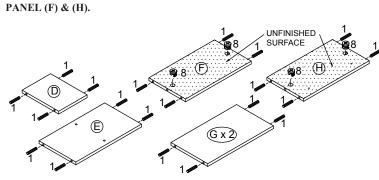


ATTACH PANEL (E) & (G) TO PANEL (B).

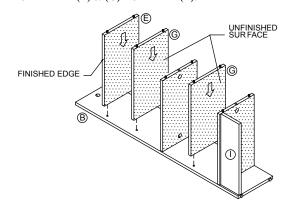


STEP 3 **TIGHTEN BRACKET (3) TO** PANEL (I) WITH SCREW (2).

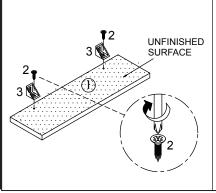


STEP 4 REINFORCE PANEL (I) TO PANEL (H) WITH SCREW (2).

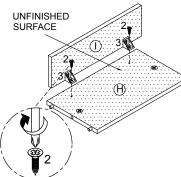


ATTACH PANEL (C) TO ASSEMBLED UNIT. TIGHTEN CAM-LOCK NUT (8) USING SCREWDRIVER. COVER CAM LOCK WITH COVER STICKER (10).

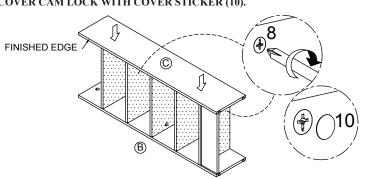

STEP 8 ATTACH PANEL (D) TO ASSEMBLED UNIT.

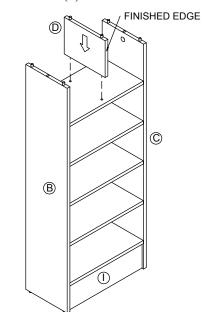


ATTACH PANEL (A) TO ASSEMBLED UNIT. TIGHTEN CAM-LOCK NUT (8) USING SHORT SCREWDRIVER. COVER CAM LOCK WITH COVER STICKER (10).

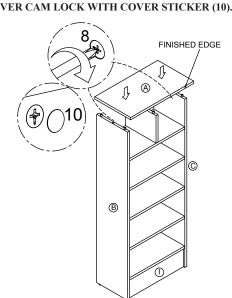

POSITION OF STORAGE WITH POWER PIN (4).

ATTACH PANEL (J) & (K) TO THE BACK

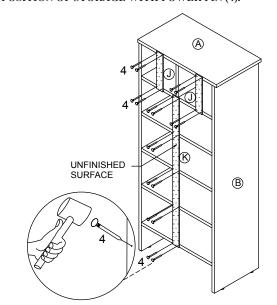

UNFOLD THE BIN (5) & (6) AND SLIDE INTO THE STORAGE.

